
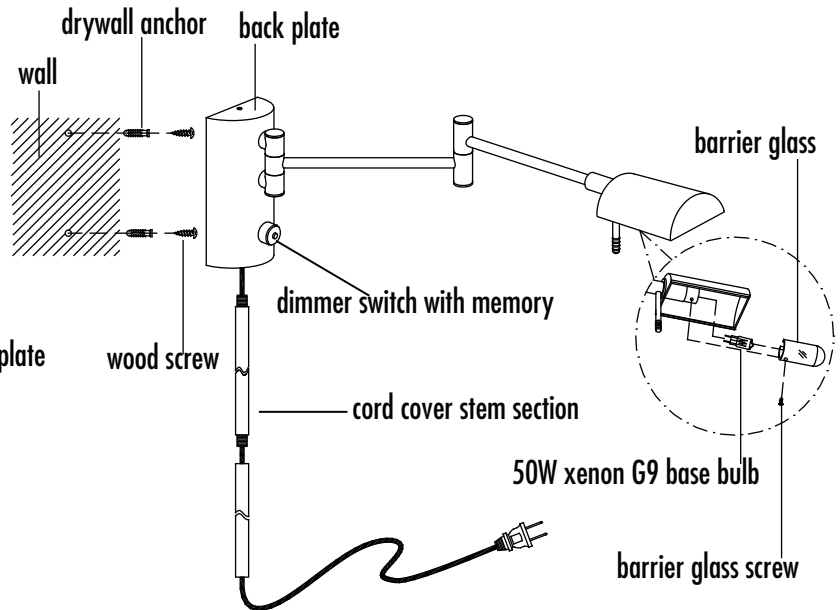


Important: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance.

This light should be installed by a licensed electrician

Assembly & Installation Instructions

1. Screw wood screws into the wall. Use drywall anchors as necessary (included).
2. Install 50W xenon G9 base bulb (included).
3. Install glass barrier on socket cup, and tighten with glass barrier screw.
4. Screw together cord cover stem sections and screw to backplate.
5. Hang the sconce by lining up the keyhole slots on the mounting plate with the wood screws in the wall.
6. Plug in cord and dimmer switch with memory on the back plate.

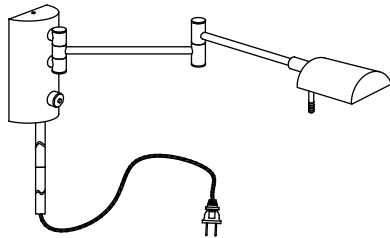

This light should be installed by a licensed electrician

1. Shut off power of outlet box (Fig A).
2. Unscrew the electrical box screws and pull the wire out from the fixture (fig B).
Make appropriate electrical connections using wire nuts:
a. Connect the fixture's electrical box live wire (black) to the live outlet box wire (fig C).
b. Connect the fixture's electrical box neutral wire (white) to the neutral outlet box wire (fig C).
c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
d. Carefully place connections in outlet box.
3. Install 50W xenon bulb G9 base (included).
4. Install glass barrier on socket cup, and tighten with glass barrier screw.
5. Place mounting plate over outlet box and secure with outlet box screws.
Attach back plate over mounting plate and tighten with back plate screws.
6. Screw the metal cap to the bottom of the backplate.
7. Restore power to fixture.

