


Important: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance.

This light should be installed by a licensed electrician

Assembly & Installation Instructions

1. Shut off power to outlet box (Fig A).
 2. Make appropriate electrical connections using wire nuts:
 - a. Connect the fixture's hot wire (black) to the black outlet box wire.
 - b. Connect the fixture's neutral wire (white) to the white outlet box wire.
 - c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
 - d. Carefully place connections in outlet box.
 3. Place mounting plate over outlet box and secure it with outlet box screws.
 4. Attach backplate over mounting plate and tighten with back plate screws.
 5. Install medium base bulb (included Vintage Carbon Filament Bulb is optional)
 6. Attach side and front glass and the clear plastic washers to threaded stems and tighten with metal caps.
- During installing the glass, make sure to have the dichroic coated side facing into the fixture. This side is indicated by the blue dot on the packing. This will help to protect the finish on the glass.
7. Restore power to fixture.

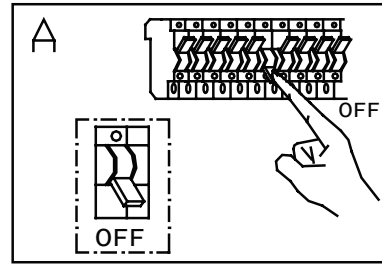

IMPORTANT CARE & MAINTENANCE OF DICHROIC GLASS PANELS

The multi layered Dichroic coating on each glass panel is fragile and requires special handling and care. It is essential to avoid direct contact with any substance or surface that would scratch, mark or leave a residue. Avoid handling without a soft cloth or cotton glove and use only the following recommended methods of care and cleaning:

Dust or clean only with a soft microfiber lens polishing cloth or the Kimberly Clark Wipe enclosed (KIMTECH PURE*W5 Wipers) and denatured alcohol.

