
### **Step 1** Attaching the Wall Mounts

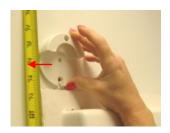

DO NOT USE THE CENTER HOLE FOR SCREWS

#### **Wall Mounts**

Center the Wall Mount over the tub's edge with the closed end toward the ceiling. Place the center of the Wall Mount at desired height (approx. 73 to 75 inches from the floor.)

Please see \*Note (in the middle of this page)



#### **Drilling Screw Holes**

Mark the top and bottom holes with a pencil. Carefully drill the two holes using a ¼" drill bit. Tap in the Red Anchors, then screw the Wall Mounts to the wall.

<u>Note:</u> To drill into tile, you MUST use a **ceramic drill bit**. Be sure to follow the drill bit manufacturer's instructions.

## **Step 2** Snapping the Rod in Place



#### Snap in Rod

Once the Wall Mounts are in position, take the preassembled Rotator Rod out of the box, remove the plastic on one end and slide the Cap and Ball out of the way.

Snap the Pivot Cam (circular disk) into place by firmly sliding it's center point up the groove on the Wall Mount until it 'clicks' into place. Be sure the arrow on the Pivot Cam points down while snapping into place. Repeat on the other side.

*EASY TIP* The ends of the rod slide in and out of the rod on either side so you can adjust the length of the Rotator Rod to fit your bathroom walls.

## \* PLEASE NOTE

The standard length of a Shower Curtain is 72 inches.

Where the bottom of your shower curtain falls will be determined by the height you install the wall mounts. Too low and the curtain may hit the floor, too high and the curtain may seem short once hung.

The average mounting height is between 73 and 75 inches from the floor.

## **Step 3** Securing the Ball and Cap



#### **Rotator Balls**

Slide each Rotator Ball to the end of the rod so that the arrow on the Cam points to the clear nylon set screw in the Ball. That is, toward the **inside curve** of the rod. The Pin Grooves (in the Ball) will slide over the Rod Pins. Tighten the clear nylon Set Screw in the top of the Ball using a small flat-head screwdriver



#### <u>Caps</u>

Finally, slide each Cap over its end of the rod against the wall and twist until it locks into the Wall Mount.



Hang the Rod Reacher and you're done!

#### **Rod Reacher**

The enclosed Rod Reacher provides an easy reach for smooth rod rotation. It can also be used to open or close the shower curtain. Attach it by lifting it up to the shower rod and placing the rod between the open space of the hooks. Simply twist the Rod Reacher and let it hang securely from shower rod. It is now ready to use.

# **Kit Components**



2 Wall Mounts



- 2 Caps
- 2 Rotator Balls
- 4 Pins
- 2 Cam Pivots



1 Rod Reacher



- 4 Anchors (red)
- 4 Screws

## **Tools Required**

Pencil
Tape measure
Small flat-head screw driver
Phillips-head screw driver
Drill with 1/4" bit (recommend
Ceramic or Masonry bit if drilling into tile)

## **Taking the Rod Down**



EASY TIP to take the rod down insert a regular screw driver between the Wall Mount and the Cam Pivot. Simply twist the screwdriver away from the Wall Mount

When done properly the Cam Pivot will pop e easily out of the Wall Mount.



Discover Comfort **and** Space... Your Way. *Either Way*.

# RotatorRod.com For Support call (941)706-2272



To protect our environment, The shipping box for The Original Rotator Rod™ has been designed to use as little packing material as possible.





The only Curved Shower Rod that rotates

When the rod is **curved OUT** your shower space is expanded and gives you more room. When it is rotated so that the curve is **IN** your bathroom feels more spacious.

As an added benefit, when the rod is curved over the tub, your wet towels and swim suits drip into the tub and not on your floor.

Rotator Rod $^{\text{TM}}$  trademark of Hot Rods for Baths, LLC US and International Patents Pending