Reed™ Technical Specification

Robe Hook

DN1003


Stock Numbers:

 DN1003CH – Robe Hook Chrome Finish

Materials:

Robe Hook is constructed of zinc.

Dimensions:

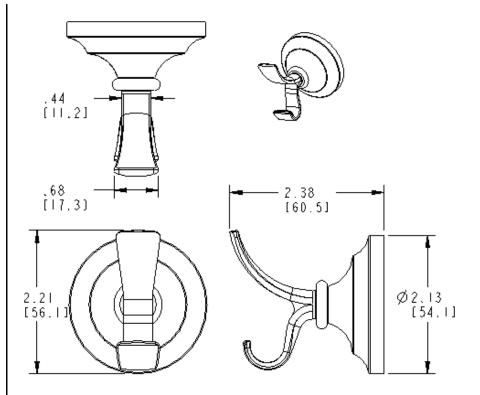

Installation Instructions:

- 1. Place metal bracket at desired position on the wall, large slots to be top and bottom and small holes to be right and left.
- One at a time, place each anchor screw through the bracket, centered in the large hole. Using a Phillips screwdriver, turn the anchor screw while applying pressure. Screw will self drill and tap into drywall.
- 3. Do not over tighten.
- 4. Place the post with the setscrew down, over mounting bracket. Tighten the setscrew at the bottom of the base.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Robe Hook
By Creative Specialties	



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM