


# 12-Drawer Storage Cart

## Assembly Instructions

For model SC12MCDW

**Tools Required:** Hex wrench (included)

**Parts Included:**

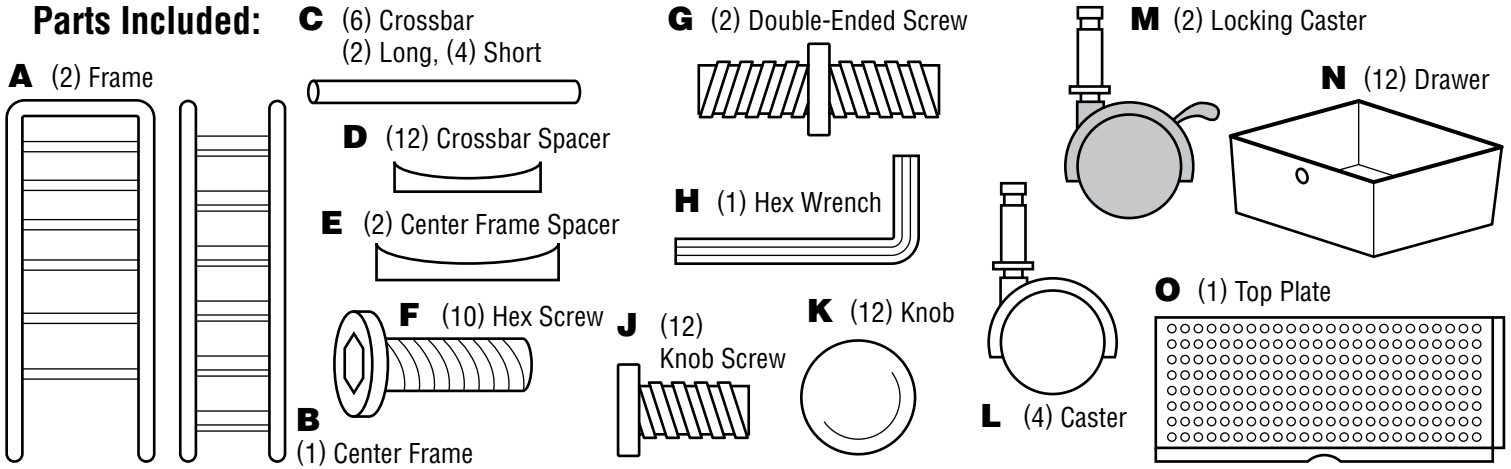

**To Assemble:**

**1** Attach two long crossbars to top of frame (A) and two short crossbars (C) to bottom of frame using four crossbar spacers (D) and four hex screws (F). Make sure crossbars are attached to the side of frame with drawer rails. Make sure curved side of spacers face the frame. Do not tighten screws fully.

Attach center frame (B) to middle of long crossbars (C) using two center frame spacers (E) and two hex screws. Make sure curved side of spacers face the crossbar.

Screw one end of double-ended screw (G) completely into short crossbar. Attach center frame to double-ended screws using four crossbar spacers.

Attach two short crossbars to double-ended screws.

Attach remaining frame to four crossbars using four crossbar spacers and four hex screws. Make sure drawer rails face in. Fully tighten all hex screws.

**2** Snap locking casters (M) into front corners of frame. Snap non-locking casters (L) into remaining four frame legs.

**3** Attach 12 knobs (K) to 12 drawers (N) with 12 knob screws (J). Insert drawers into rails.

**4** Snap on top plate (O).

