




# Metal Print Rack Assembly Instructions


For model  
MPR10

**Tools Required:** Wrench (included)


## Parts Included:

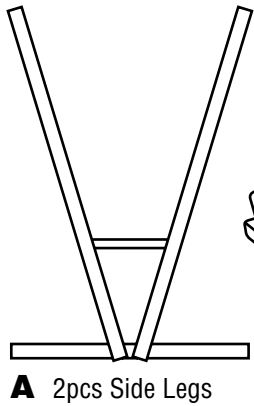


**A** 2pcs Side Legs

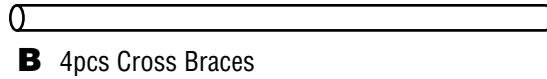


**B** 4pcs Cross Braces

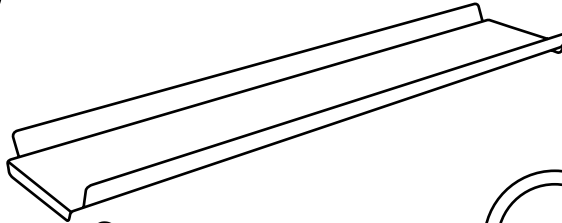


**C** 1pc Bottom Tray

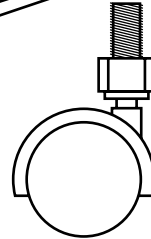


**D** 4pcs Casters

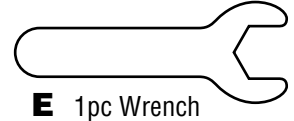


**E** 1pc Wrench

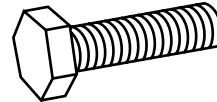

**F** 8pcs Bolts

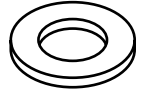


**G** 16pcs Washers

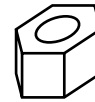

**H** 4pcs Nut  
(attached to  
caster bolt)

## To Assemble:


**1** Attach four Cross Braces (**B**) to two Side Legs (**A**) using eight Bolts (**F**) and 16 Washers (**G**) as shown in *Figure 1*. Horizontal caster mount should be positioned toward the outside of the rack. Tighten bolts using supplied Wrench (**E**).

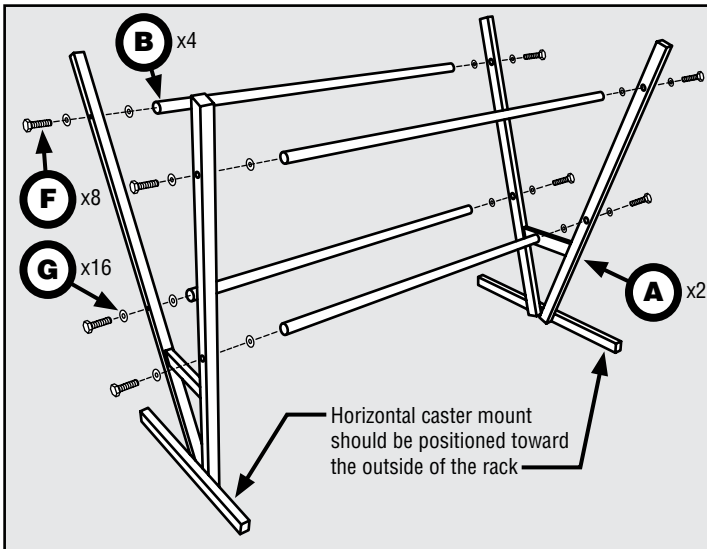

*Figure 1*


**2** Thread four Casters (**D**) into underside of Side Legs as shown in *Figure 2*.

**Note:** Caster height can be adjusted to level the rack on uneven surfaces. Adjust the caster height as needed by screwing the caster in or out, and then tighten the Nut (**H**) against the Side Leg using supplied wrench (**E**).

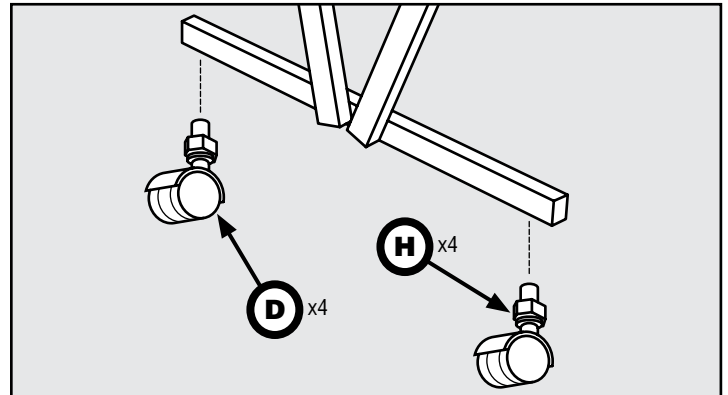

*Figure 2*

**3** Lay Bottom Tray (**C**) onto leg crosspieces as shown in *Figure 3*.

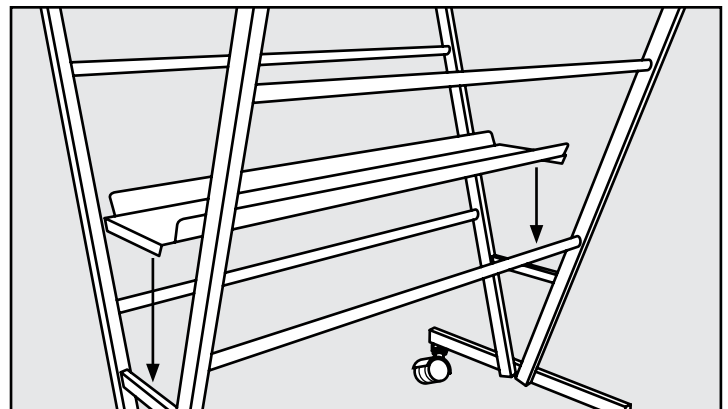

*Figure 3*