


Model 455 Upholstered Executive Reception/Guest Chair

Parts Listing

A
Chair Back
1 Unit

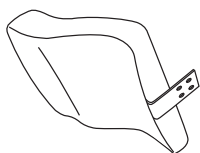

B
Chair Seat
1 Unit



C
Chair Base
1 Unit



D
Seat Mechanism
1 Unit



E
Plastic Arm Cap
4 Units



F
Washer
4 Units




G
8x25mm Screw
4 Units





H
Pin Screws
2 Units



I
8x30mm Screw
4 Units



J
8x55mm Screw
4 Units

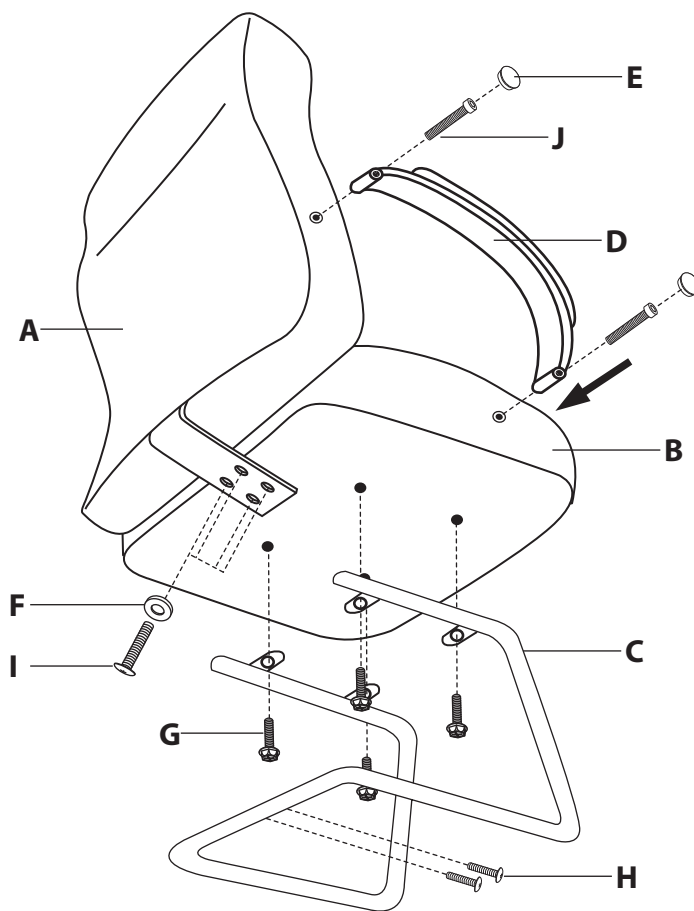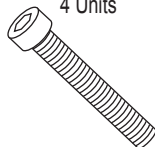

WEIGHT CAPACITY: 250 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

Assembly Instructions



Tools Needed: Phillips Head Screwdriver
Please read all instructions before assembly.

- Step 1:** Insert the right side of steel sled base into the open end of the left side of the steel sled base. Align holes and secure with Pin Screws (H).
- Step 2:** Attach the Chair Back (A) to the Chair Seat (B) by inserting 8x30mm Screws (I) through the Washers (F) and into the holes in the Chair Seat (B).
- Step 3:** Attach the assembled body of Chair Seat (B) and Chair Back (A) to the Chair Base (C) using 8x25mm Screws (G).
- Step 6:** Attach the Arms (D) to the assembled chair by inserting 8x55mm Screw (J) through the holes in the Arms (D) and into the sides of the Seat (B) and Back (A).
- Step 7:** Cover screw holes in the sides of the Arms (D) with the Plastic Arm Caps (E).

ofm_U
Furniture For The Real Office™

161 Tradition Trail Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919-303-6389 (voice) www.ofminc.com
support@ofminc.com