


Model 516-LX / 517-LX Stimulus Executive Leatherette Chair

Parts Listing

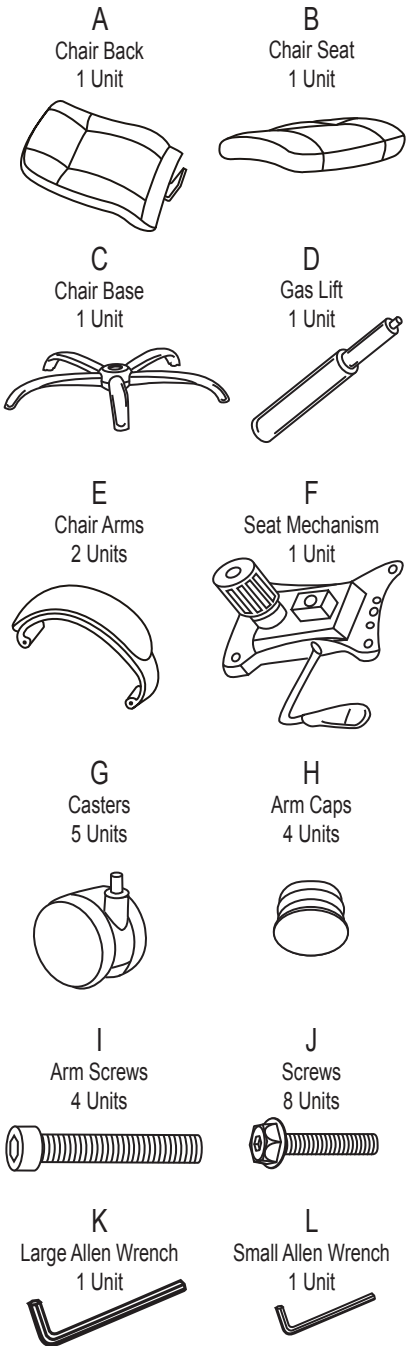


Assembly Instructions



Tools Needed: Phillips Head Screwdriver
Please read all instructions before assembly.

- Step 1:** Insert Casters (G) into Chair Base (C). Insert Gas Lift (D) into Chair Base (C).
- Step 2:** Attach Seat Mechanism (F) to the Chair Seat (B) with 4 Screws (J), using the Small Allen Wrench (L) that is provided.
- Step 3:** Attach mounting plate on Chair Back (A) to Seat Mechanism (F) and Chair Seat (B) with 4 Screws (J), using Small Allen Wrench (L) that is provided.
- Step 4:** Attach Chair Arms (E) to Chair Back (A) and Chair Seat (B) using Arm Screws (I) and Large Allen Wrench (K). Cover screw holes with Arm Caps (H).
- Step 5:** Take entire chair frame and place Seat Mechanism (F) onto Gas Lift (D), and press down firmly to secure.

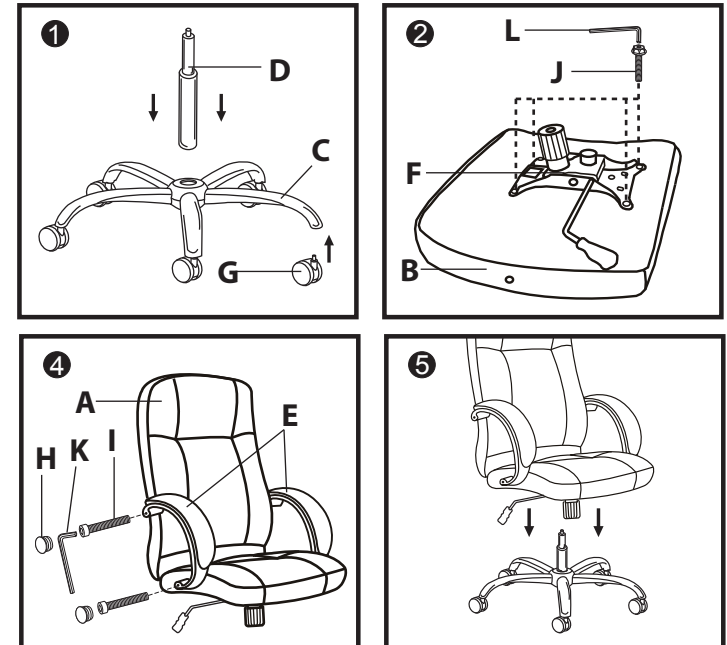

WEIGHT CAPACITY: 250 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

ofm
Furniture For The Real Office™

161 Tradition Trail Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919- 303-6389 (voice) www.ofminc.com
support@ofminc.com