


MAR-B Mesh Arbor Instruction Sheet

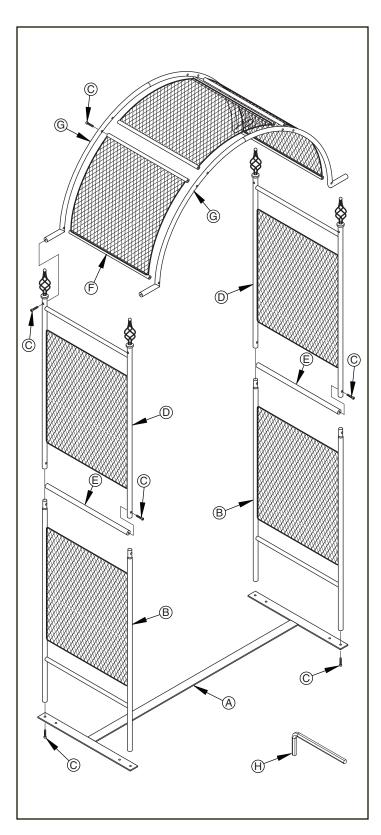

* Parts included:

A. 1 Bottom Support

B. 2 Lower Side Panel

C. 24 Screw

E. 2 Connect Bar

F. 3 Top Mesh Panel

G. 2 Curved Support

D. 2 Upper Side Panel H. 1 Wrench

* Please check enclosed parts shipped with the Arbor. If any parts are missing, do not return the item to the retailer. Please contact us first for replacement parts. Please e-mail (for quickest response) consumercare@woodstream.com or call 1-800-323-5800

Assembly Instructions

- Assemble BOTTOM SUPPORT (A) to LOWER SIDE PANELS (B) using SCREWS (C) tighten with WRENCH (H).
- 2. Slide UPPER SIDE PANELS (D) onto LOWER SIDE PANELS (B).
- 3. Assemble CONNECT BARS (E) in between UPPER SIDE PANELS (D) using SCREWS (C) tighten with WRENCH (H).
- 4. Attach CURVED SUPPORTS (G) to UPPER SIDE PANELS (D) using SCREWS (C) tighten with WRENCH (H).
- 5. Attach TOP MESH PANELS (F) in between CURVED SUPPORTS (G) using SCREWS (C) tighten with WRENCH (H).

Copyright © 2011, CobraCo® Mfg., Inc. Woodstream® Corporation 69 North Locust Street • Lititz PA 17543-1714

Phone: 1-800-323-5800

Website: <u>www.avantgardendecor.com</u> E-mail: <u>consumercare@woodstream.com</u>