
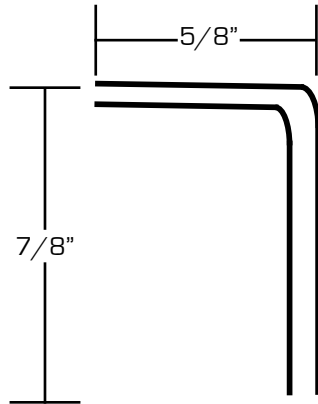

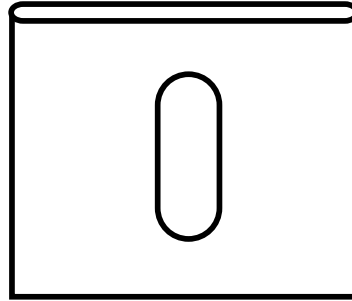



TACTICS PLUS LEVEL 'O' MOUNTING INSTRUCTIONS

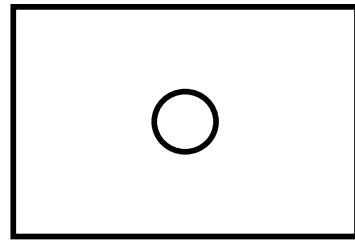

bracket - side view

THE WALL MOUNTED BOARDS (LEVEL 'O') MUST BE MOUNTED TO THE WALL SURFACE PRIOR TO MOUNTING THE TRACK.

- 1** Locate and mount the upper angle brackets to the wall surface, matching the pre-drilled hole spacing on the writing surface frame. The top elevation of the writing surface is normally at 78" above finished floor.
- 2** Locate and mount the lower angle brackets to the wall surface to match the pre-drilled hole spacing on the lower writing surface frame.
- 3** Mount the track directly above the wall mounted writing surface. See the *Tactics Plus Track Mounting Instructions* for more information.

NOTE: THESE INSTRUCTIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

