


GLASS OR LAMINATE SHELF

TOP BEAM

UPRIGHTS

14.0"  
TO TOP  
OF BEAM

FLOOR LEVEL

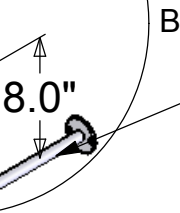

WALL MOUNT  
DISTANCE PIECE (4)

DETAIL B  
SCALE 1 : 5

**Installation Instructions**

SCREW PLATE

SET SCREW

DISTANCE PIECE

**Product name** MODULAR SHELVING SYSTEM

**Model** MS1

**TOOLS INCLUDED**


- Allen wrench 2.5 mm
- Torx wrench

**HARDWARE INCLUDED**

- 8 pcs. drywall screws plus insert
- 4 pcs. Distance Piece

**INSTALLATION STEPS**

1. Attach top and bottom beams to uprights with torx fasteners facing wall. Tighten with torx wrench tuning clockwise 1/2 turn until it stops. Top beam is flush to top of upright. Bottom beam is located 14.0" from floor to top of beam.
2. Attach wall mount distance pieces (4) to the back of the uprights by sliding down groove. Tighten in place.
3. Set unit in desired location, level and plumb. Mark the hole locations through the screw plates.
4. Remove unit from wall. Remove screw plates and attach the screw plates to the wall with supplied hardware.
5. Set shelving unit in place, guiding the distance piece into the screw plates. Tighten set screws.
6. Install shelf brackets. Tap with mallet to insure they are fully engaged into slot. Install shelves.
7. Add additional section to the right in same manner.

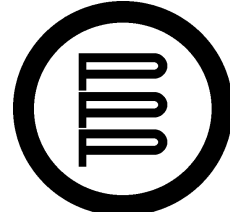

17929 S. Susana Road, Compton, CA 90224

Phone 800.496.0204 Phone 310.639.0390 Fax 310.639.6013

www.peterpepper.com e-mail: info@peterpepper.com