




FRISBI - MODEL 2171, 2171A MOUNTING INSTRUCTIONS

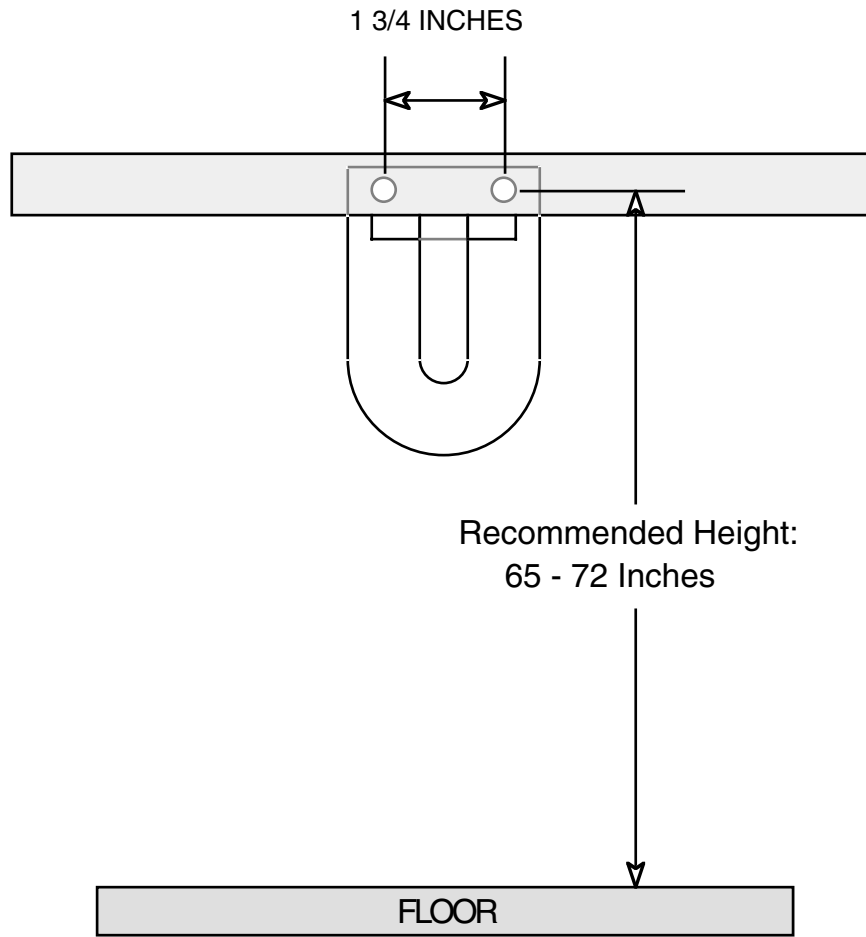

PLASTIC ANCHOR

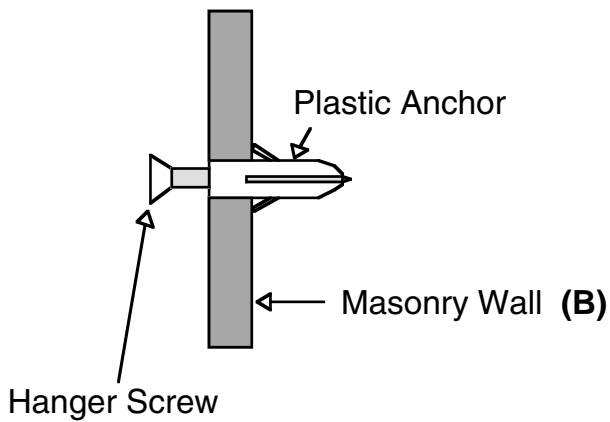

PLASTIC "T" TOGGLER

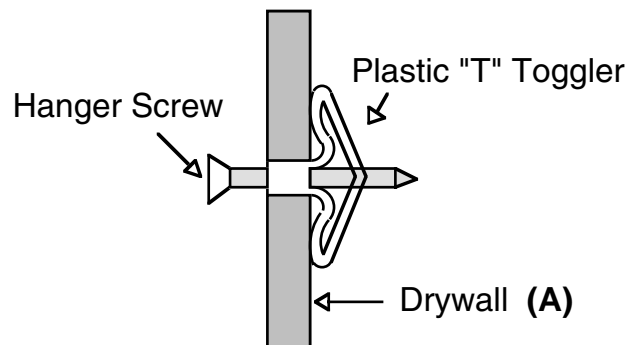

CAUTION : THESE INSTRUCTIONS ARE INTENDED FOR **DRYWALL INSTALLATION ONLY!** IF INSTALLATION IS TO BE OTHER THAN DRYWALL, THE INSTALLER SHALL USE APPROPRIATE HARDWARE FOR THE WALL STRUCTURE.

PLEASE NOTE: THESE INSTRUCTIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

