

- Lay (a) on the ground, circle w facing up.
- Insert G and G pieces. Insert b last.

## Note:

1

Every tab has a groove on one side. Every slot has an indent.

The groove and the indent need to align to work correctly.



















2

Note:



Press d down to lock Tension tabs.

Ensure tabs are pressed securely.

Pressing tabs together creates Tension Lock.

This will require effort. Stand up, and use your

Press tabs almost to the end, as shown below.


DO NOT lock C yet.

weight to press down.




Locked

Parts

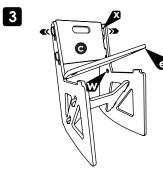

- Carefully insert () at slight angle to fit in holes w.
- Insert C tabs into slots X. DO NOT lock G into final position yet.

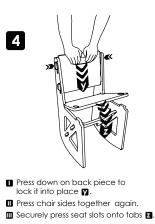

## **X**Sprout

www.sprout-kids.com



& more



Weight capacity 150 lbs

QUARK ENTERPRISES, PO BOX 1123 PROVO, UT 84601

MODEL NO. KR001

Unlocked

DOCUMENT: LAI-KR001

COPYRIGHT QUARK ENTERPRISES 2015

