

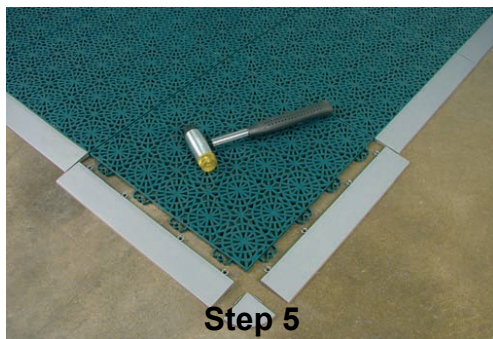


Quick Click All Weather Tile

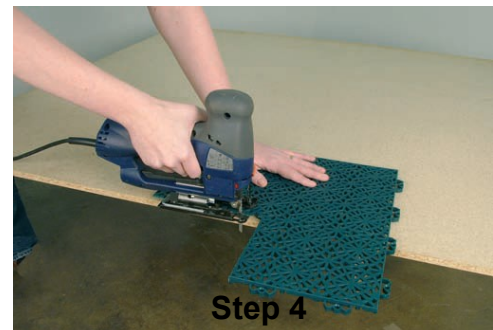

Installation Instructions

No special tools, glue or screws are needed to install your flooring. All you need is a rubber mallet, measure tape and a saw.

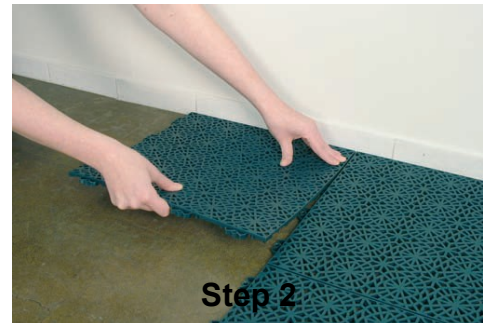

Step 1—Start the installation in a corner and install tiles at an angle.

Step 2—Fix the connection tabs over the protruding rings.

Step 3—Using a rubber mallet, tap the connection tabs together, interlocking the tiles.

Step 4—Use a jigsaw to cut tiles for a perfect fit.

Step 5—Use edge/corner strips (from optional finishing kit) for a smart and safe finish of your flooring.

Step 6—Enjoy your new Quick Click Slate All Weather Floor!