



LIGHTS OF DISTINCTION

CRYSTORAMA LIGHTING GROUP

95 Cantiague Rock Road
 Westbury .Ny11590
 Phone:(516) 931-9090 Fax:(516)931-1254

ITEM NO:5762-AB/BU
5763-AB/BU

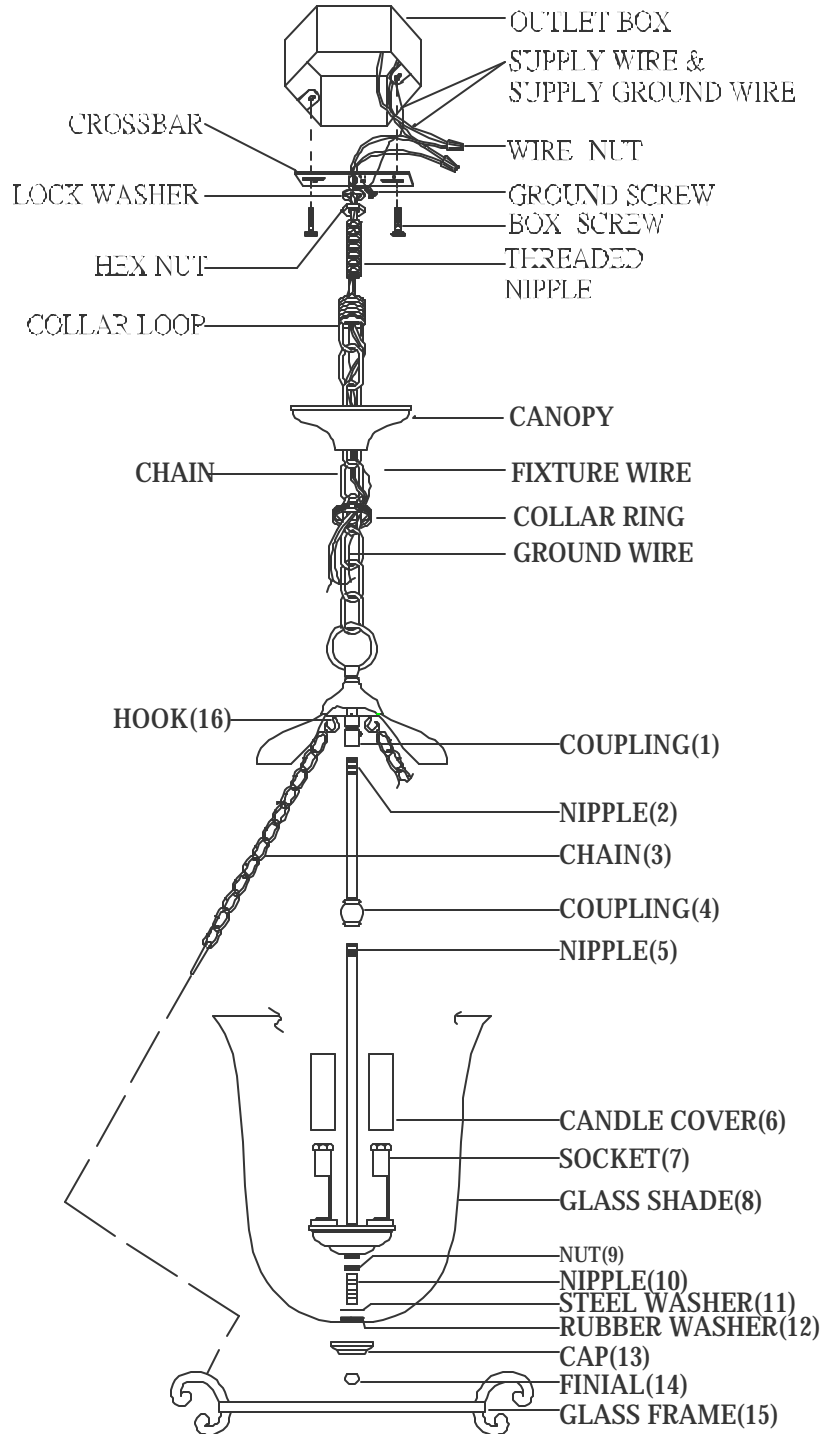

FIXTURE ASSEMBLY, MOUNTING, AND WIRING INSTRUCTIONS:

Carefully remove the fixture out of the carton and check that all parts are included, referring to the above illustration. Make sure that the electricity is turned off.

1. Split the conductors of the fixture wire about 4 inches but be careful not to expose any of the wire inside of the insulation.
1. Connect the fixture ground wire to the outlet box ground wire using the wire nut. Connect the outlet box ground wire to the crossbar with the green hex-head ground screw to pre-tapped hole in the crossbar marked "GND".
2. Connect the half of the fixture wire that is white, marked, or has a ribbed surface, to the outlet box supply wire (WHITE). Connect the other half of the fixture wire that is black, unmarked, or has a smooth surface, to the outlet box supply wire (BLACK or RED). Use wire nut provided.
3. Spread the electrical splices so that the black wire is on one side of the outlet box and the white wire is on the other side.
4. Slide the canopy up into place against the ceiling. Slide the collar ring up and thread it onto the collar loop to secure the canopy in place.

When install the fixture :

1. Thread nipple(2)into coupling(1);
2. Thread nipple(5)into coupling(4);
3. Thread nipple(10)into nut(9),then install steel washer(11), rubber washer(12),glass shade(8), cap(13)onto nipple(10), and secure it with finial(14);
4. Install body onto glass frame(15);
5. install the chain(3) onto hook(16)&glass frame(15);
6. Slide the candle cover(6) onto socket(7);
7. The fixture is ready for lamping and installation!