





## ASSEMBLY INSTRUCTIONS

TABLE: PJO-1001-ESP-BR (BARCOUNTER)

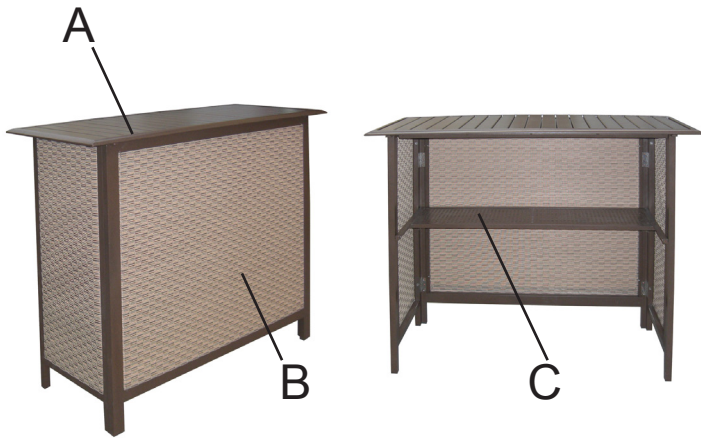


- A. Top (1 unit)
- B. Body of barcounter (1 unit)
- C. Shelve (1 unit)
- D. Short screw (4 units)
- E. Long screw (2 units)
- F. Washers (6 units)
- G. Brown screw covers (6 units)
- H. Allen wrench (1 unit)

1. Position body of barcounter (B) to shelve (C) before manually tighten with long screw (E).  
**Important note: Do not tighten all way.**

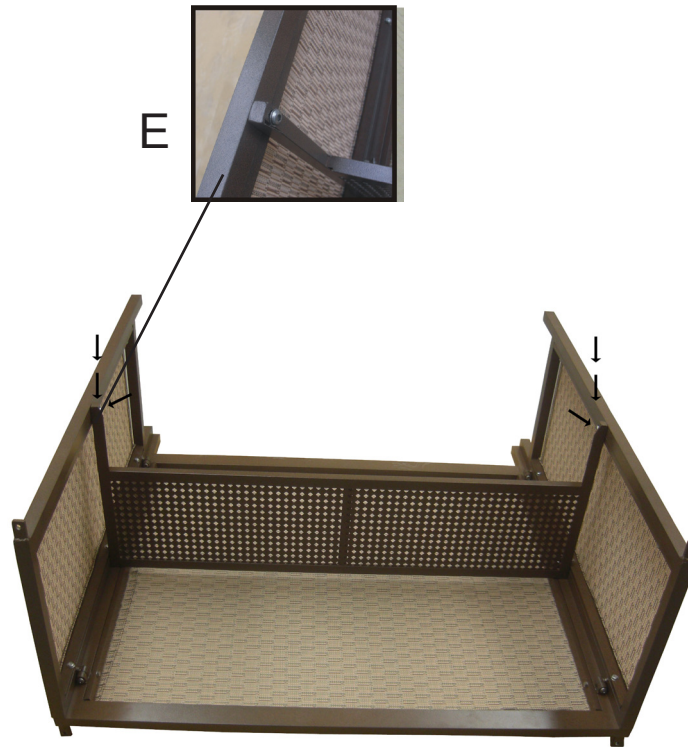

2. Position top (A) with body (B). Insert short screw (D) to it's corresponding hole manually tighten

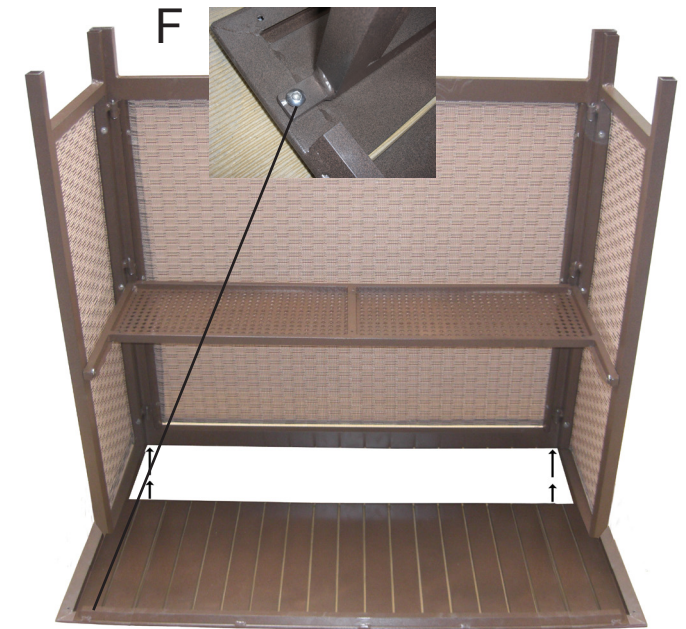

3. Tighten all screws using the allen wrench provided (H). Then cover the screws with brown plastic cover (G).

