






## ASSEMBLY INSTRUCTIONS

PJO-3001-BRN-DB (WOVEN DAYBED WITH CUSHIONS)




- A. Side frame (2 units)
- B. Back frame (1 unit)
- C. Seat frame (1 unit)
- D. Poles (4 units)
- E. Cushions (5 units)
- F. Fabric (1 unit)
- G. Upper frame (4 units)
- H. Long screws  $\varnothing 8 \times 40$  mm (4 units)
- I. Short screws  $\varnothing 8 \times 20$  mm (8 units)
- J. Screws  $\varnothing 6 \times 38$  mm (10 units)
- K. Washers M6 (10 units)
- L. Washers M8 (12 units)
- LL. Plastic covers (12 units)
- M. Allen wrench M5 (1 unit)

1. Position back frame (B) to one of the sides (A) before manually tightening with screws (J).  
**Important note: Do not tighten all the way.**

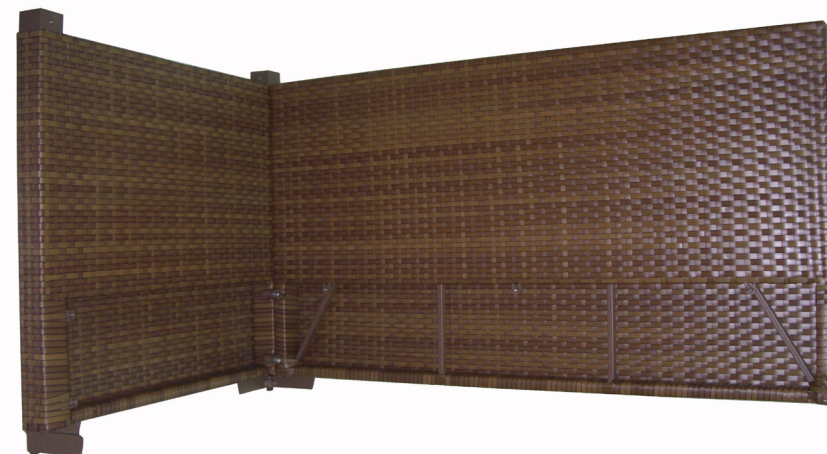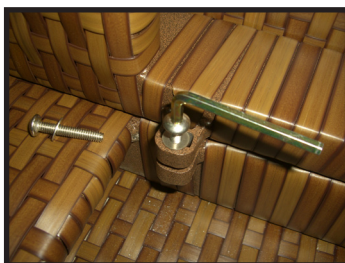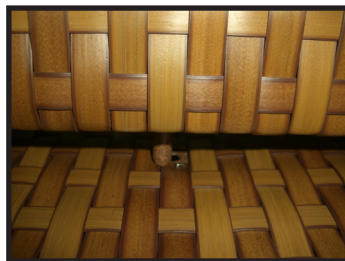

2. Repeat same process on the other side.  
**Important note: Do not tighten all the way.**

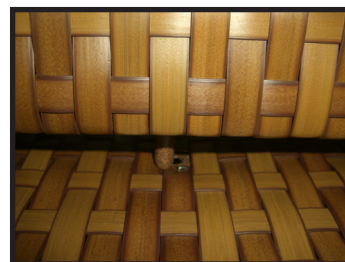




## ASSEMBLY INSTRUCTIONS

PJO-3001-BRN-DB (WOVEN DAYBED WITH CUSHIONS)

3. Position seat frame (C) with the rest of the assembly parts.


Insert screws (J) to its corresponding hole and manually tighten.

**Important note: Do not tighten all the way.**

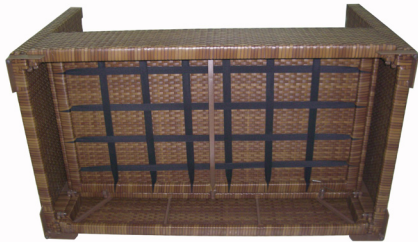

4. Position one of the poles (D) to the structure. Insert screw (I) to its corresponding hole and manually tighten.

**Important note: Do not tighten all the way.**

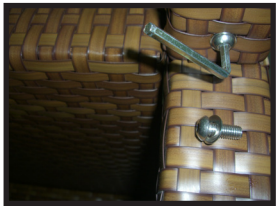

5. Repeat same process on the other poles (D).



6. Position upper structure frame (G) with the poles (D). Insert screw (H) to its corresponding hole and manually tighten.

**Important note: Do not tighten all the way.**



7. Tighten all screws using the allen wrench provided (M). Then cover the screws with brown plastic covers (LL).



8. Position fabric (F) on upper frame and leave the cushions (E).

