


FLEX STACKER UPGRADE

Illustration 1

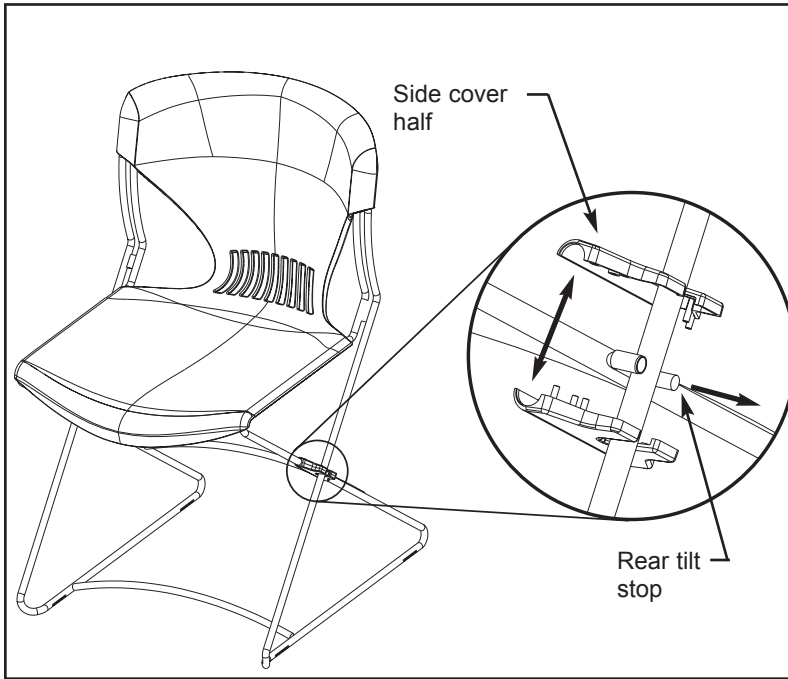

Read all instructions and review illustrations before installing.


Tools required for assembly:
Flat blade screwdriver

This assembly includes:
(4) Side cover half
(4) Thin plastic tube

Old Part Removal (refer to Illustration 1):

1. Use flat blade screwdriver to pry old side covers apart and discard
2. Remove and discard thick plastic tube from rear tilt stop.

Illustration 2

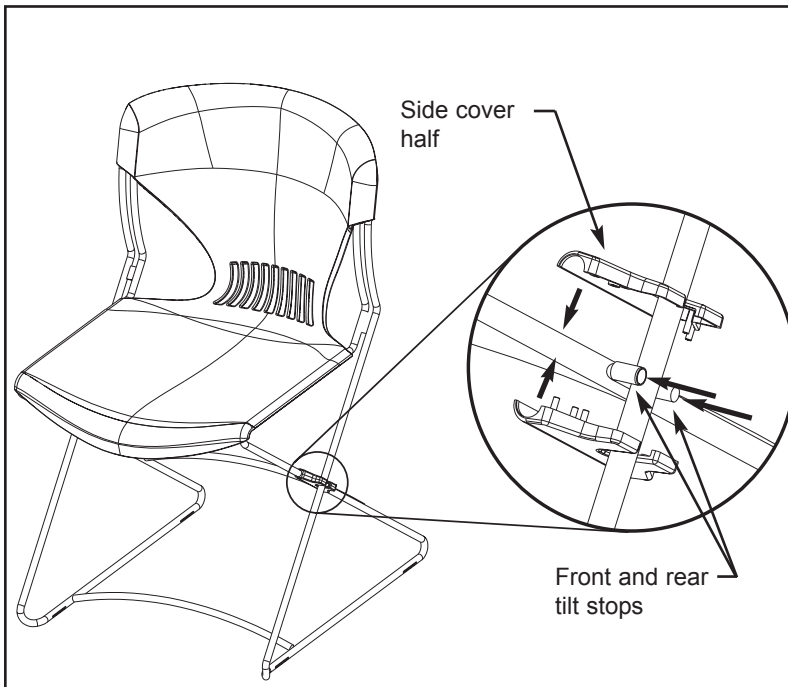

New Part Installation (refer to Illustration 2):

1. Install thin plastic tubes on both front and rear tilt stops.
2. Install new side covers, pressing together tightly until they are firmly seated against each other.
3. Repeat old part removal and new part installation on other side of chair.

INSTALLATION INSTRUCTIONS