88 5001 301 Buffet and Hutch (Natural Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.






Thai Patent Pending Numbers 0602000973



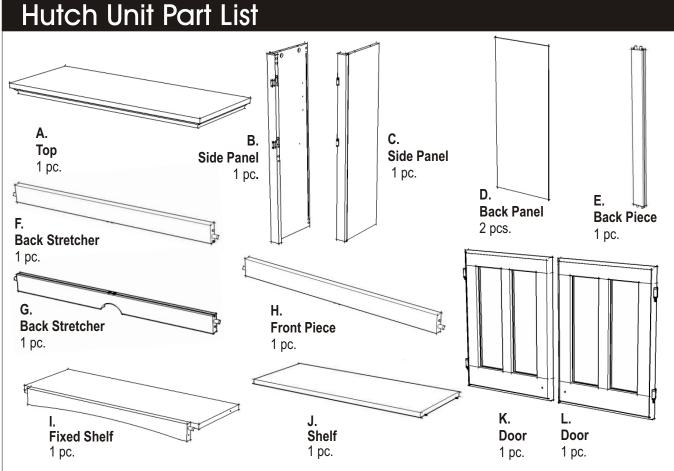

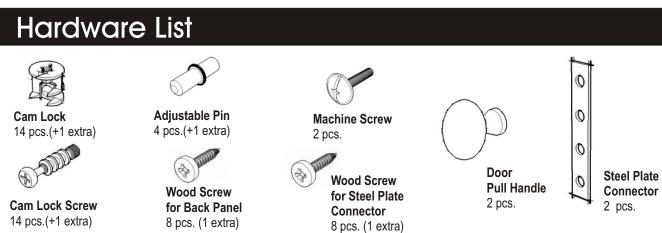

88 5001 302 Buffet and Hutch (White Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.






Thai Patent Pending Numbers 0602000973



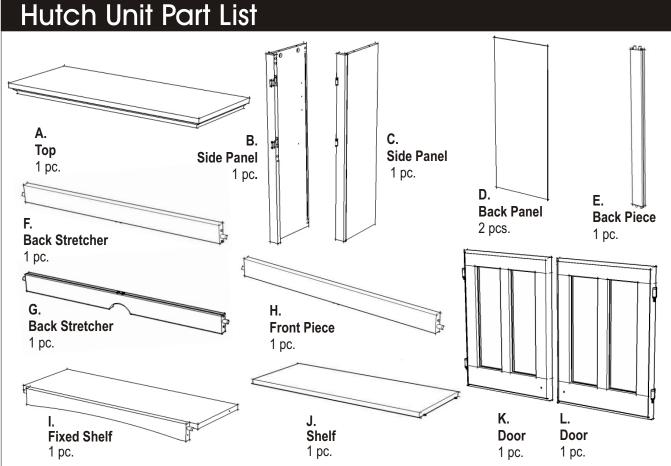

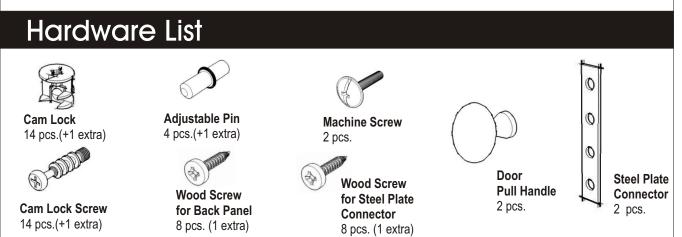


88 5001 303 Buffet and Hutch (Red Finish)

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



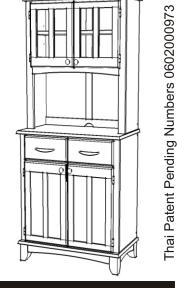



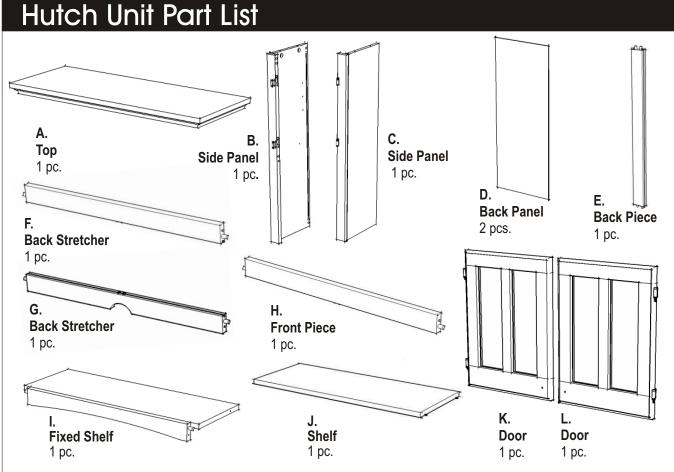

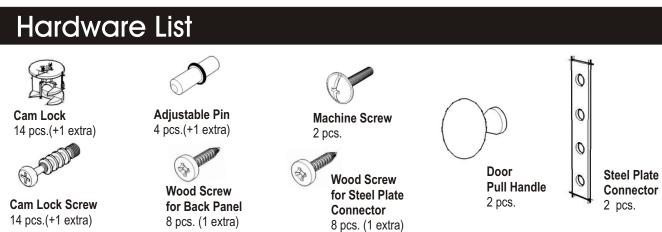

88 5001 304 Buffet and Hutch (Black Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





Thai Patent Pending Numbers 0602000973



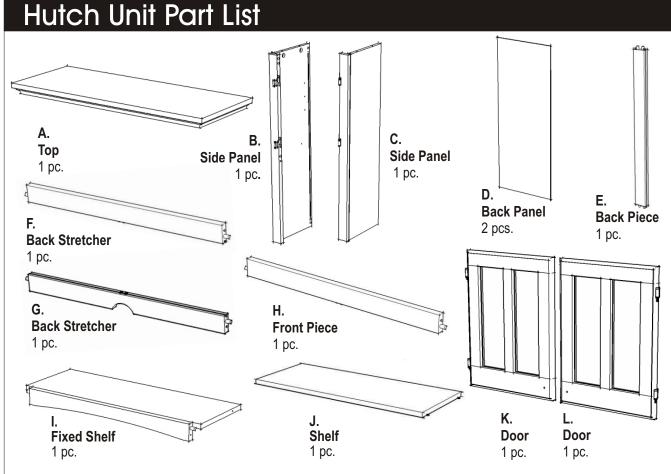





Cam Lock 14 pcs.(+1 extra)



Cam Lock Screw 14 pcs.(+1 extra)



Adjustable Pin 4 pcs.(+1 extra)



Wood Screw for Back Panel 8 pcs. (1 extra)



Machine Screw 2 pcs.





Door Pull Handle 2 pcs.



Steel Plate Connector 2 pcs.

88 5001 306 Buffet and Hutch (Cottage Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.






Thai Patent Pending Numbers 0602000973



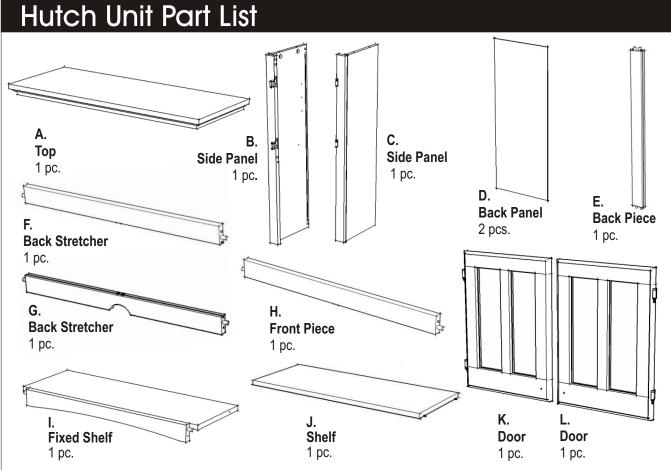

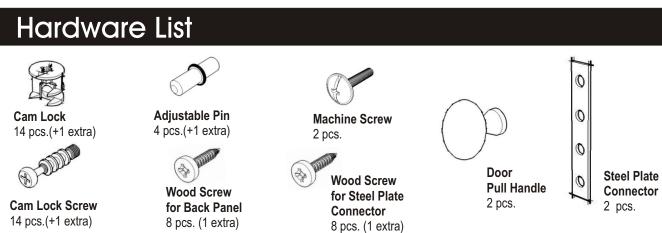

88 5001 307 Buffet and Hutch (Cherry Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.






Thai Patent Pending Numbers 0602000973



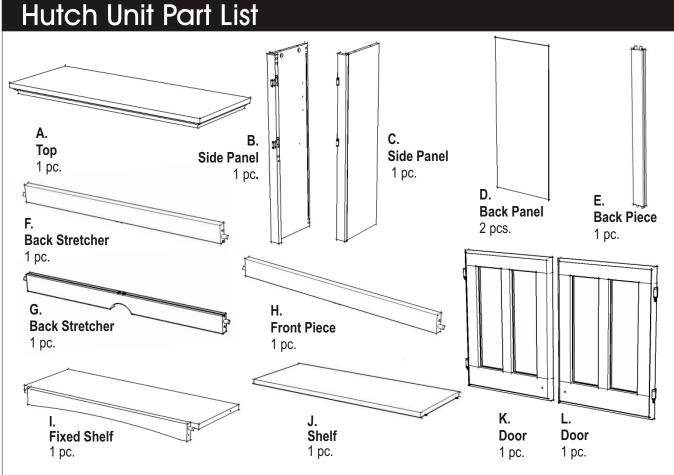

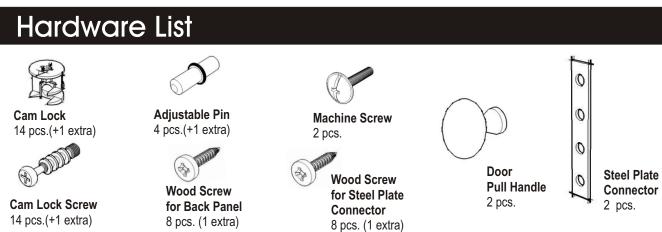

Assembly Instructions 2/3

Cam Lock Screw STEP 1 Insert Cam Lock Screws into the pre-drilled holes at Side Panel (B) and (C) and tighten up. Attach Back Piece (E) in between Back Stretcher (F) and (G). Slide Back Panel (D) into place. Attach Side Panel (C) to the unit with Cam Locks. Attach Front Piece (H) and Fixed Shelf (I) to Side Panel (C) with Cam Locks. D Cam Lock STEP 2 Attach Side Panel (B) to the unit with Cam Locks. Turn the unit back to its normal position. Cam Lock Screw _Cam Lock (Figure 1) Cam Lock STEP 3 Insert Cam Lock Screws into the pre-drilled holes at the Top (A). (See figure 1) Attach Top (A) onto the unit with Cam Locks. Insert Adjustable Pins into both side panels at the desired level. Slide Shelf (J) into place. Assemble Pull Handles to Door (K) and (L). (See figure 2) Attach Door (K) and (L) to the side panels, slide the door lift hinges into the side panel lift hinges. Adjustable Pin

(Figure 3)

(See figure 3)

(Figure 2)

Assembly Instructions 3/3


STEP 4


Insert Wood Screws from the back and tighten up.

STEP 5

Place the Hutch unit onto the Buffet unit.


To hold firmly the Hutch and Buffet, attach Steel Plate Connectors, insert Wood Screws and tighten up. (See figure 4)

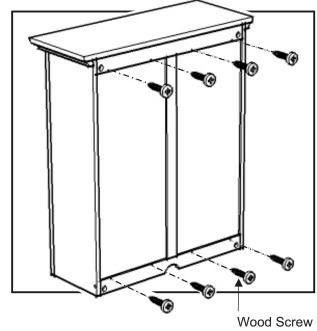

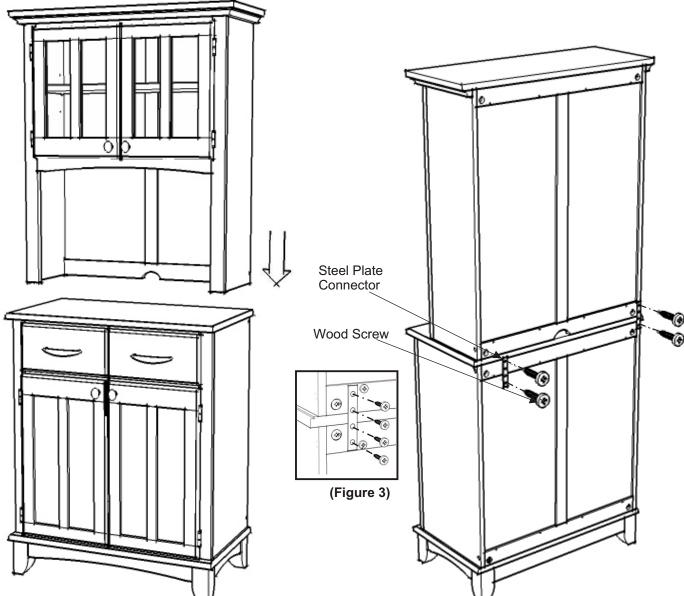

Attention!

For safety reasons, we recommended you strictly follow this additional instructions as to prevent this Buffet & Hutch Unit from tipping over.

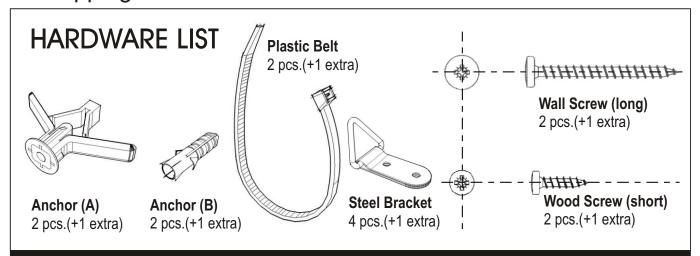

Assembly Instructions

