88 5402 131
Cabana Banana Pier Cabinet (Cocoa Finish)

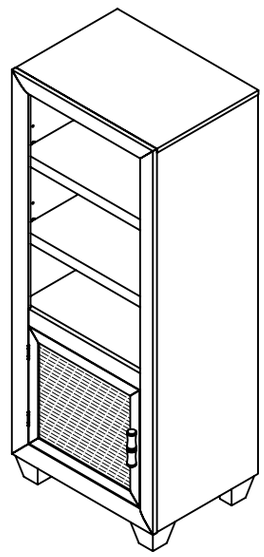

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home Styles™

Casual Attire For Today's Home

Part List

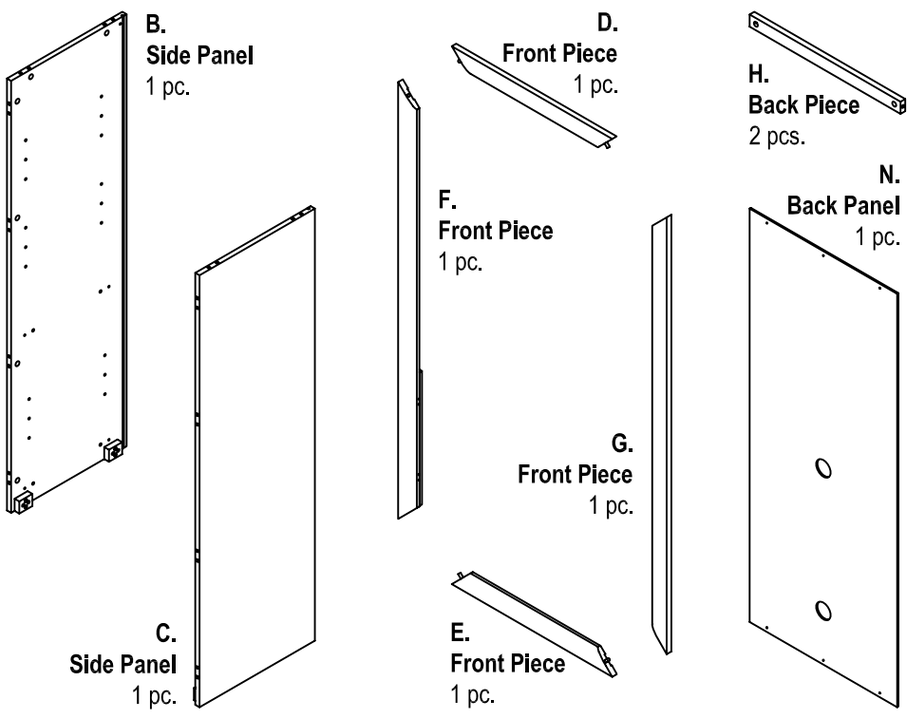

For assembly see instructions in carton 88 5402 132

Tools Required For Assembly : *Phillips* screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319

servicedesk@homestyles-furniture.com

PC. 1964 / 09 / 01

88 5402 132
Cabana Banana Pier Cabinet (Cocoa Finish)

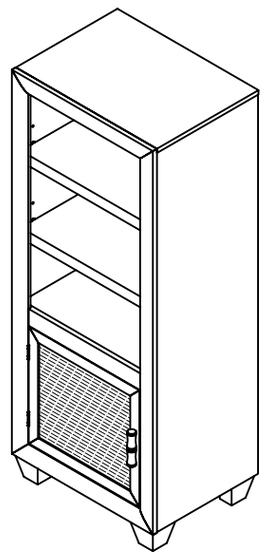

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home Styles™
Casual Attire For Today's Home

Part List

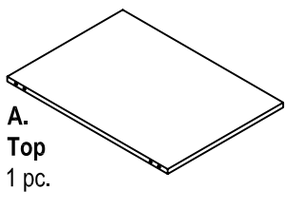

A.
Top
1 pc.

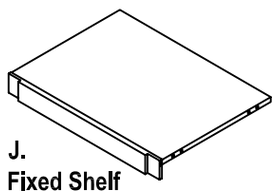

J.
Fixed Shelf
1 pc.

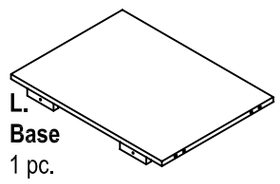

L.
Base
1 pc.

I.
Adjustable Shelf
2 pcs.

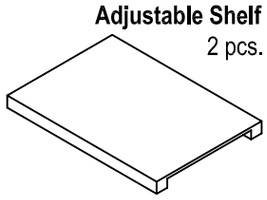

K.
Adjustable Shelf
1 pc.

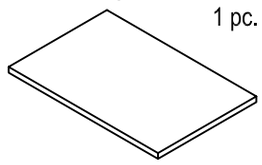

M.
Door
1 pc.

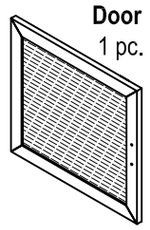

O.
Leg
2 pcs.

P.
Leg
2 pcs.

Hardware List

Cam Lock Screw
26 pcs. (+1 extra)

Cam Lock
26 pcs. (+1 extra)

1 1/4" Round Head Screw
2 pcs. (+1 extra)

5/8" Round Head Screw
8 pcs. (+1 extra)

1/2" Flat Head Screw
24 pcs. (+1 extra)

Bolt
8 pcs. (+1 extra)

Adjustable Pin
12 pcs. (+1 extra)

Magnet
1 pc.



Handle
1 pc.

Machine Screw
2 pcs.

Allen Key
1 pc.

Allen Key (Small)
1 pc.

Wooden Dowel
22 pcs. (+1 extra)

Corner Plate
4 pcs.

Hinge
2 pcs.

Also need the following from carton 88 5402 131:

Part List in Carton 88 5402 131

B.	Side Panel	1 pc.	F.	Front Piece	1 pc.
C.	Side Panel	1 pc.	G.	Front Piece	1 pc.
D.	Front Piece	1 pc.	H.	Back Piece	2 pcs.
E.	Front Piece	1 pc.	N.	Back Panel	1 pc.

Tools Required For Assembly : *Phillips* screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

Assembly Instructions 2/9

IMPORTANT

** Do not tighten up all the screws until each part is properly assembled.*

** Use a soft cloth between these parts and the floor.*

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C).

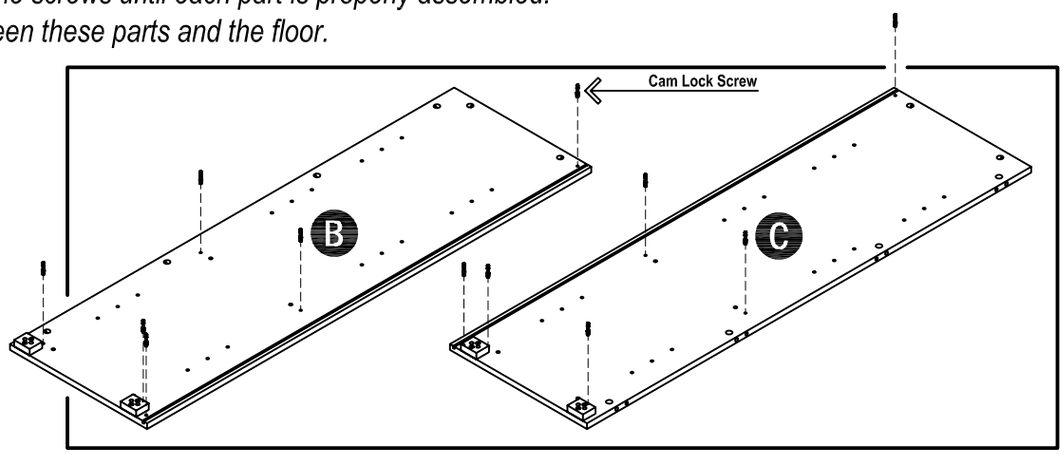

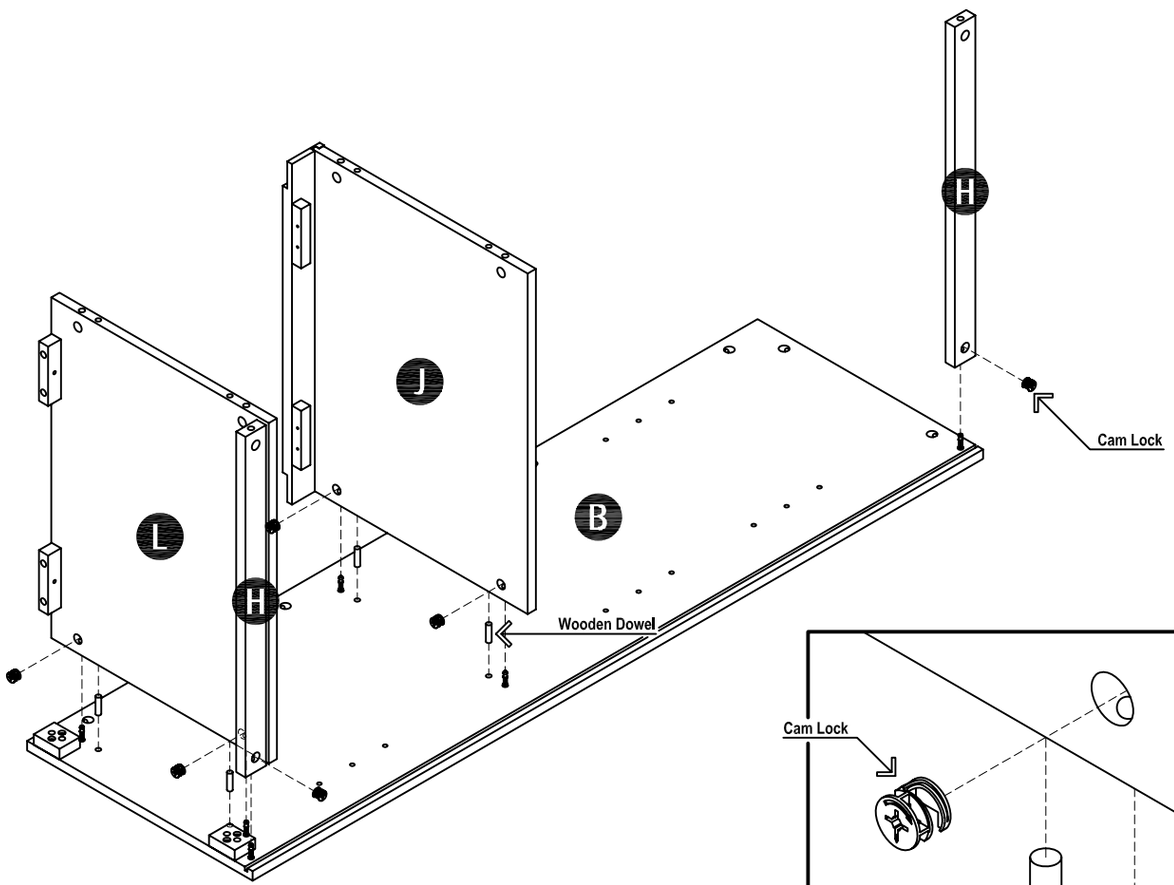

STEP 2

Attach Back Pieces (H), Fixed Shelf (J) and Base (L) to Side Panel (B) with Cam Locks and Dowels. (See figure 1)

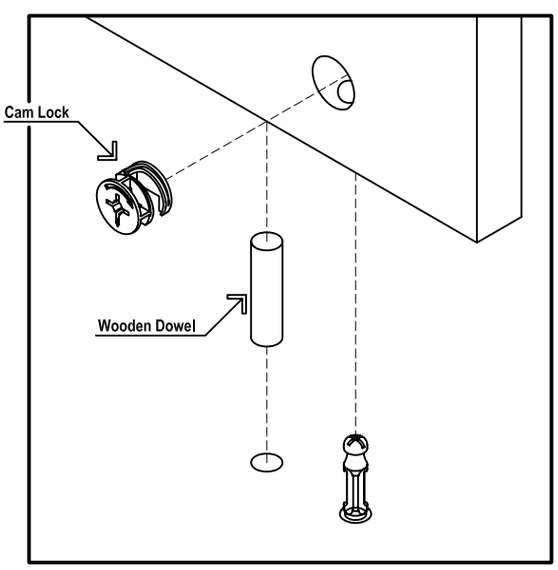

Figure 1

Assembly Instructions 3/9

STEP 3

Attach Side Panel (C) to unit with Cam Locks and Dowels.

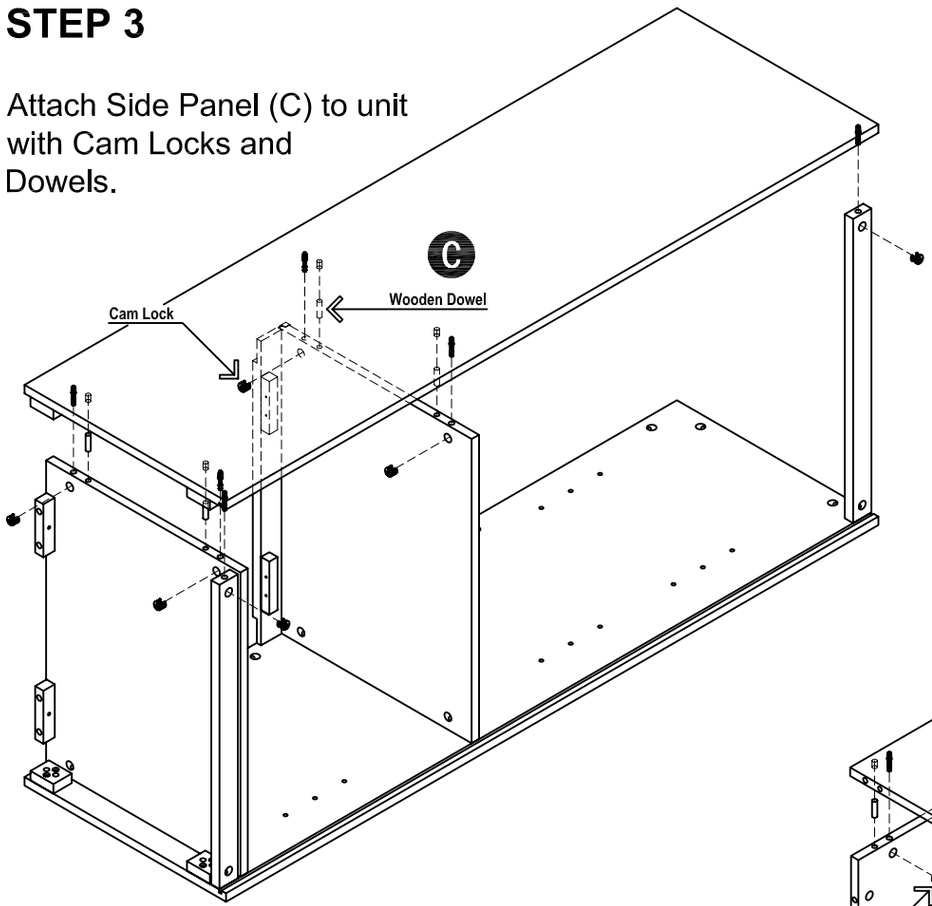

STEP 5

Place Top (A) onto unit using Cam Locks and Wooden Dowels. (See figure 2)

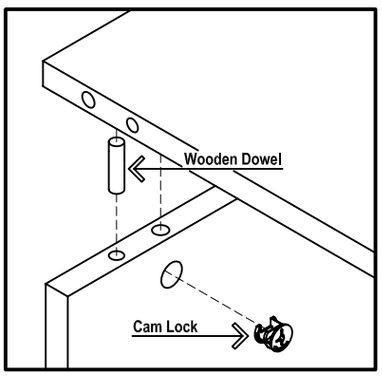

Figure 2

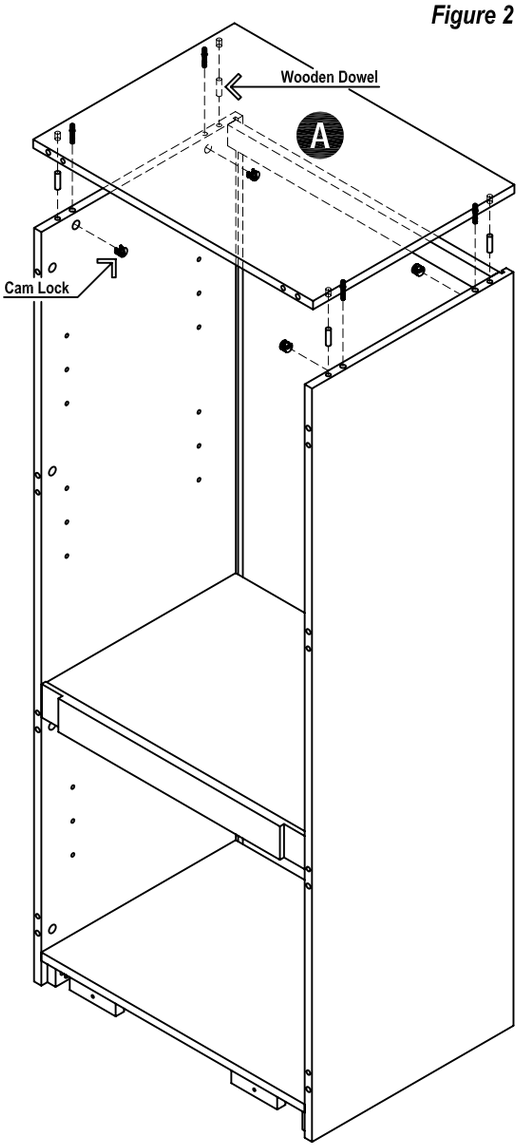

STEP 4

Insert Cam Lock Screws into the pre-drilled holes of Top (A).

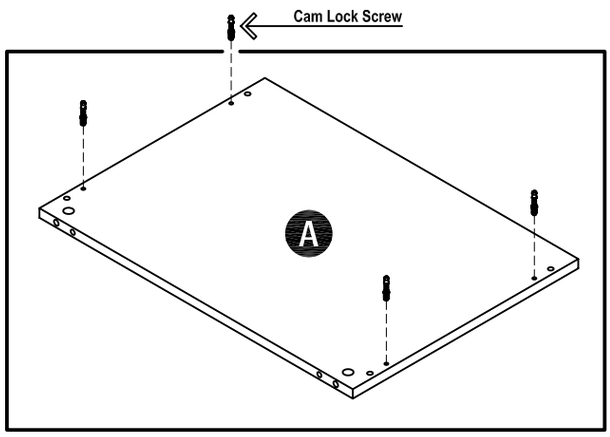

STEP 6

Assemble Front Pieces (D, E, F, G) as a Front Assembly and attach Corner Plate to Front Pieces (D, E, F, G) using 1/2" Flat Head Screw.

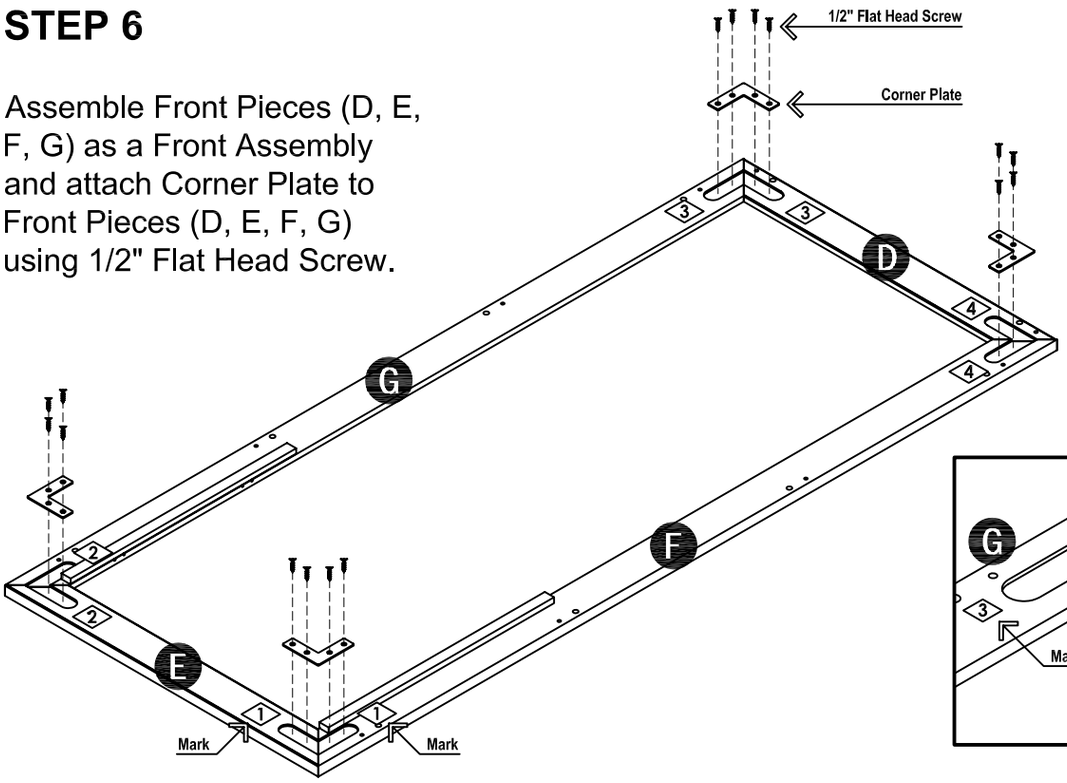

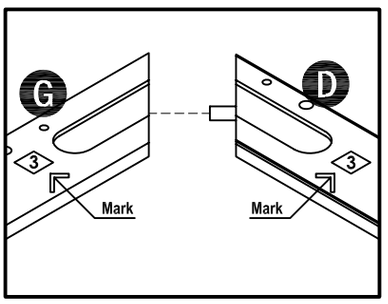

Very Important!
You must match the mark on each ends when you assemble Front Pieces (D, E, F, G) as a Front Assembly.

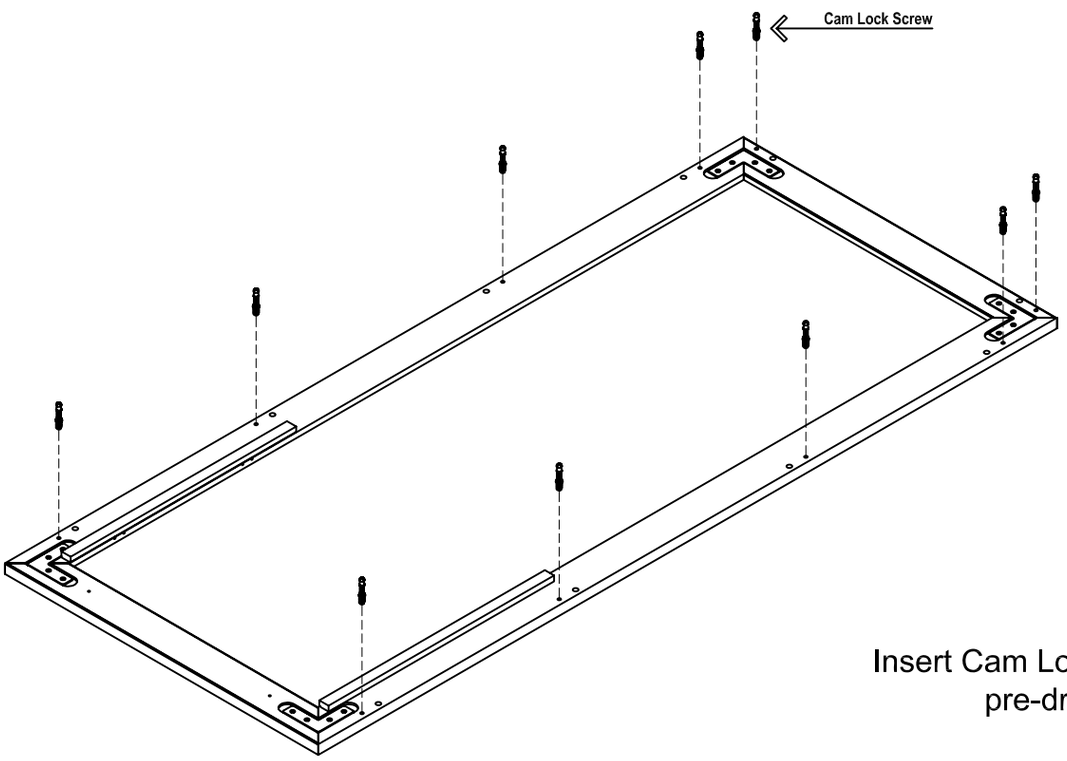

STEP 7

Insert Cam Lock Screws into the pre-drilled holes of Front Assembly.

Assembly Instructions 5/9

STEP 8

Place Front Assembly onto the unit using Cam Locks, Wooden Dowels and 1 1/4" Round Head Screws.

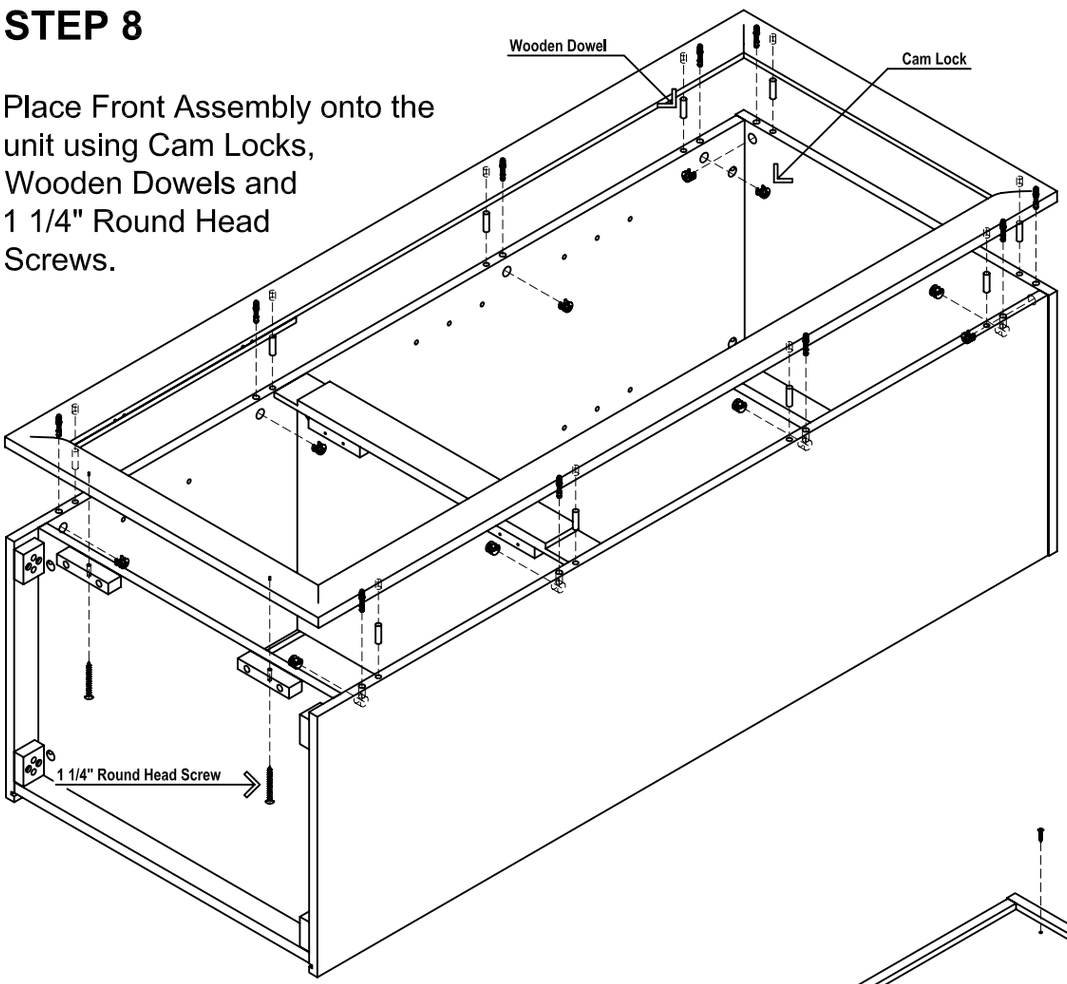

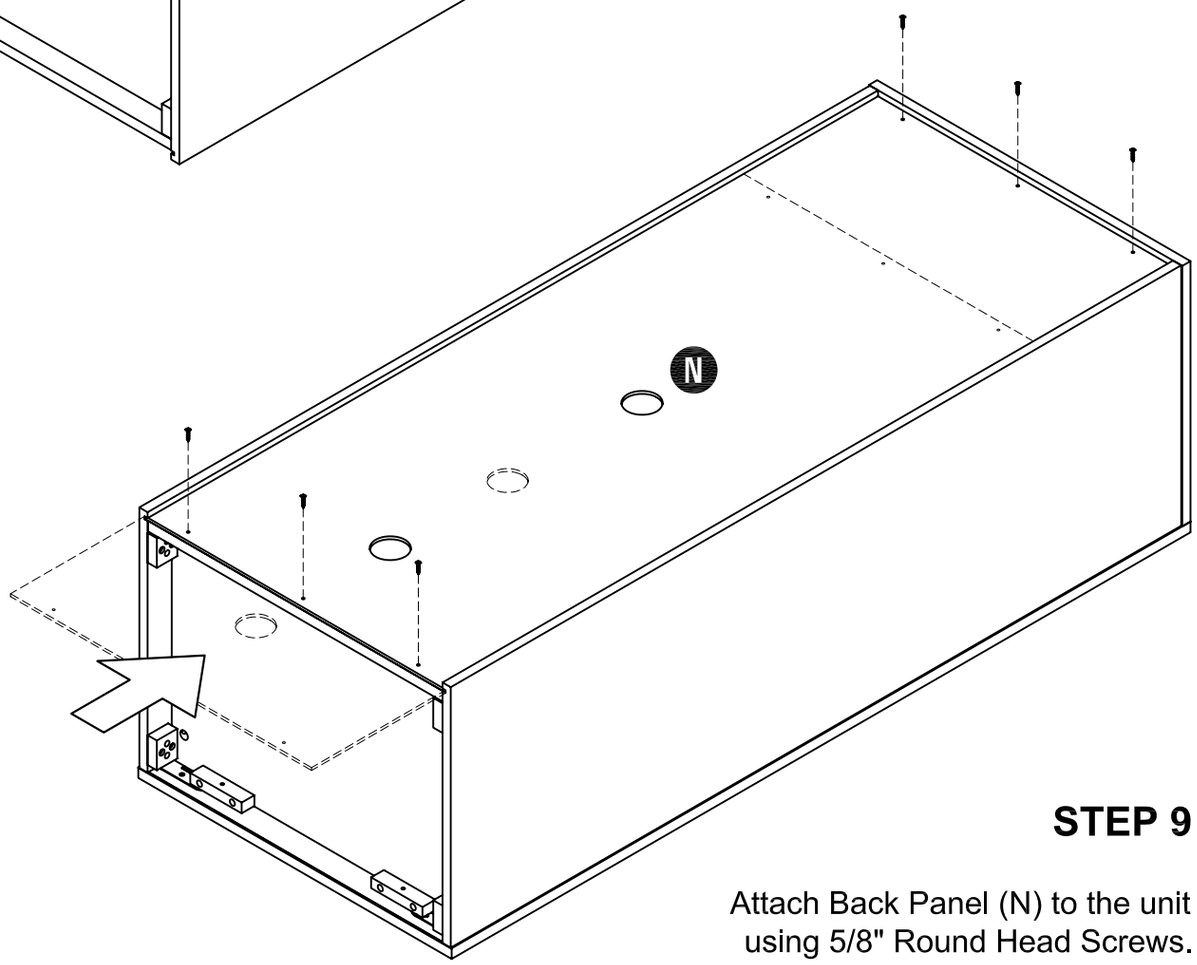

STEP 9

Attach Back Panel (N) to the unit using 5/8" Round Head Screws.

STEP 10

Attach Legs (O) and (P) to the unit using Bolts.

Tighten Bolt using Allen Key.
(See figure 3)

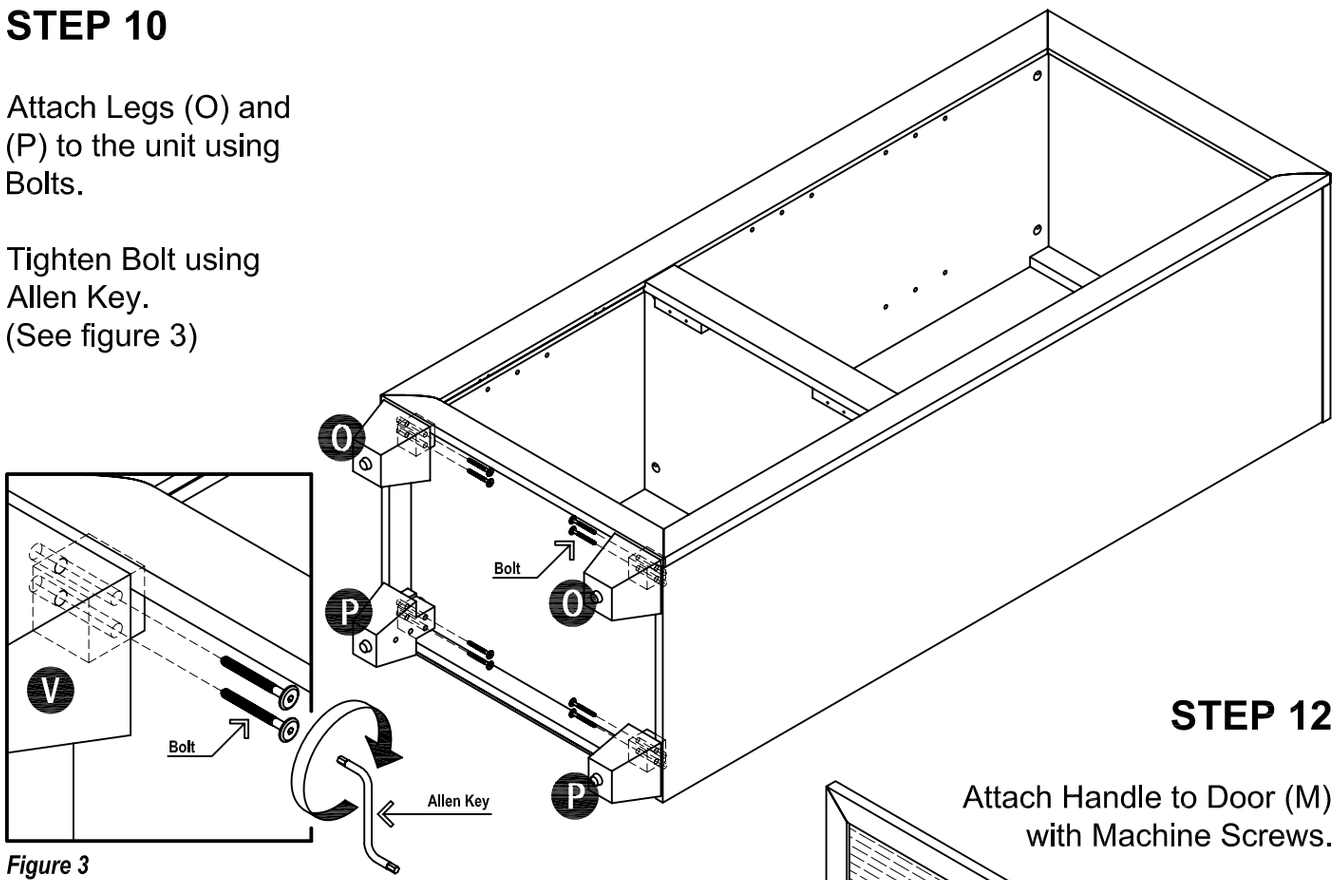

Figure 3

STEP 11

To level the unit, adjust the adjustable levelers on the bottom of the Legs.

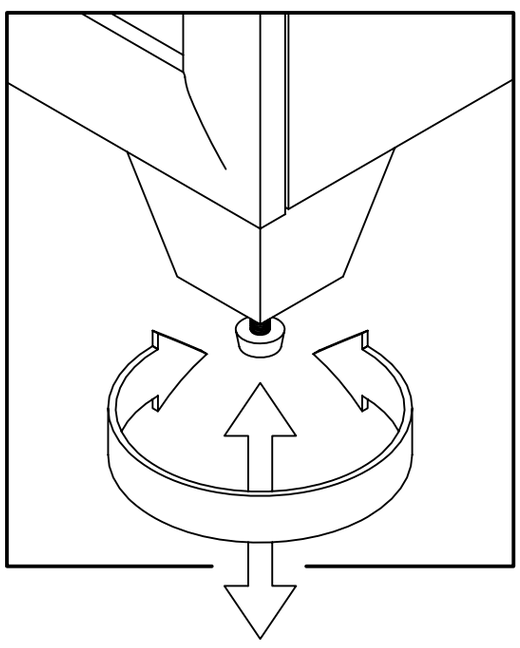

STEP 12

Attach Handle to Door (M) with Machine Screws.

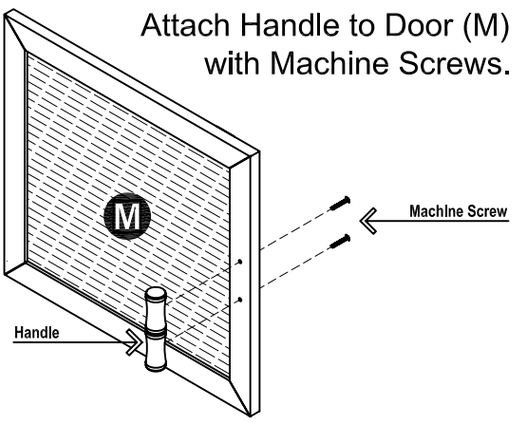

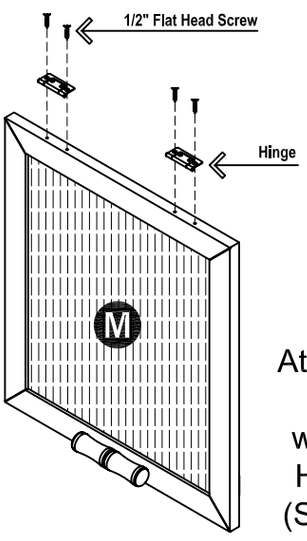

STEP 13

Attach Hinges to Door (M) with 1/2" Flat Head Screw.
(See figure 4)

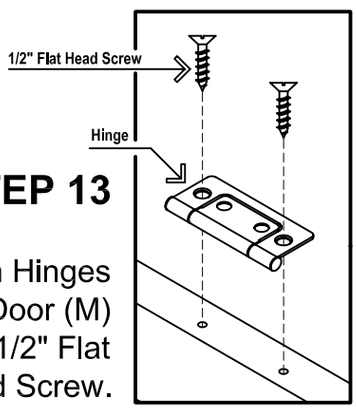

Figure 4

Customer Option:
The Door can be attached on the unit so that it opens either to the left or to the right.
For Left Opening please follow step 14-15
For Right Opening please follow step 16-17

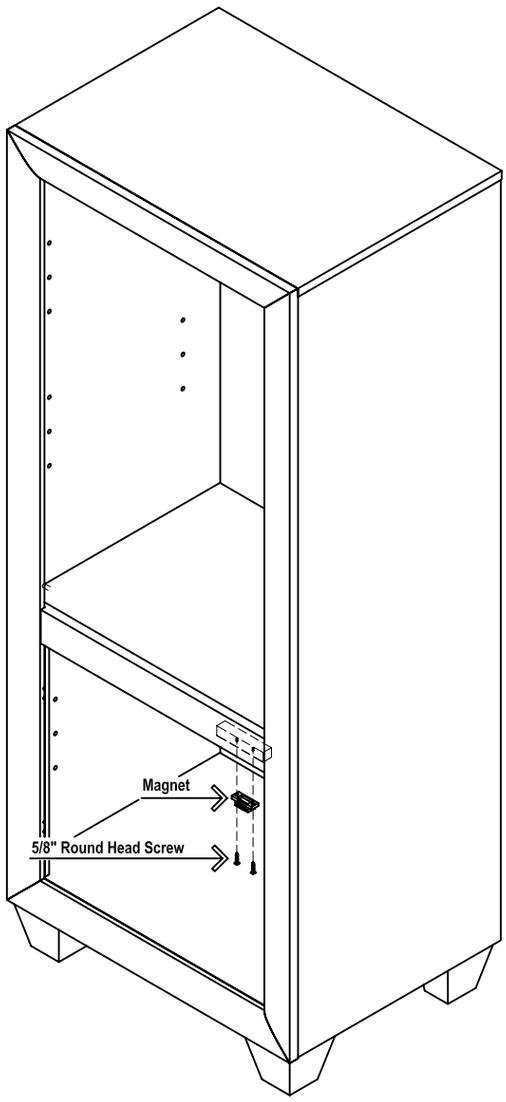

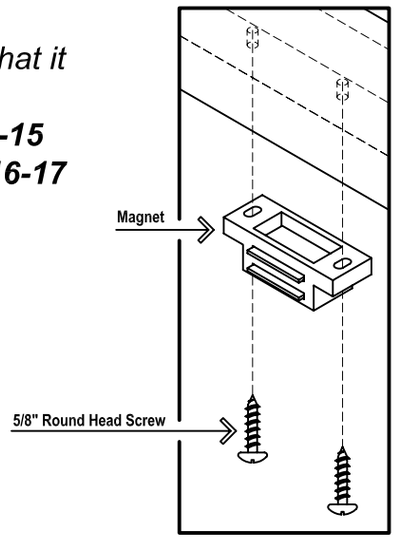

Figure 5

STEP 14

Attach Magnet to right side of unit using 5/8" Round Head Screws. (See figure 5)

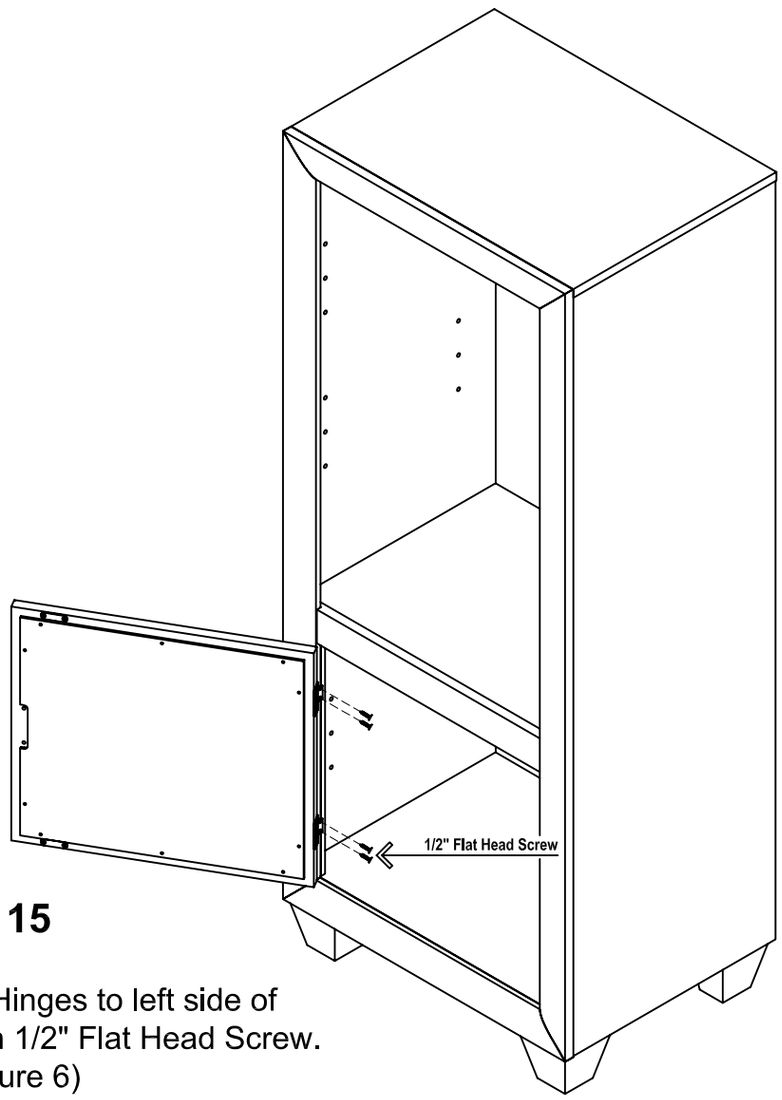

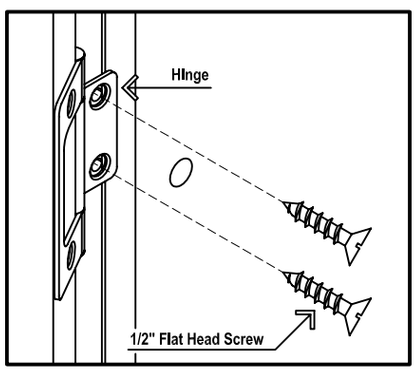

Figure 6

STEP 15

Attach Hinges to left side of unit with 1/2" Flat Head Screw. (See figure 6)

STEP 16

Attach Magnet to left side of unit using 5/8" Round Head Screws.
(See figure 7)

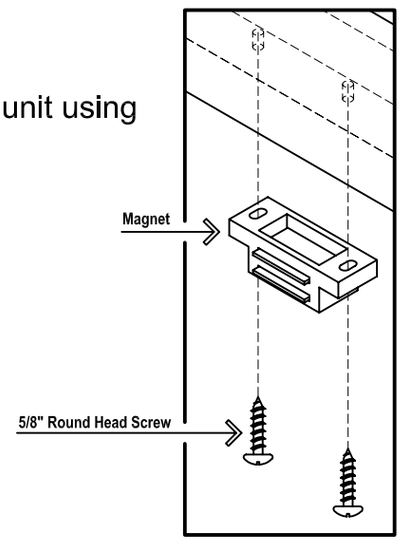

Figure 7

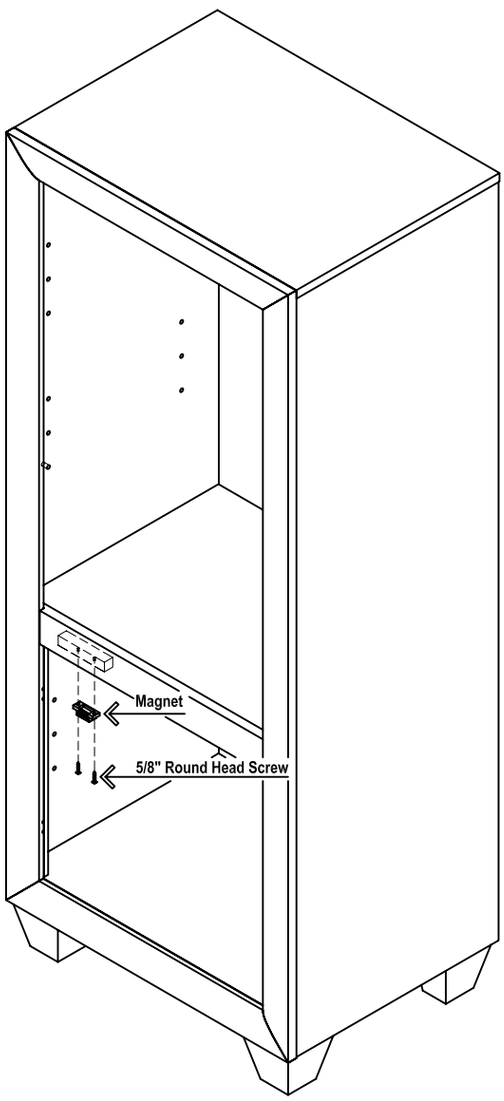

STEP 17

Attach Hinges to right side of unit with 1/2" Flat Head Screw.
(See figure 8)

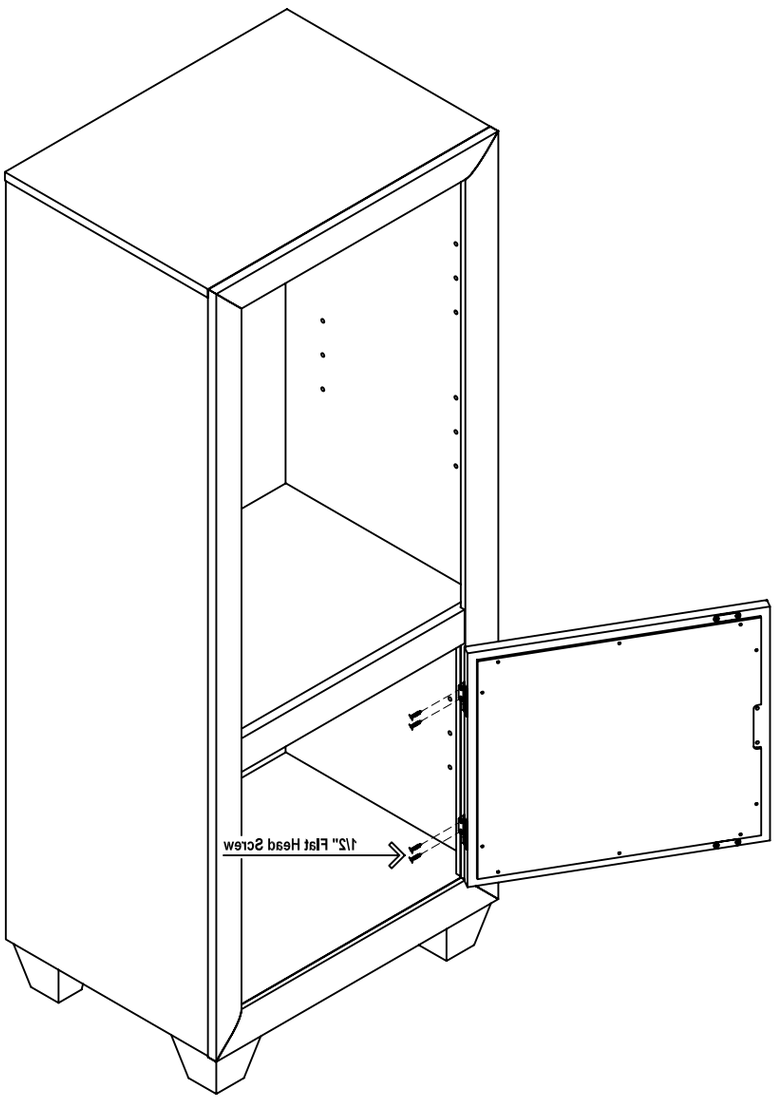

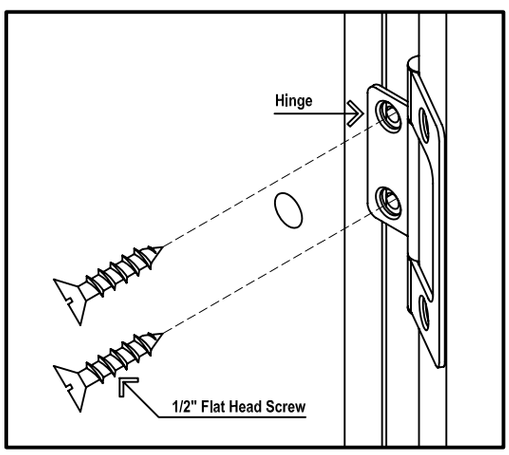

Figure 8

Assembly Instructions 9/9

STEP 18

Insert Adjustable Pins into Side Panels at the desired level. (See figure 9)

Place Adjustable Shelves (I) and (K) into position.

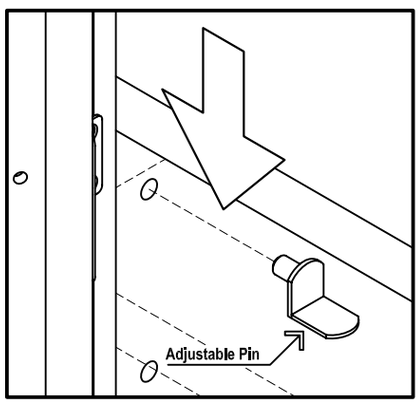

Figure 9

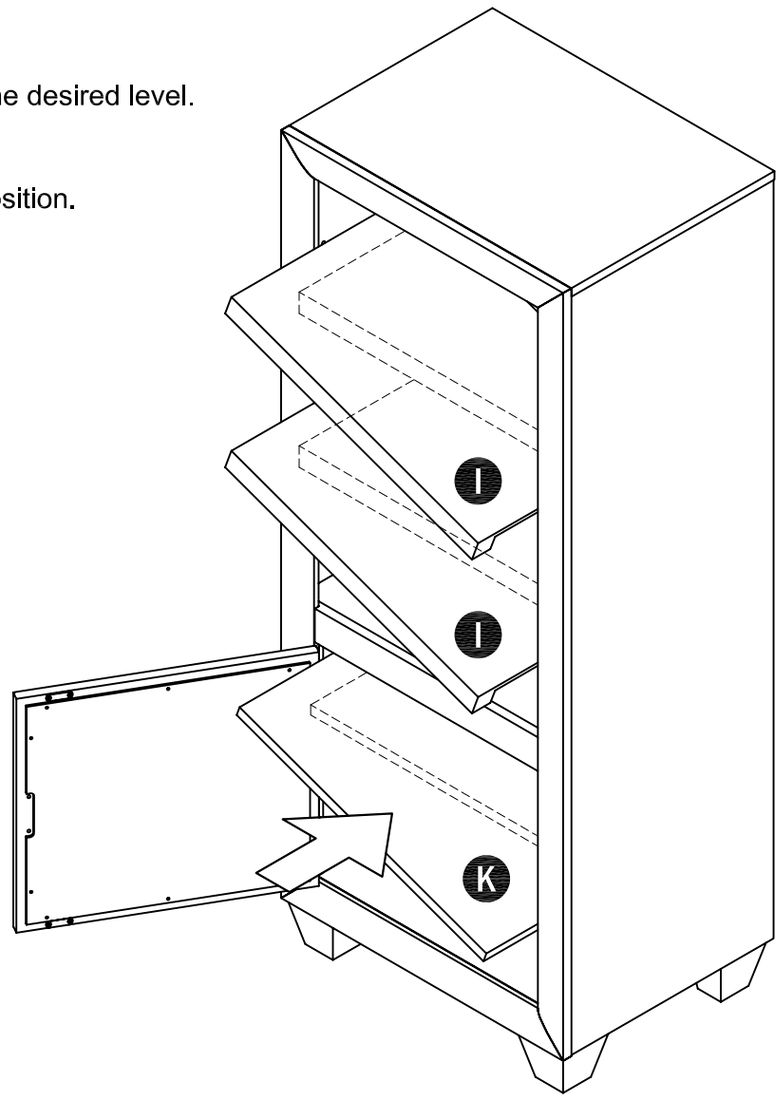

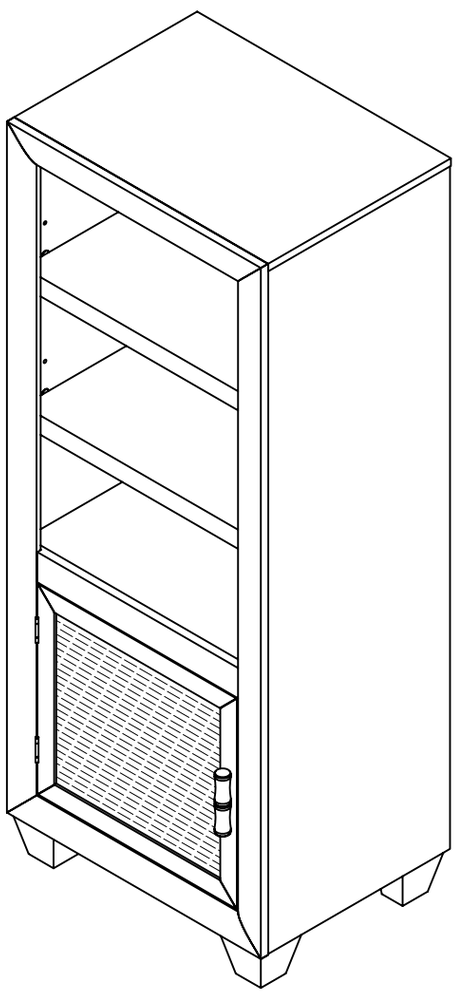

Now your Cabana Banana Pier Cabinet is ready for use