1.7




GENERAL PRODUCT INFORMATION:




This product is suitable for indoor dry locations only.

This product must be used with Tech Lighting systems only.

Installing the Meteorite

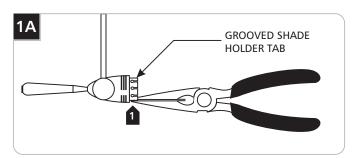

If the Meteorite shade fits tight onto the fixture, then carefully bend the grooved shade holder tabs in slightly with the needlenose pliers. If it fits loose, then carefully bend the grooved shade holder tabs out slightly with the needlenose pliers.

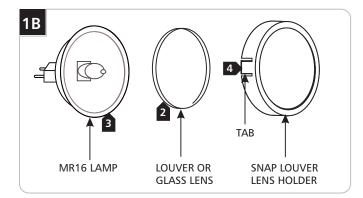


Use **MAX** 50 Watt MR16 Front Cover Halogen Lamp.




- 2 Place the louver or the glass lens (optional) into the Snap Louver Lens Holder.
- 3 Place the MR16 lamp into the Snap Louver Lens Holder.
- Press the tabs on both sides of the Snap Louver Lens
 Holder against the MR16 lamp to keep it in the position.



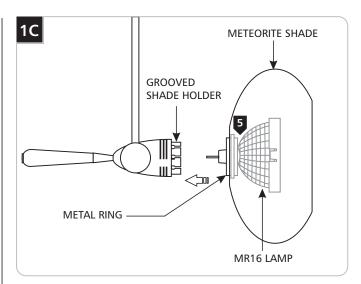

5 Place the MR16 lamp into the Meteorite shade.

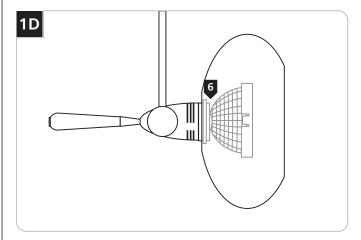

6 Hold the lamp against the shade with the thumb and push the lamp pins all the way into the socket holes; simultaneously push the Meteorite shade metal ring onto the grooved shade holder.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077 847.410.4400

www.techlighting.com

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company