

# Installation Instructions

## General

### Assembling the Fixture

Carefully remove the fixture from the carton, and check that all parts are included, as shown in figure. Be careful not to misplace any of the screws or parts which are needed for installing the fixture.

- 1 Position crossbar on wall. Align slotted hole in crossbar to threaded holes in Outlet Box. Attach with two screws (Screws not Provided.)
- 2 Secure crossbar to the wall through the key hole each end.
- 3 If the GREEN GROUNDING SCREW is supplied with a WASHER. Slip the WASHER over the GREEN GROUNDING SCREW. With the cupped side of the WASHER facing the head of the SCREW. Screw into the small threaded hole in the CROSSBAR. Do not tighten.

### Connecting the Wires

Connecting the wires to the connectors is shown in figure 2

- 1 Attach the outlet ground wire (green wire or bare copper only) along with the fixture ground wire (if present) to the green grounding screw. Wrap the wire(s) around the green ground screw between the washer and the head of the screw. Tighten the screw. If your wall mounted fixture does not have a ground wire, it will still be grounded by metal to metal with the crossbar.
- 2 Place the white wires from the fixture evenly against the white wire from the Outlet Box, and then tuck together the bare parts of the wires.
- 3 Fit the connector over the twisted wires, and screw the connector in place until you feel a firmness.
- 4 Try gently to pull the connector off the wire; you can pull the connector off, carefully redo steps 1 and 2 above, and check again for a firm connection.
- 5 Connect the black wires in the same manner.
- 6 After the wires are connected, tuck them carefully inside the Outlet Box. And then slip the canopy over the crossbar and lock against the wall by screwing the finial onto the protruding nipple.

### Warning

Be sure the electricity to the wires you are working on is shut off—either the Fuse removed or the Circuit Breaker set at Off.

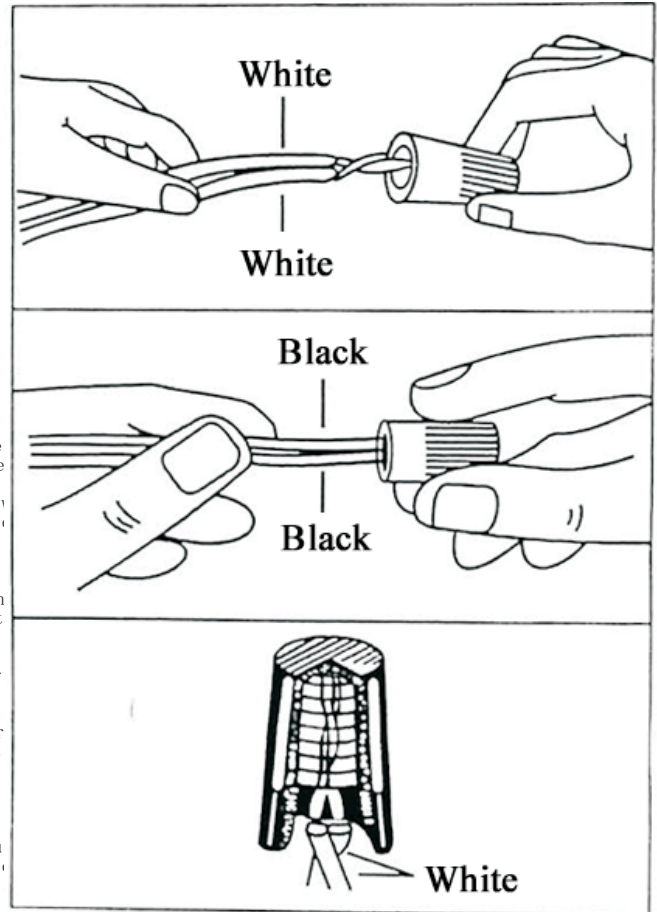


Figure 2-Wire Connectors

