
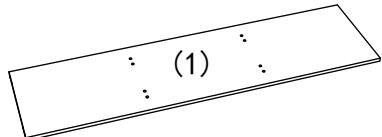
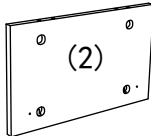


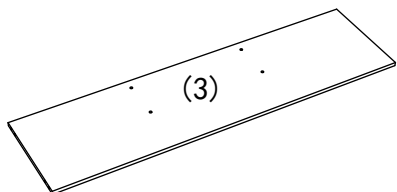


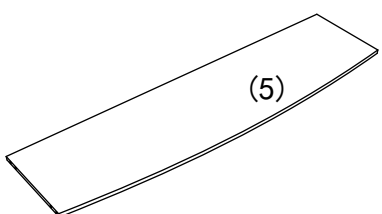



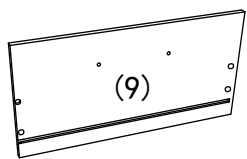

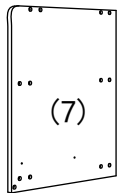

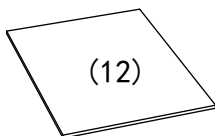


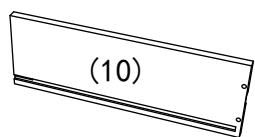
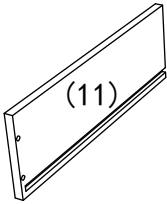
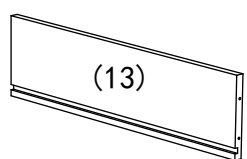

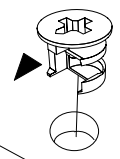
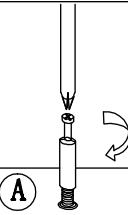
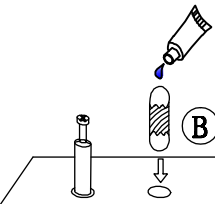
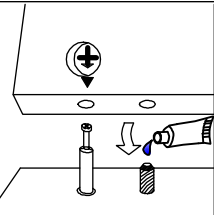
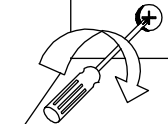


Hardware List	Panel List	
<p>(A) </p> <p>Cambolt & Camlock (32pcs)</p>	<p>(1) </p> <p>Bottom Panel (1pc)</p>	<p>(2) </p> <p>Large Divider Panel (2pcs)</p>
<p>(B) </p> <p>Wooden dowel (22pcs)</p>		
<p>(C) </p> <p>Cabinet Slide Rail CL (3pcs) CR (3pcs)</p>	<p>(3) </p> <p>Middle Panel (1pc)</p>	<p>(4) </p> <p>Small Divider Panel (2pcs)</p>
<p>(D) </p> <p>Drawer Slide Rail DL (3pcs) DR (3pcs)</p>	<p>(5) </p> <p>Top Panel (1pc)</p>	<p>(6) </p> <p>Foot Panel (1pc)</p>
<p>(E) </p> <p>Slide Rail Screw (18pcs)</p>	<p>(F) </p> <p>Long Screw (12pcs)</p>	<p>(9) </p> <p>Drawer Front Panel (3pcs)</p>
<p>(G) </p> <p>Drawer Cambolt & Camlock (12pcs)</p>	<p>(7) </p> <p>(8) </p> <p>Side Panel (2pcs) Left (7) Right (8)</p>	<p>(12) </p> <p>Drawer Bottom Panel (3pcs)</p>
<p>(H) </p> <p>Handle (3pcs)</p>		
<p>(I) </p> <p>Handle Screw (6pcs)</p>	<p>(10) </p> <p>(11) </p> <p>Drawer Side Panel (6pcs) Left (10) Right (11)</p>	<p>(13) </p> <p>Drawer Back Panel (3pcs)</p>
<p>(J) </p> <p>Glue tube (1pc)</p>		

Assembling the unit with camlocks and wood dowels.

				
<p>Insert camlock and camlock must face bolt hole</p>	<p>Gently screw cam dowel into the threaded anchor</p>	<p>Lightly glue one end of wood dowel and tap into hole.</p>	<p>Lightly glue dowel and connect to second panel by inserting dowels into holes</p>	<p>Gently screw the cam clockwise into locked position. Do not overtighten.</p>