



step4

Attach cambolts and camlocks (A) to Middle Panel (3).

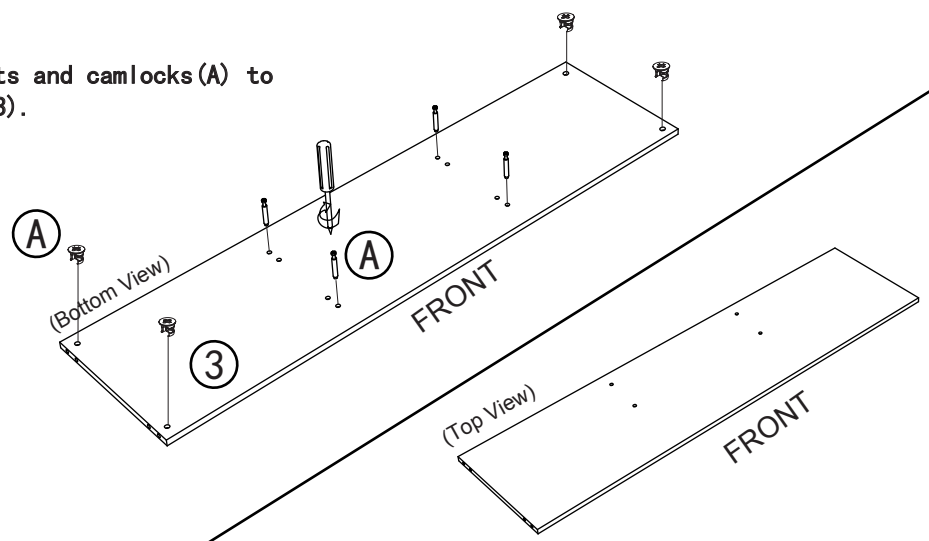

step5

1. Place Middle Panel (3) onto assembly and gently tighten camlocks.
2. Attach Cambolts (A) to Middle Panel (3).

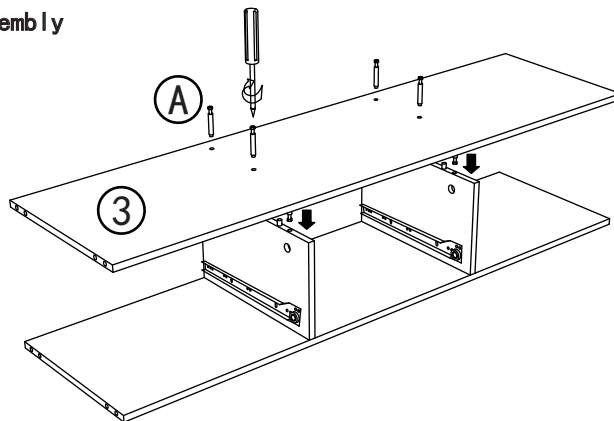

step6

1. Attach Camlocks (A) on Small Divider Panels (4).
2. Connect both Small Divider Panels (4) to the Middle Panel (3).
3. Gently tighten camlocks.

