

Counselor Assembly Instructions

Tools Required:
- NONE

Hardware Included:
- 6 T-Shaped Screws

Top Section


- Line up 3 holes on each Section
- Insert Black Plastic T-Shaped Screw in **BOTTOM** of each section



Mid Section


Base Section

Three Holes

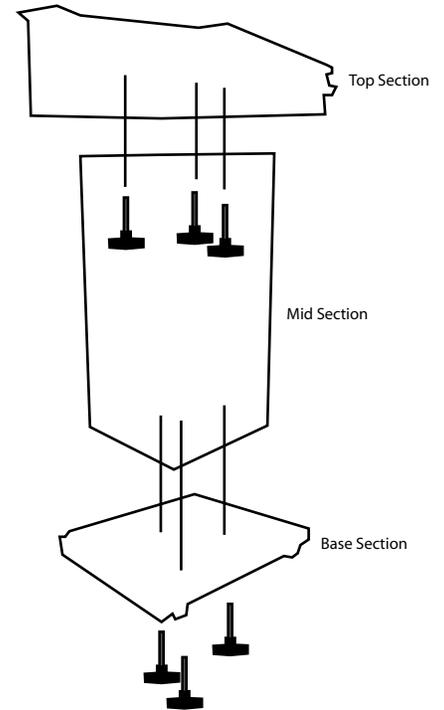

top surface

bottom surface

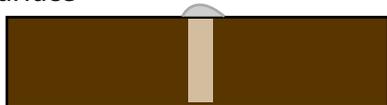

Three Holes