

ASSEMBLY INSTRUCTIONS

ITEM NO : 1390-7/1390-8

ARMOIRE TOP AND BASE

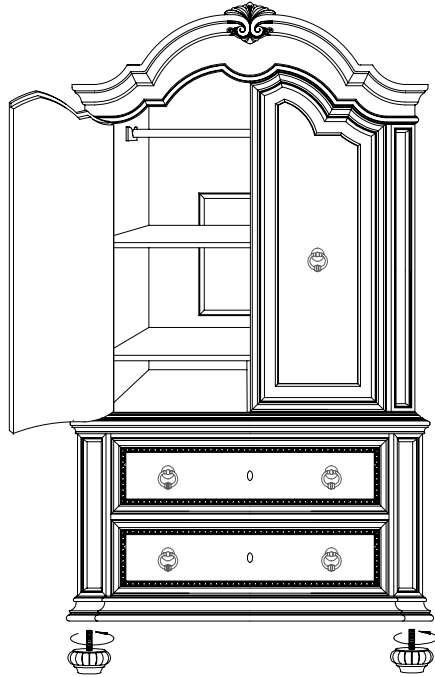


Fig. 1

Note: Adjust levelers on feet to ensure armoire is level and to allow proper operation of doors.

LIST OF HARDWARE				
NO.	SKETCH	DESC	SIZE	Q'TY
A		Screw	8#*5/8"	2 Pcs

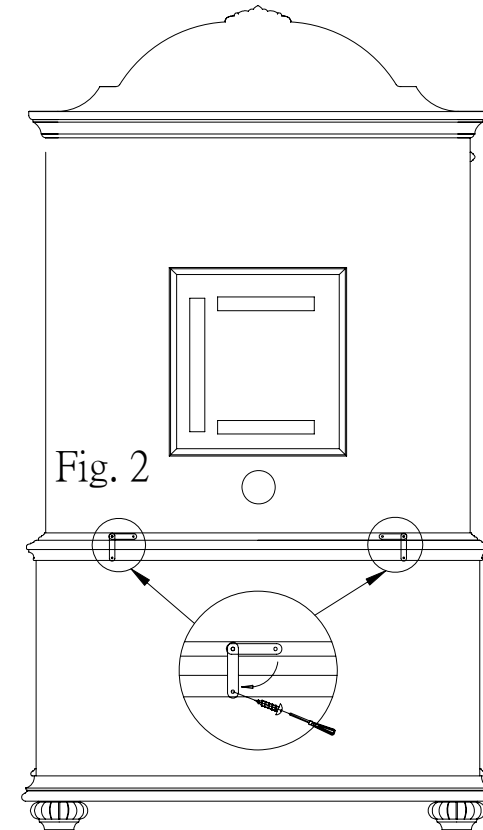


Fig. 2

1. Take out bun feet from drawer, install into base by turning anticlockwise as shown in Fig. 1;
2. Put armoire top on the upside of armoire base; rotate the metal plate on the back of base, then insert wood screws A and tighten properly as shown in Fig. 2:

MADE IN CHINA