


ASSEMBLY INSTRUCTIONS

ITEM NO:1390-9

CHEST

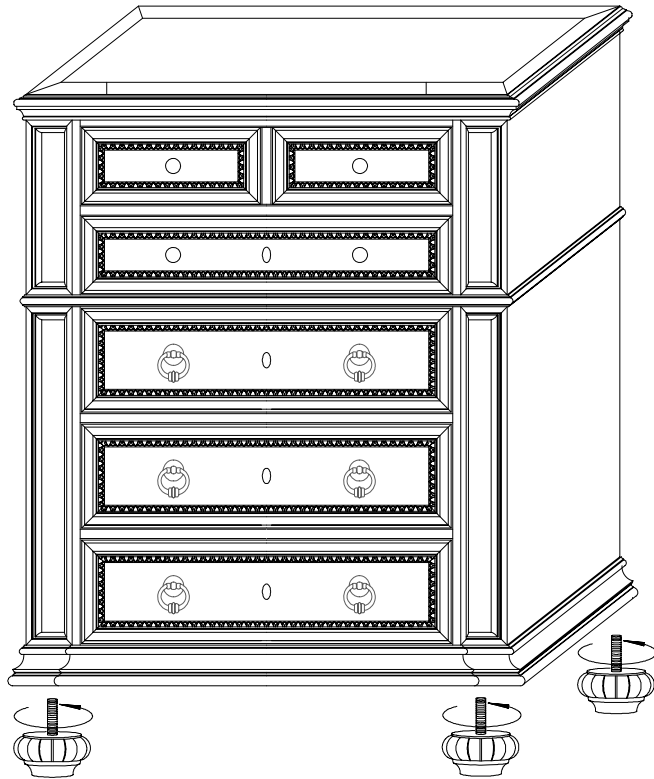

1. Take out bun feet from drawer.
2. Install bun feet into the base by turning anticlockwise.

MADE IN CHINA