
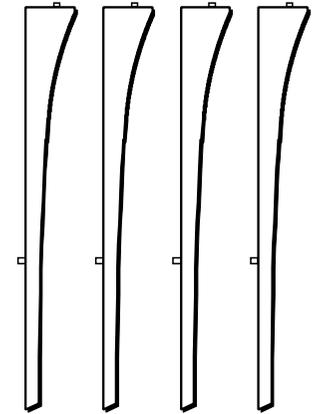
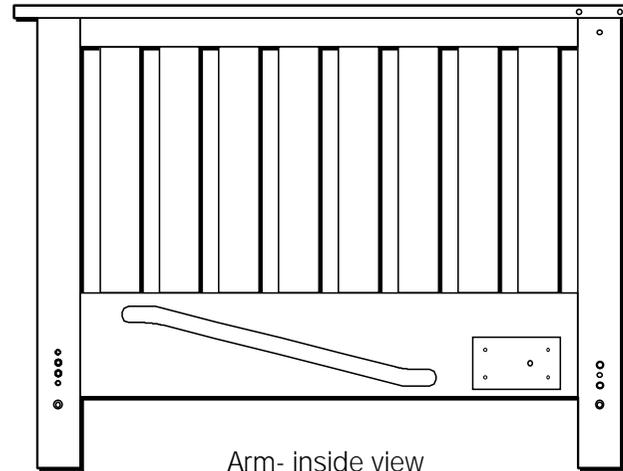


Strata Furniture
Mission Rim


MR 0901

1A Parts in the Arm Box:

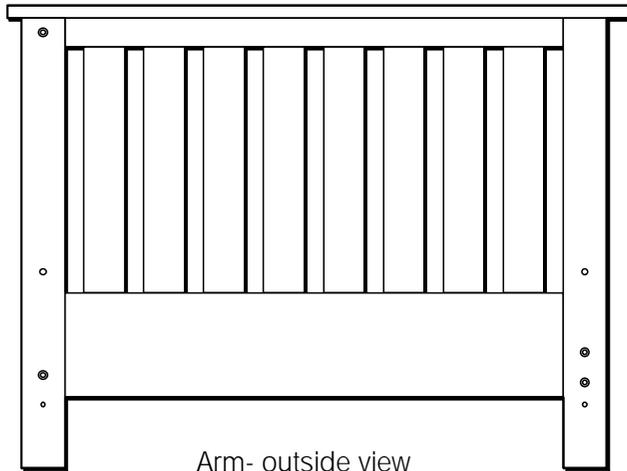


Corbels **x 4**


1B Parts in the Body Box:

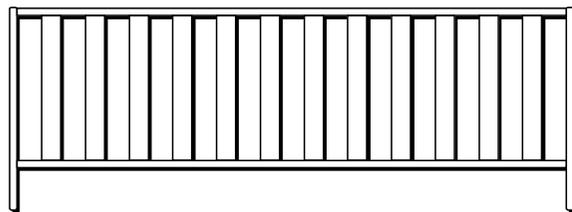

Back Deck **x 1**

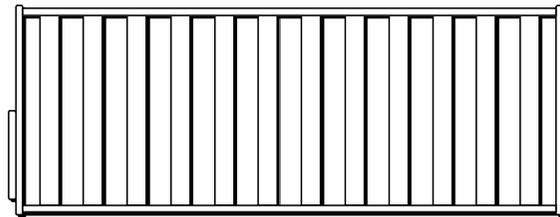


Seat Deck **x 1**
with the Feet attached

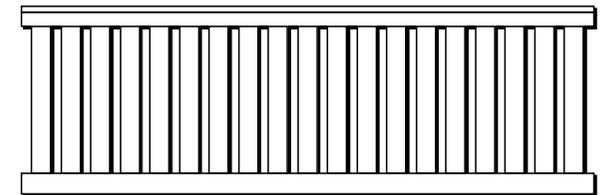

Back Panel **x 1**



Stretcher **x 1**



Foot Connector Bar **x 1**




Advance Arms **x 2**

Strata Furniture
Mission Rim

MR 0903


2A Hardware in this Box:



Long Bolts (80mm) **x 8**
For the Stretcher and Back Panel



Short Bolts (50mm) **x 4**
For the Corbels



Short Bolts (60mm) **x 6**
*For the Advance Arms
 and the Foot Connector Bar*




Barrel Nuts
x 8



Long Clevis Pins
x 2



Short Clevis Pins
x 2




Washers
x 8




Locking Pins
x 4



Wooden Dowel
x 4



Screw
x 4

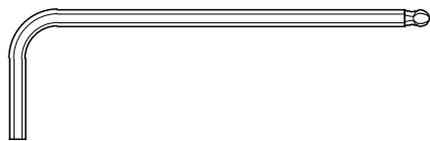


Long Allen Key
x 1




Plastic Runner
x 2



Bungies **x 2**




Sleeve **x 2**

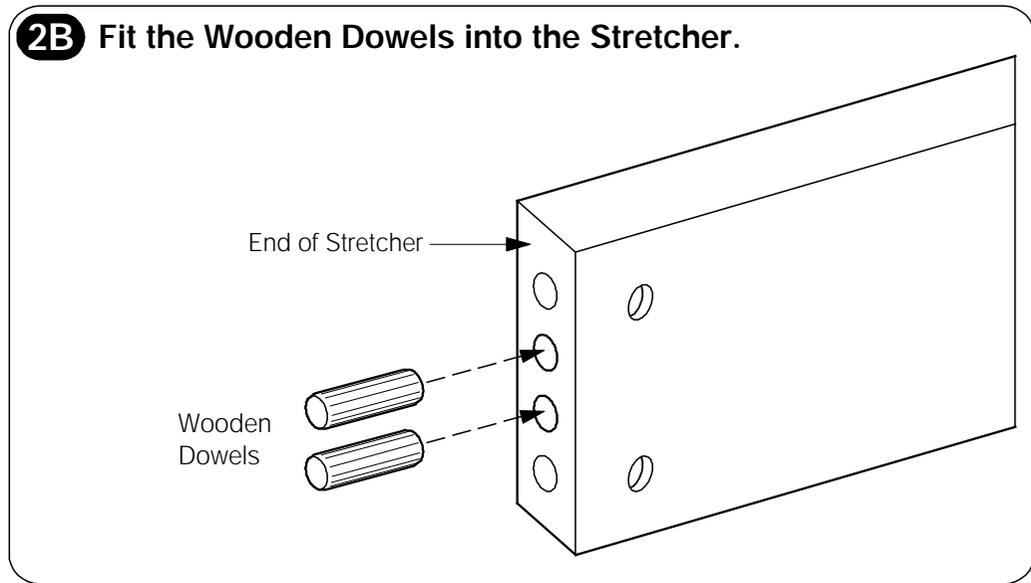

Strata Furniture
Mission Rim

MR 0901


3A Assemble the Back Panel between the Arms.

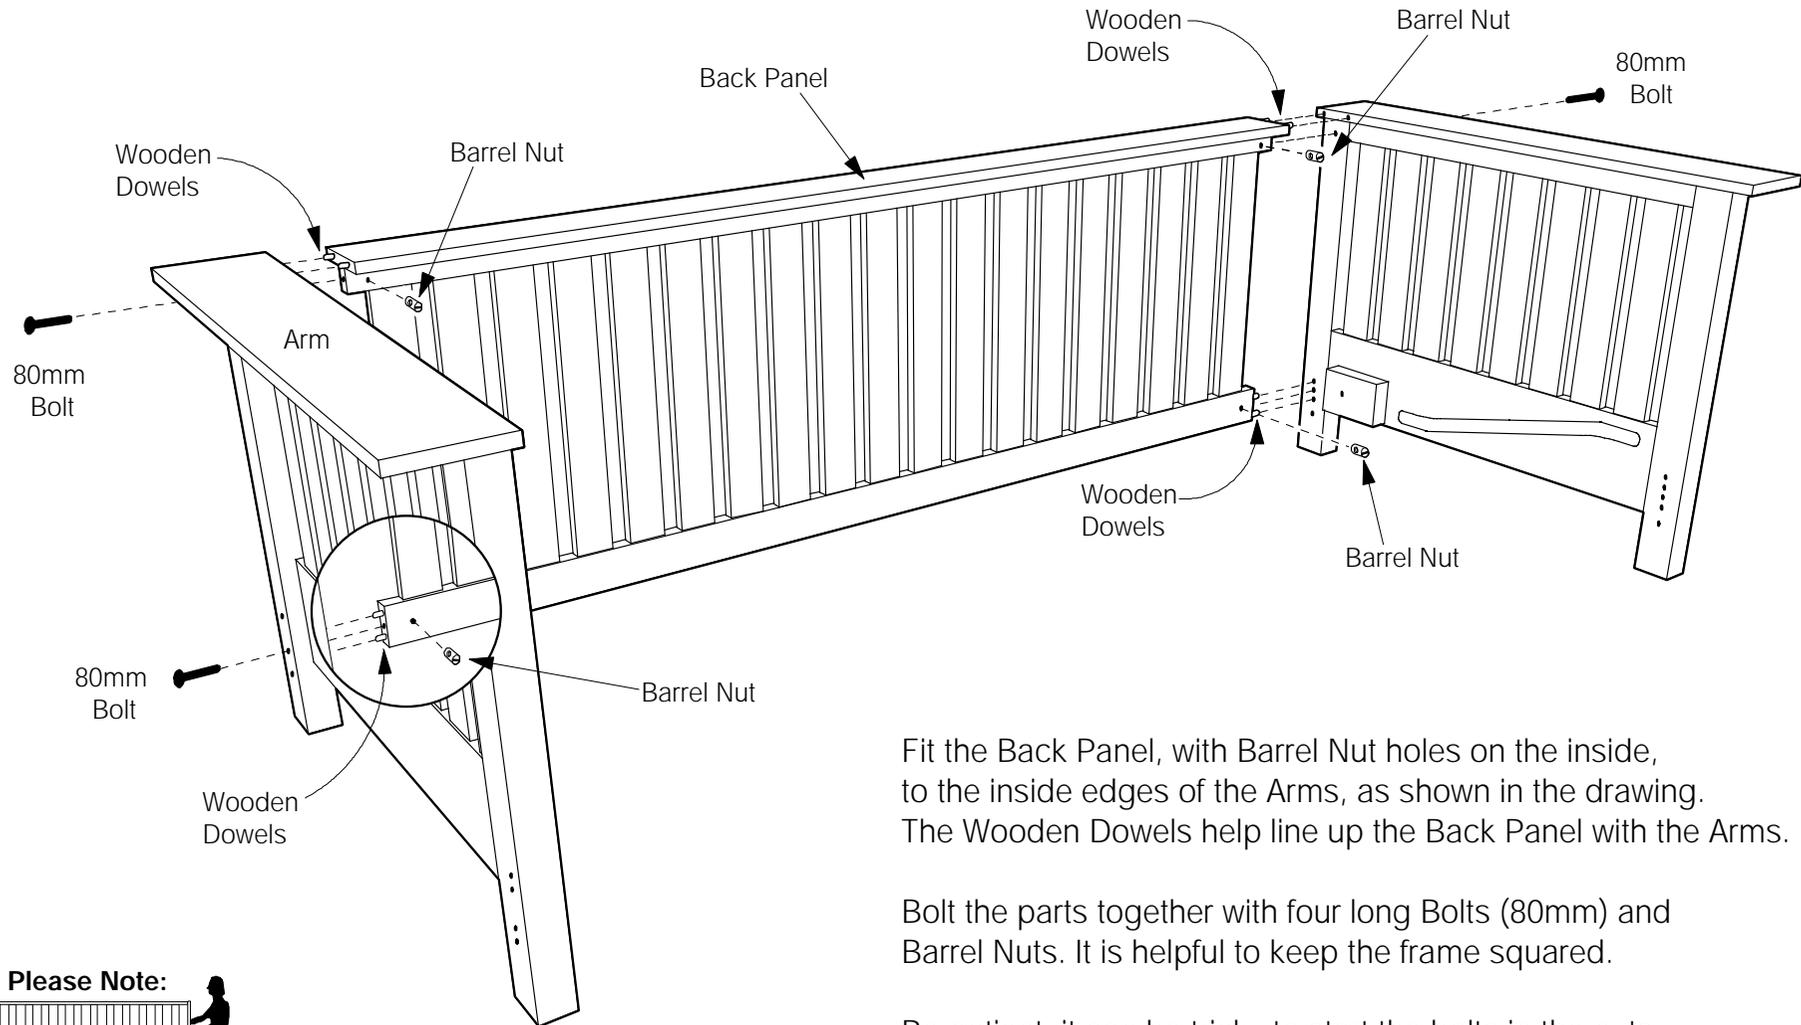

Fit the Back Panel, with Barrel Nut holes on the inside, to the inside edges of the Arms, as shown in the drawing. The Wooden Dowels help line up the Back Panel with the Arms.

Bolt the parts together with four long Bolts (80mm) and Barrel Nuts. It is helpful to keep the frame squared.

Be patient, it can be tricky to start the bolts in the nuts - A screw driver will help you line up the Barrel Nut with the Bolt. Drive the Bolts in until they just catch the Nuts.

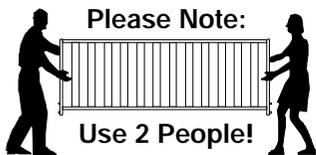


Please Note:

Use 2 People!

Strata Furniture
Mission Rim

MR 0901

4A Assemble the Stretcher between the Arms.

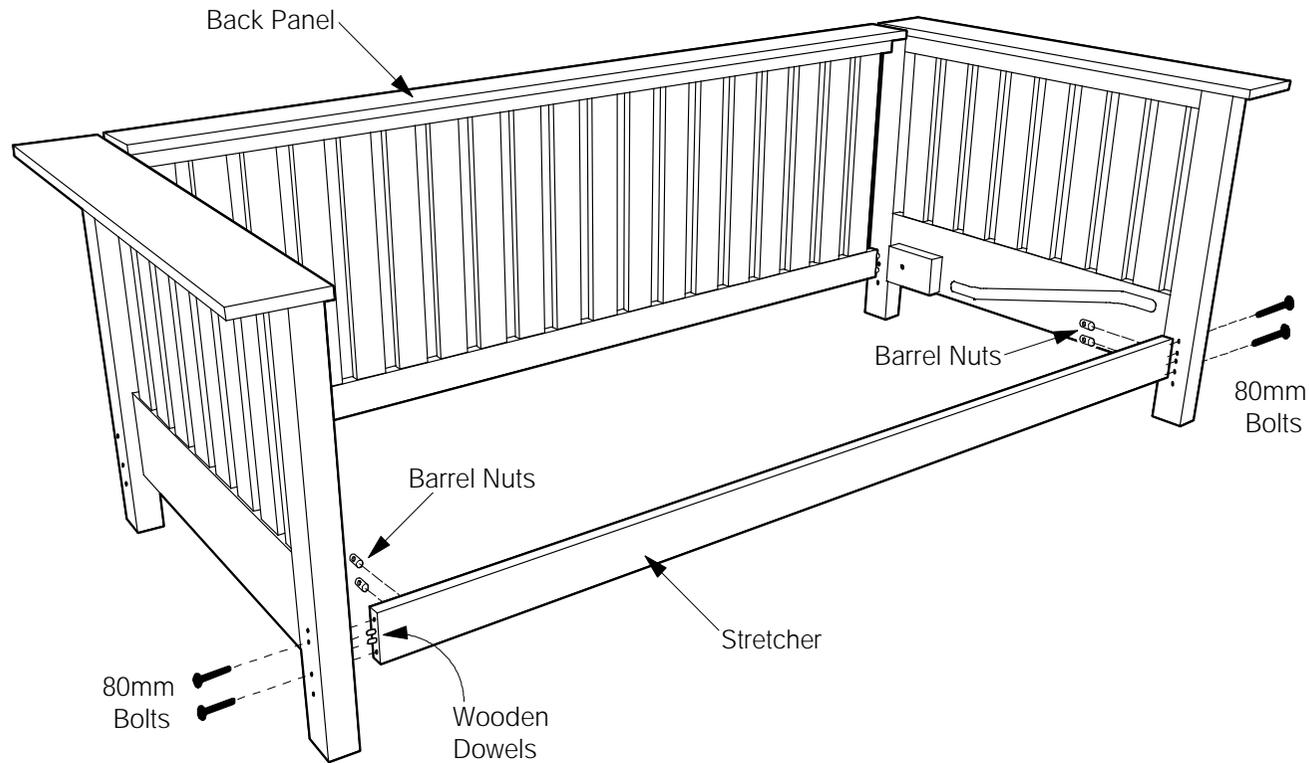


Fit the Stretcher, with the Barrel Nut holes on the inside, to the inside edge of the Arms.


Bolt the parts together with four long Bolts (80mm) and Barrel Nuts.

Drive the Bolts in until they just catch the Nuts.

4B Attach the Advance Arms to the Arms

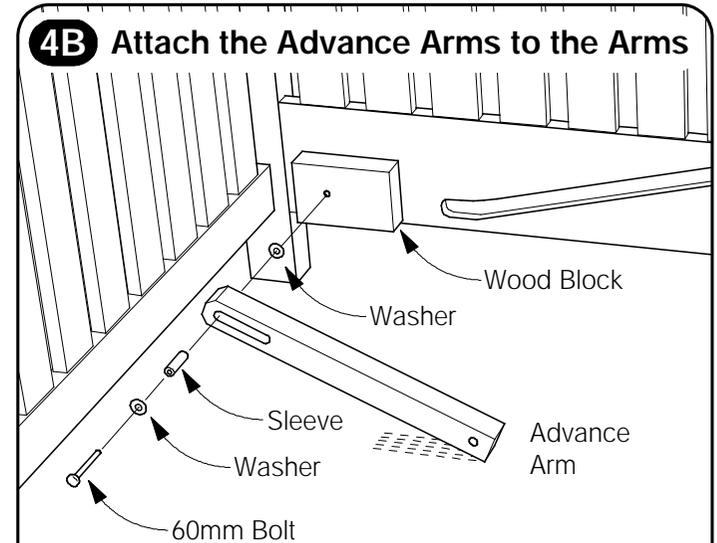

The slotted end of the Advance Arm attaches to the little wood block at the back of the Arm. Slip a washer and Sleeve over the Bolt, and pass it through the slot. Add another washer and fix it to the Arm. Tighten the Bolt. Be sure that the Advance Arm moves freely. Rotate the Advance Arm so that is pointing up.

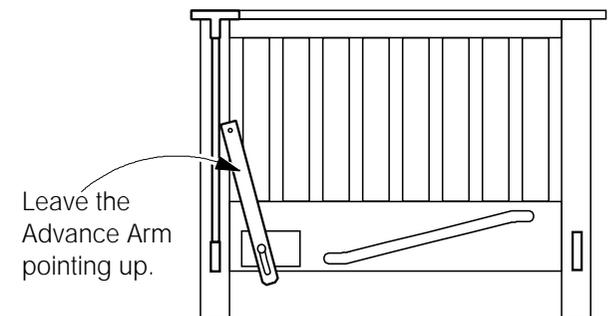


Strata Furniture Mission Rim


MR 0901

5A Assemble the Bungies under the Seat Deck.

Lay the Seat Deck sticker-side down.

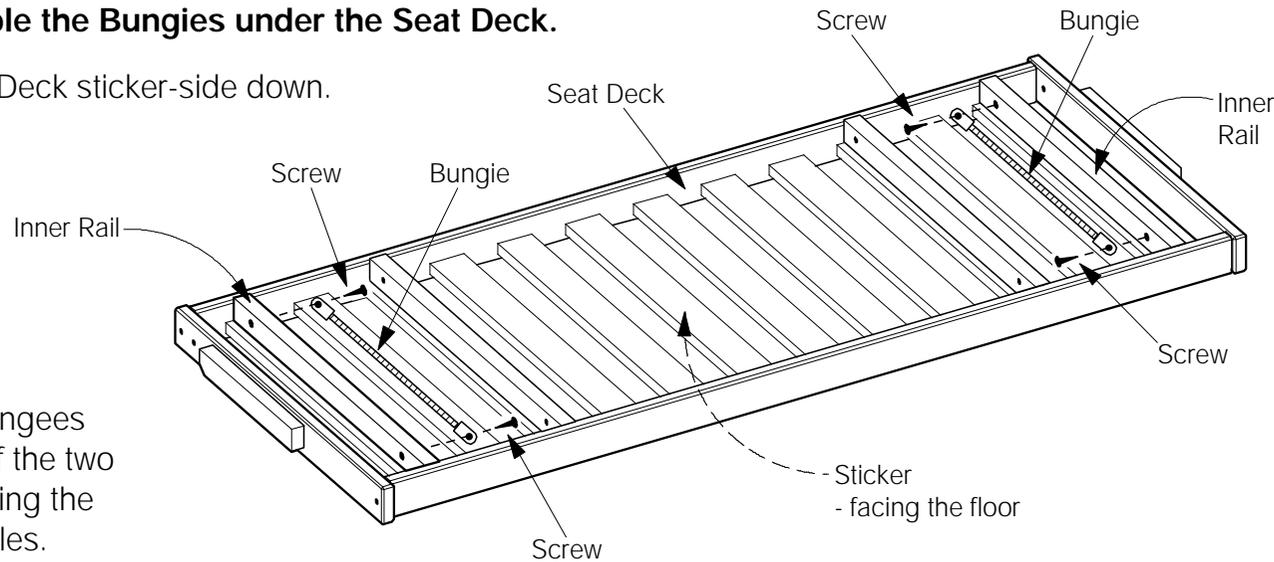


Screw the Bungies to the side of the two inner rails, using the pre-drilled holes.

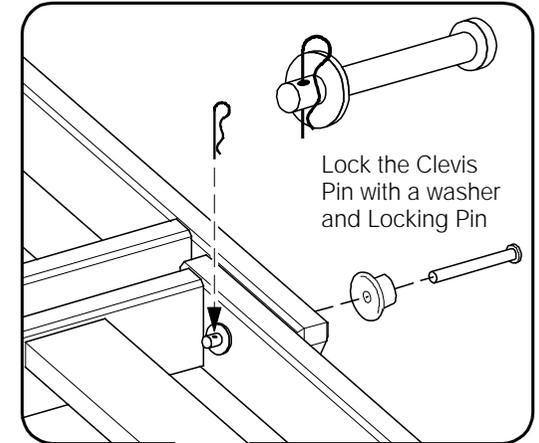

5B Join the Seat and Back Decks together.

Lay both Decks out flat on the floor with the stickers facing upwards.

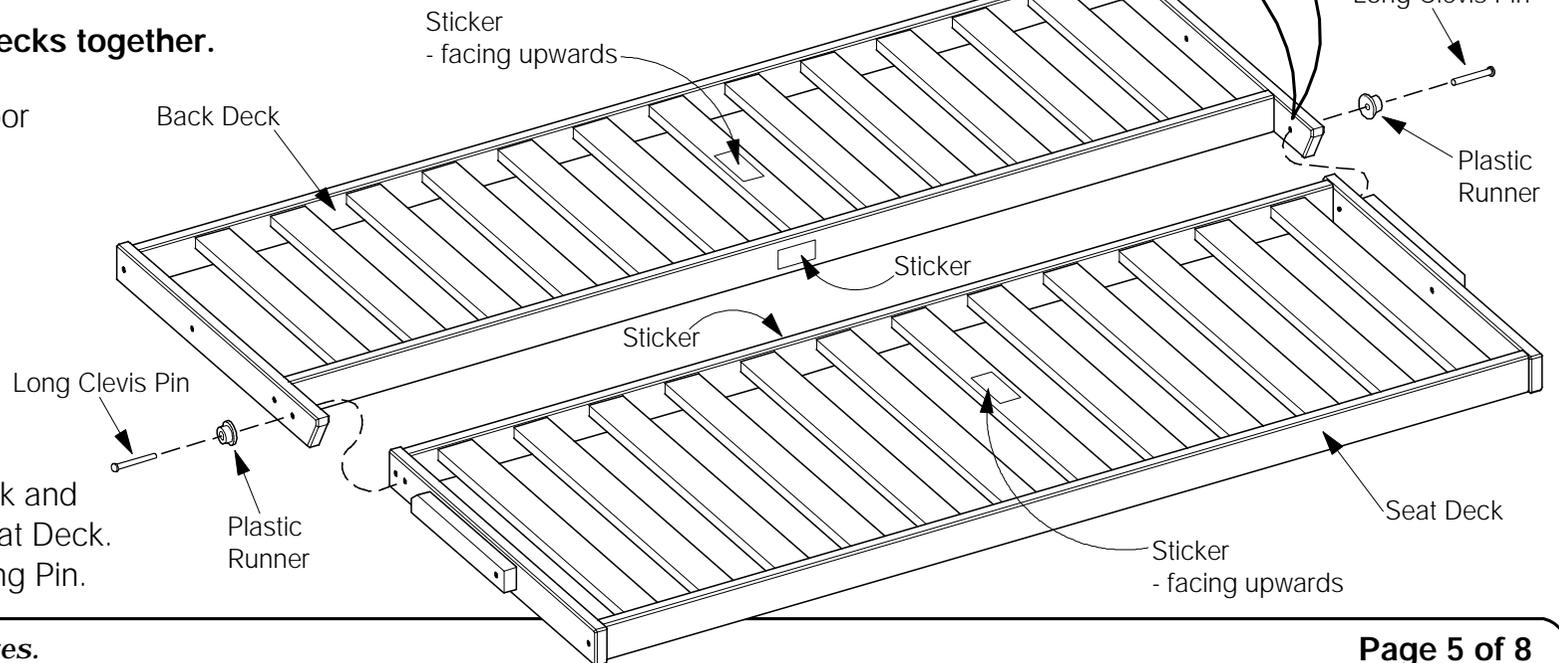


The Seat Deck fits inside the Back Deck as shown. Slip the Long Clevis Pin through the small end of the Plastic Runner, through the hole in the Back Deck and the corresponding hole in the Seat Deck. Secure with a Washer and Locking Pin.


Strata Furniture
Mission Rim

MR 0901

6A Fit the Seat and Back Decks to the Frame.

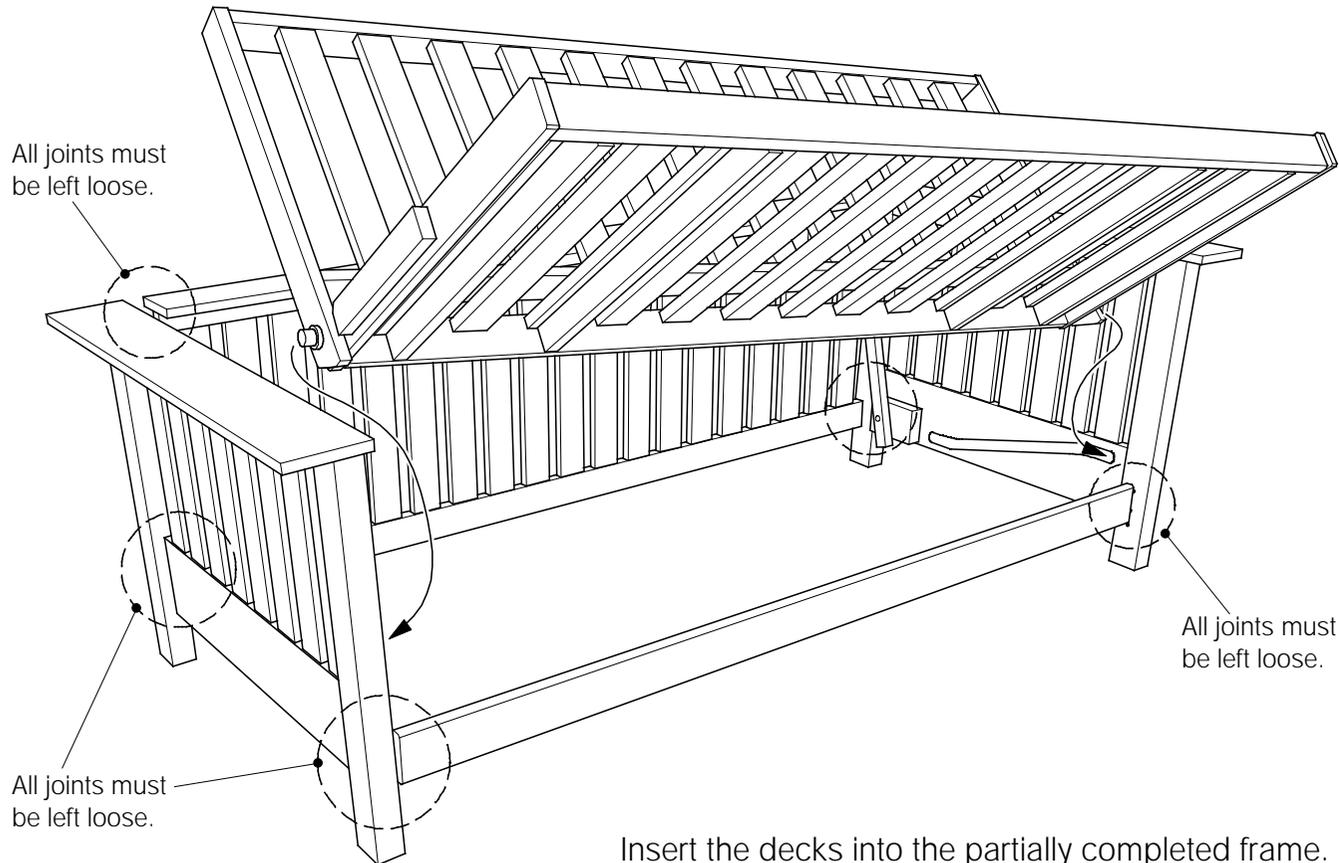

Insert the decks into the partially completed frame. This is where a helper may be useful.

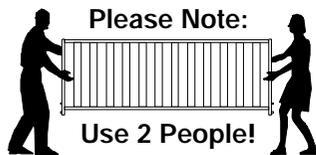


When the guides are in the grooves in the Arms, slide the assembly to the back of the frame.


Tighten all Stretcher and Back Panel Bolts.

6B Connect the Advance Arms to the Back Deck.

Carefully pass a Short Clevis Pin through the Arm into the Hole in the Back Deck. Align with the hole in the Advance Arm, and join them together.

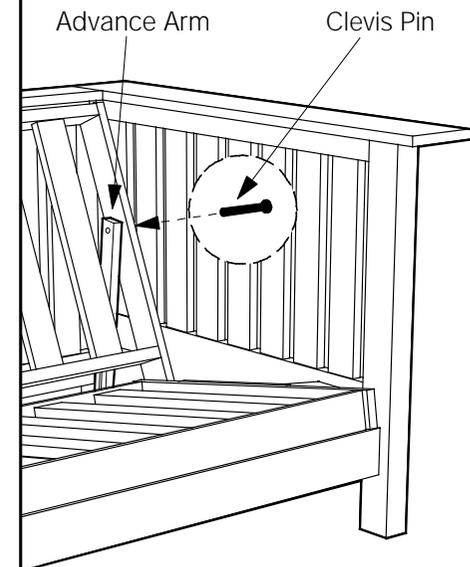


Secure with a Washer and Locking Pin.

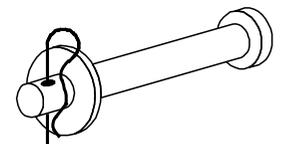

Strata Furniture
Mission Rim

MR 0903

7A Attach the Connector Bar to the Legs.

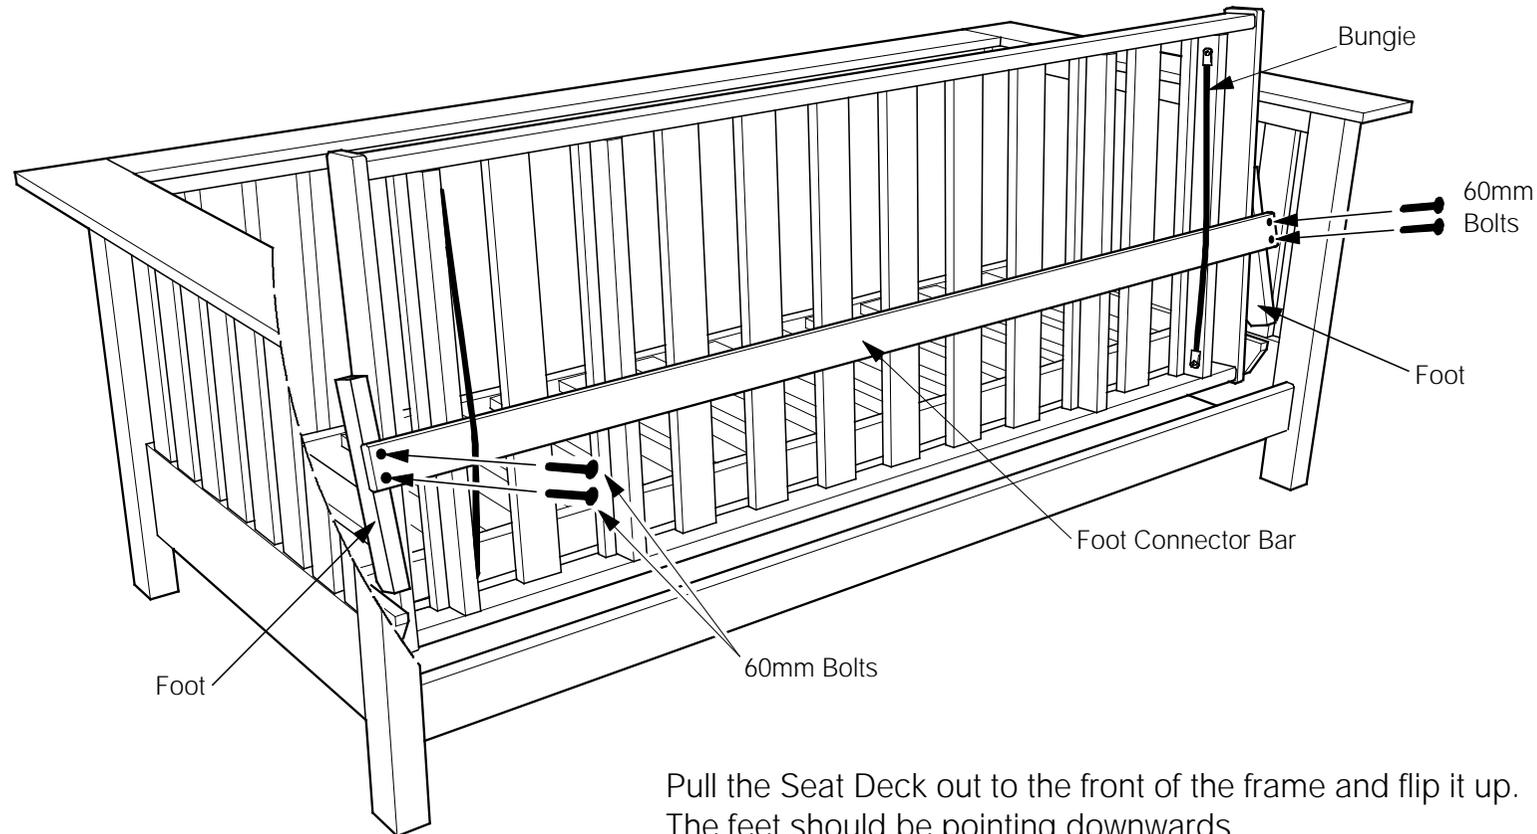

Pull the Seat Deck out to the front of the frame and flip it up.
The feet should be pointing downwards.

Work the Foot Connector Bar under the Bungees, and line up
the holes between the Connector Bar and the Legs. Make sure
the recess for the head of the Bolt is facing outwards.


Use four short Bolts (60mm) and bolt it in place.

Strata Furniture Mission Rim

MR 0903

8A Attach the Corbels to the Arms.

Fit the dowel at the top of the Corbel into the hole on the underside of the Arm, and then fit the other dowel into the side of the Arm.

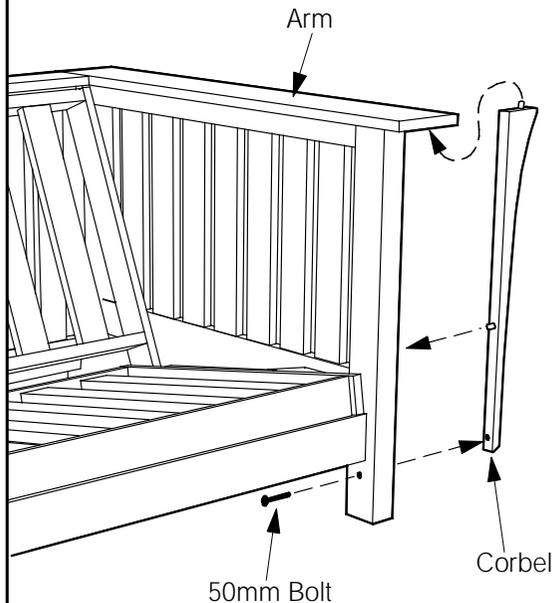

Secure with a short Bolt (50mm) from the inside of the Arm at the bottom. Tighten until the Corbel is snug.

Note:

**Never lift the frame by the arm caps -
Always lift from the bottom of the arms.**

Operating Instructions: *To convert into couch position:*

- Remove any pillows and other obstructions.
- Lift up the seat deck into a vertical position.
- Resting seat deck on your hip, push the foot connector down all the way so that the foot connector touches the side rail - *It is Very Important* that the feet are in proper position - see diagram.



- With one hand lightly push the seat deck down and with other hand pull on the back at the back of the mattress. Push the seat deck in all the way.
- **DO NOT FORCE** - the frame should operate easily.

Operating Instructions: *To convert into bed position:*

- Lift up the seat deck into a vertical position.
- Resting seat deck on your hip, rotate the foot connector towards you until the feet are fully extended.
- Set the frame down gently.