

# PANDORA

FR42404BRC

Bulbs: 60W CAND.

Replacement Parts: SHADE: R42404SH

## ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first determining the length of stems required, attaching the mounting strap to the junction box, making all necessary electrical connections, hanging the fixture from the ceiling and then installing the fixture shade.

**SAFETY WARNING:** Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.


### STEP 1

- 1 Slip candle sleeves (1) over sockets (S) - see Drawing 1.
- 2 To install cage (2), slip shade into cage assembly (C) from the bottom.
- 3 Now align holes in shade tabs (A) with holes in cage assembly arms (B).
- 4 Slip flat head screw (3) through the previously aligned holes from the bottom and thread on ball knob (4) to secure shade.
- 5 Fixture can be lamped accordingly at this point.


### STEP 2

- 1 Determine the overall length you will need the assembled fixture to be.
- 2 Determine what stems will be needed to achieve the overall length you require. (Additional stems are available and can be ordered. Ask your local Fredrick Ramond representative or visit [www.fredrickramond.com](http://www.fredrickramond.com) for information).
- 3 Install first stem (B), threaded end first, by slipping it along the supply wires and and threading it into coupler (A) - see Drawing 2.
- 4 Continue adding stems (C) in this fashion until the desired length is achieved.
- 5 To complete fixture installation, please refer to mounting instruction sheet [S-19-91] supplied and then refer back to this sheet for instruction on completing the fixture assembly.

[DRAWING 1]

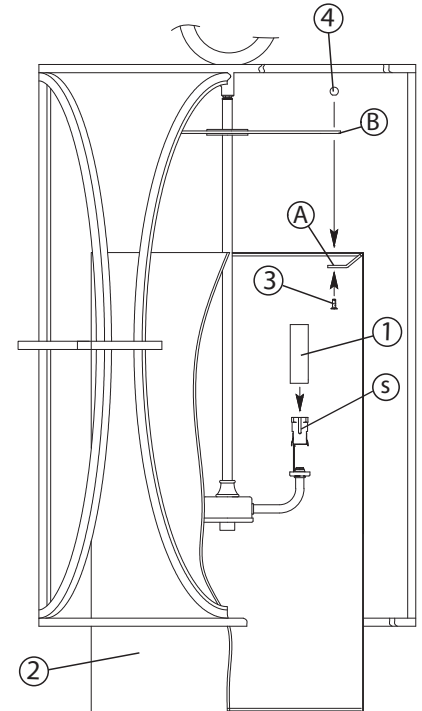

[DRAWING 2]

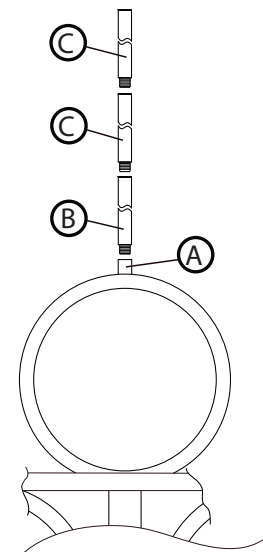

FREDRICK RAMOND  
ESTABLISHED 1965

800.421.3517 WWW.FREDRICKRAMOND.COM

01.01.12