


REV DATE: 06/15/2011

ASSEMBLY INSTRUCTIONS  
SABRINA 30" STOOL

LOOSELY ATTACH EACH BOLT UNTIL FRAME IS ASSEMBLED THEN TIGHTEN WHEN COMPLETE


1

1) Attach the chair top to base by screwing the top to swivel plate using 4pcs cross head bolts (A), 4pcs lock washers (B) and 4pcs flat washers (C) as shown. Tighten all bolts evenly and then turn each bolts 1/4 turn evenly for final fasten.

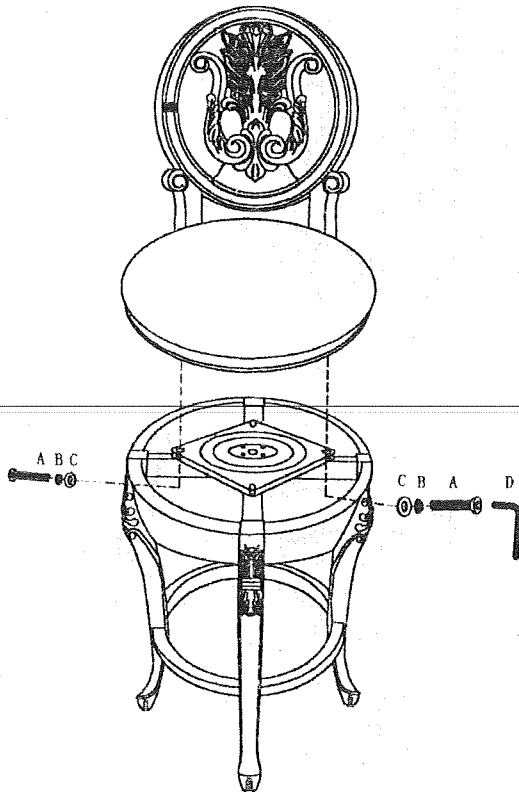

2

2) Assembly is complete.

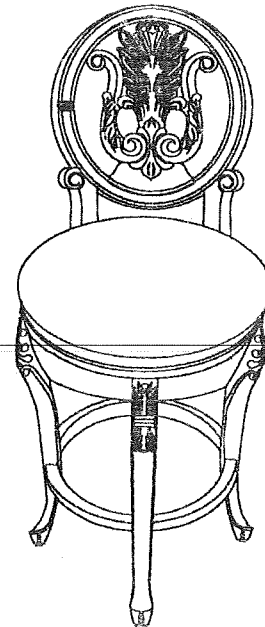

HARDWARE PACK

MADE IN CHINA

CHECK THAT THE FOLLOWING PARTS ARE IN CARTON

A



Cross head bolt  
1/4"\*1 1/4"L 4PCS

B



Lock washer  
1/4" 4PCS

C



Flat washer  
Ø16\*1.2mm 4PCS

D



ALLEN WRENCH