


ASSEMBLY INSTRUCTIONS:

ITEM NO.: BO-2007TB

1. Carefully unpack and lay out the parts as shown in illustration.
2. Screw part (B) onto base (A), tube (C) onto part (B), socket section (D) onto tube (C).
3. Screw stem (E) onto socket section (D).
4. Put shade (F) onto stem (E), adjust the location to be horizontal and tighten it with finial (G).

Your lamp now is ready to enjoy

**Use 2*60 Wattage (Maximum)
type A bulbs (Bulbs not included)**

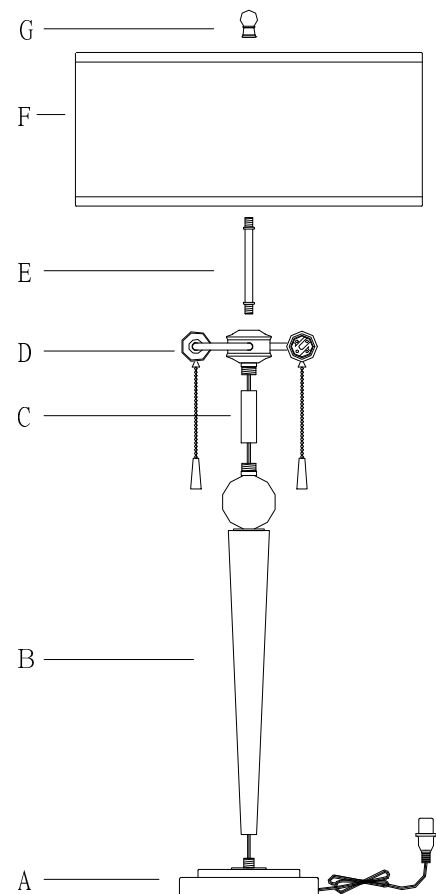

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

325966B