


## ASSEMBLY INSTRUCTIONS ITEM NO: BO-694

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER SKETCH.
2. SCREW THREADED STEM (B) INTO JUNCTION BOX OF BODY (A), PUT THE SHADE (NOT INCLUDED) ONTO STEM (B) THEN TIGHTEN VIA FINIAL (C).
3. **IMPORTANT CAUTION: ONLY SHADE MEASUREMENT SAME OR BIGGER THAN RIGHT DIAGRAM SHOWN CAN BE USED FOR THIS PORTABLE LAMP, ALWAYS KEEP SHADE POSITION SAME LIKE RIGHT LINE DIAGRAM TO AVOID ANY FIRE OR ACCIDENTS.**
4. INSTALL BULBS (NOT INCLUDED) INTO SOCKETS, INSERT THE POLARIZED PLUG INTO OUTLET, TURN ON THE BASE SWITCH AND ENJOY YOUR NEW LAMP.

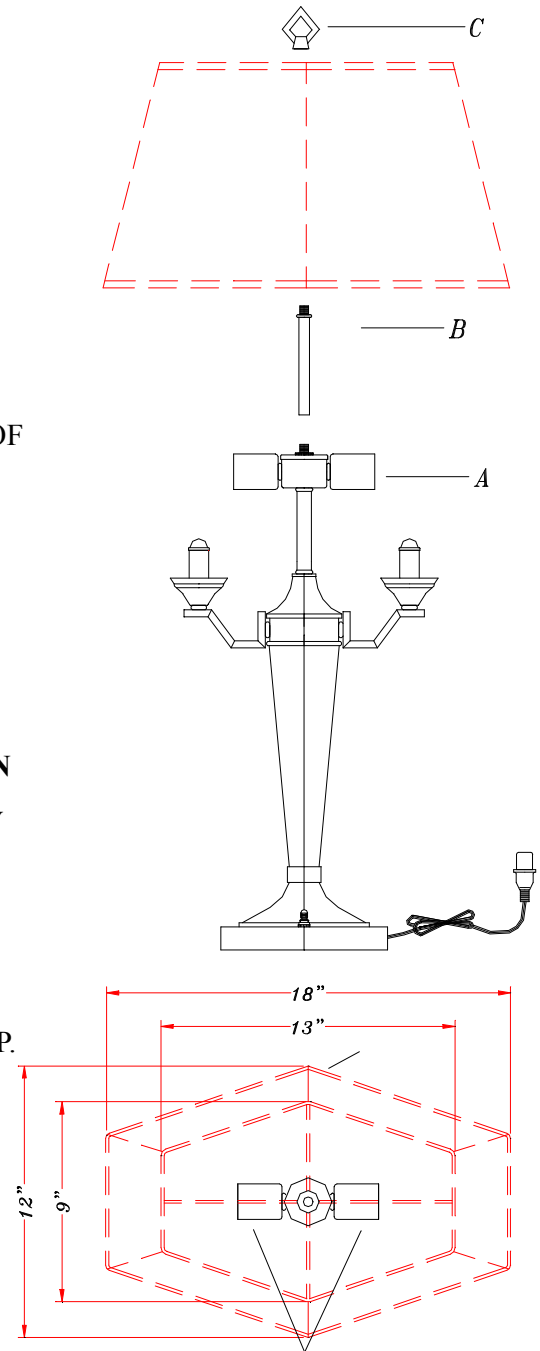

### IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

**324250B**