
ASSEMBLY INSTRUCTIONS ITEM NO: LA-694FL

- 1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
- 2. SCREW THE TUBE (B) ,(C) SOCKET PART (D), INTO THE BASE (A) IN TURN.
- 3. INSERT THE HARP (E) INTO THE SADDLE OF THE SOCKET PART (D).
- 4. PUT THE SHADE (NOT INCLUDED) INTO THE HARP(E),
 FIX IT WITH THE PLASTIC WASHER (F) AND FINIAL (G)
 AND THEN ADJUST THE SAHDE HORIZONTALLY.
- 5. INSERT THE POLARIZED PLUG INTO WALL OUTLET,
 TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

WATTAGE: 100W TYPE A (EX BULB)

IMPORTANT SAFETY INSTRUCTIONS:

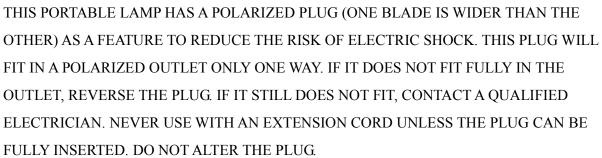

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

325415B

