


## ASSEMBLY INSTRUCTIONS:


### ITEM NO.: BO-2096TB

1. Carefully unpack and lay out the parts as shown in illustration.
2. Assemble shade well, refer to below instruction
3. Screw tube (B) to lamp body (A). .
4. Put mat (C ),shade (D) on tube (B) tighten it By finial (E).

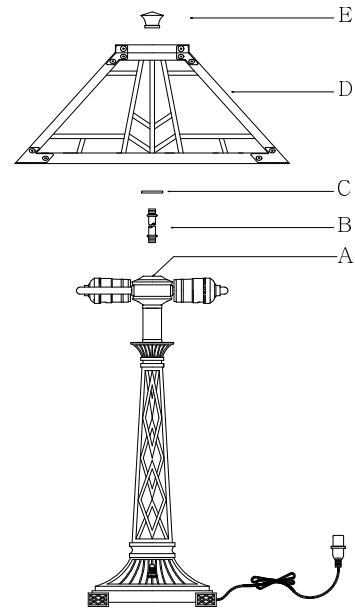


### SHADE ASSEMBLE INSTRUCTION

1. Carefully unpack and lay out glass (b),shade frame (a), refer to picture 1.
2. Put glass (b) into shade frame(a) with Front Label outside. press clip to tighten glass. If it can not be tightened by hand, use screw driver (C ) to press it.
3. The same way apply to other glasses.
4. Remove Front Label from glasses.

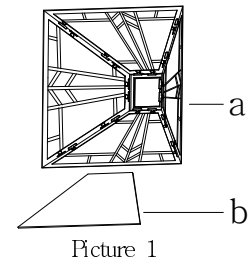

**Your lamp now is ready to enjoy**

**Use 2x60 Wattage (Maximum) type A bulb (Bulb not included)**

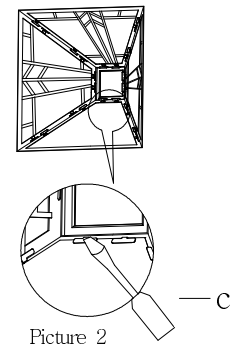

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**