






WILSHIRE BED

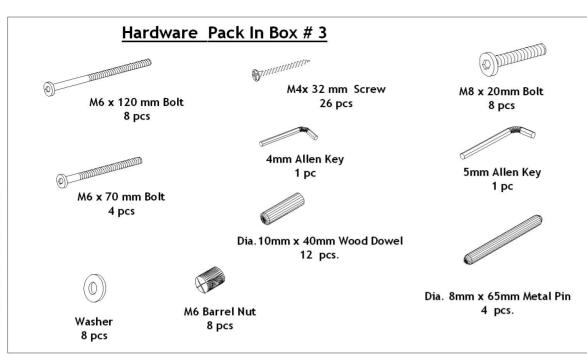


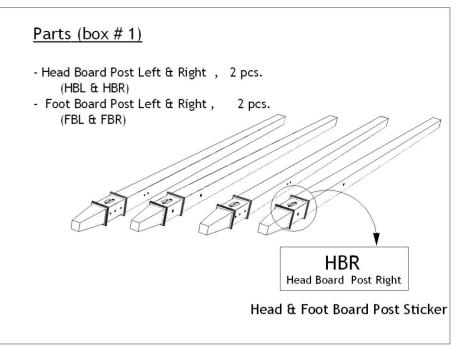


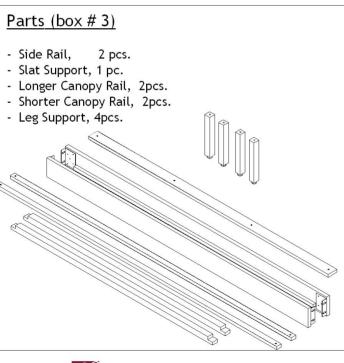

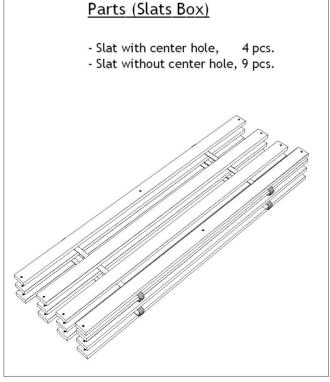

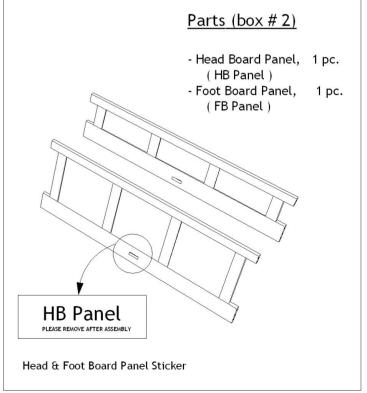

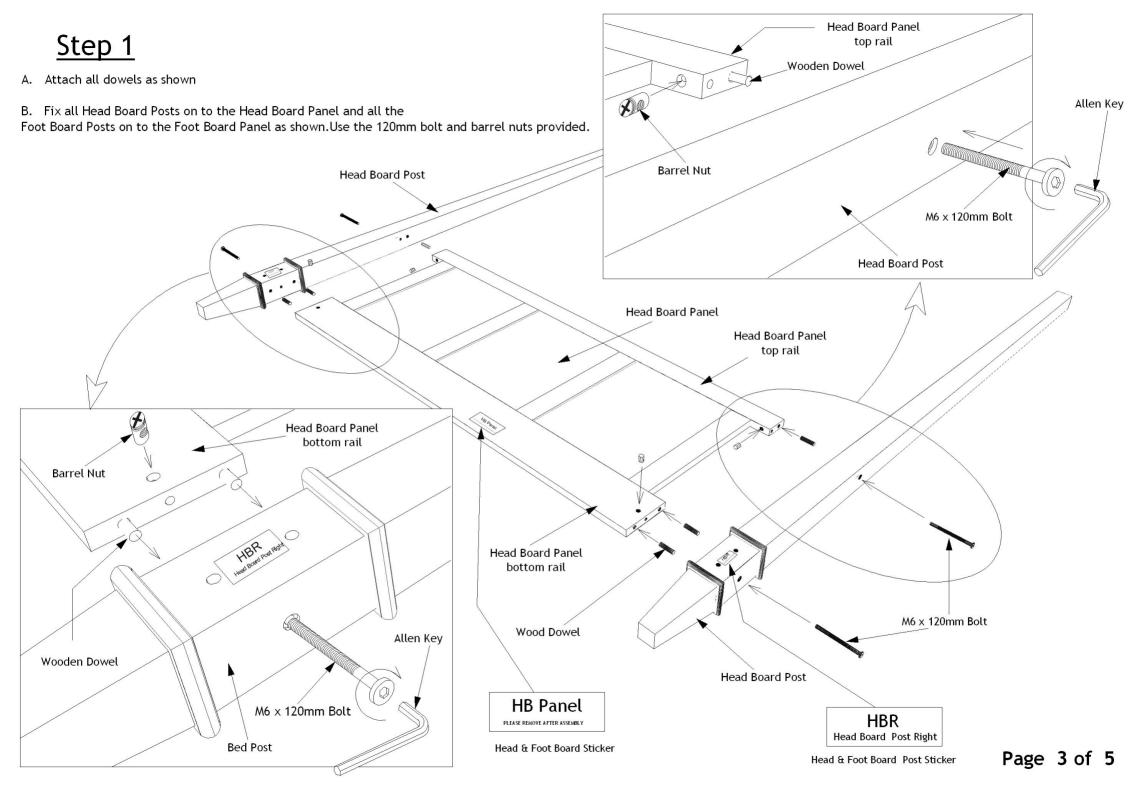

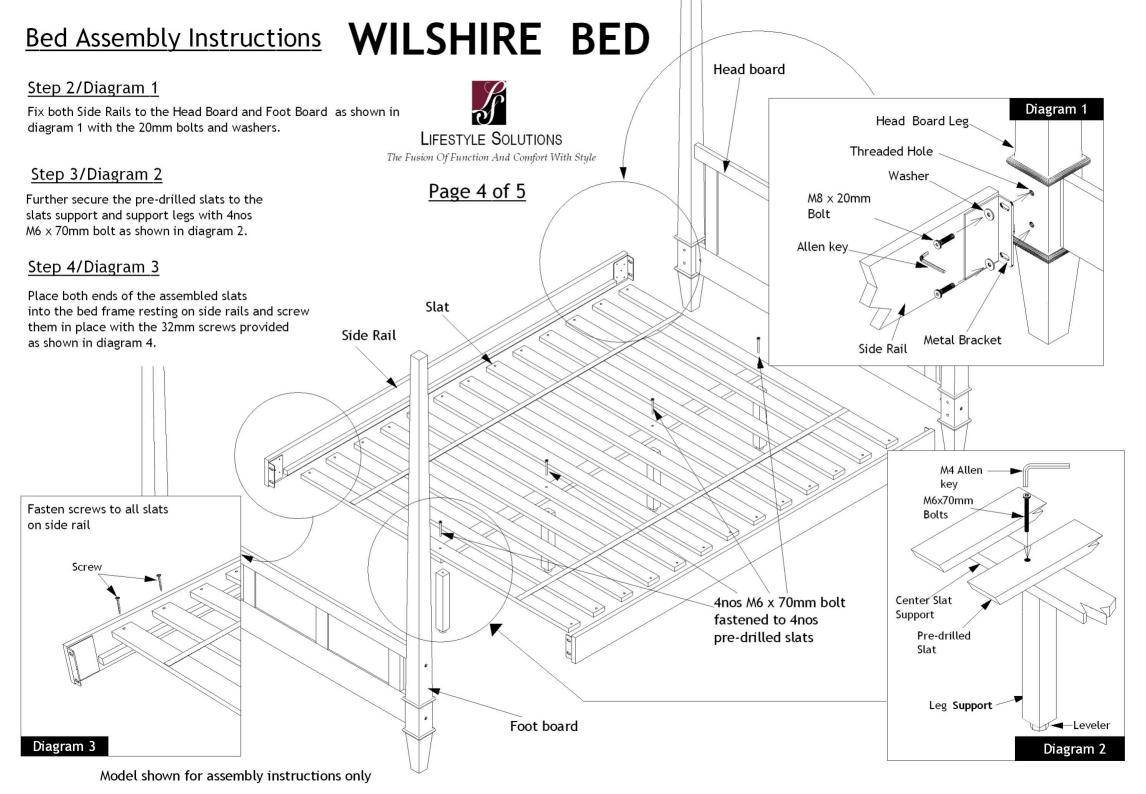

Bed Assembly Instructions WILSHIRE BED

Step 5/Diagram 4

Attach the metal pin onto hole on top of Head Board Post and Foot Board Post. Attach the shorter canopy rail on top of Head Board Post and Foot Board Post first, then attach the longer canopy rails as shown.



