


ASSEMBLY INSTRUCTIONS

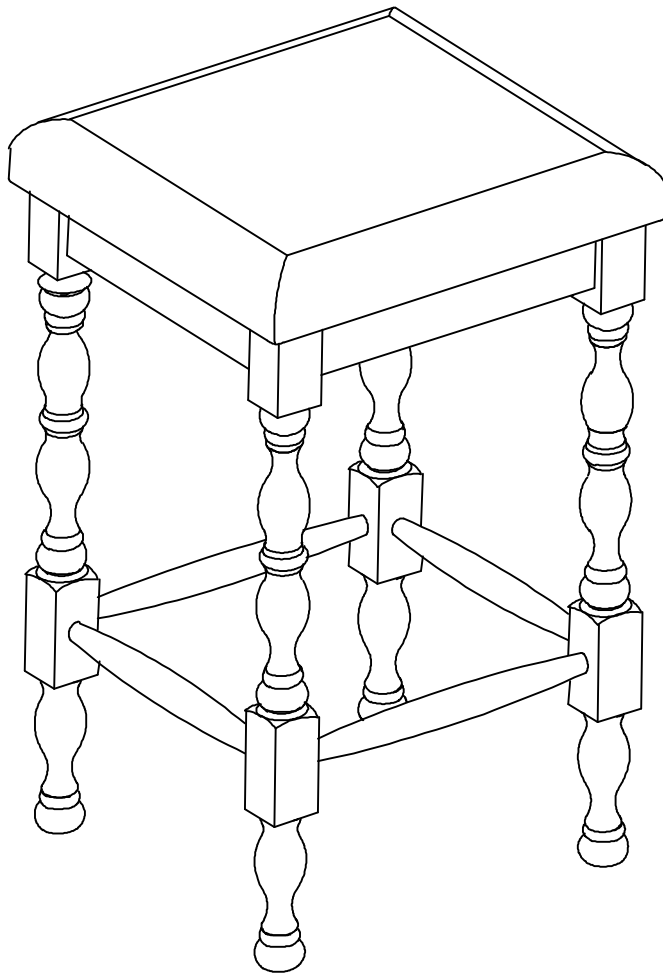

| | |
|-------------|---------------------------|
| Description | : OLDE WORLD TAVERN STOOL |
| Item No. | : S-002 |

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws, bolts until completely assembled.
- Keep all hardware parts out of reach of children.





ASSEMBLY TOOLS REQUIRED

NOT INCLUDED



PART LIST

When unpacking, please carefully not to discard any parts with the packaging. Before continuing, please make sure you have all of the following parts:

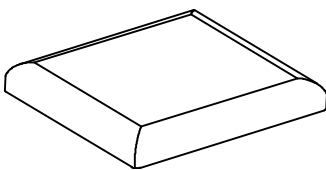




| NO | Description | Qty | Sketch | NO | Description | Qty | Sketch |
|----|-------------|-----|---|----|----------------|-----|---|
| A | Seat | 1 |  | B | Seat Frame | 1 |  |
| C | Leg | 4 |  | D | Side Stretcher | 4 |  |

ITEM NO.: S-002
ISSUED JAN 15, 2013

Printed in Vietnam


HARDWARE LIST

When unpacking, please carefully not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

| NO | Description | Qty | Sketch | NO | Description | Qty | Sketch |
|----|------------------------------|-----|---|----|------------------------------|-----|---|
| 1 | Short bolt (M6x60mm) | 8 |  | 2 | Lock Washer (Φ6.5 x 11mm) | 8 |  |
| 3 | Flat Washer (Φ6.5 x 19mm) | 8 |  | 4 | Wood Screw (M4 x 35mm) | 16 |  |
| 5 | Allen Key (4X80mm) | 1 |  | | | | |

STEP 1

Attach legs (C) to the seat frame (B) by using bolts (1), washers (2) and (3) tighten with allen key (5). Place side stretchers (D) between front and back legs. Attach stretchers with the screws (4) as shown below. Tighten with a screwdriver.

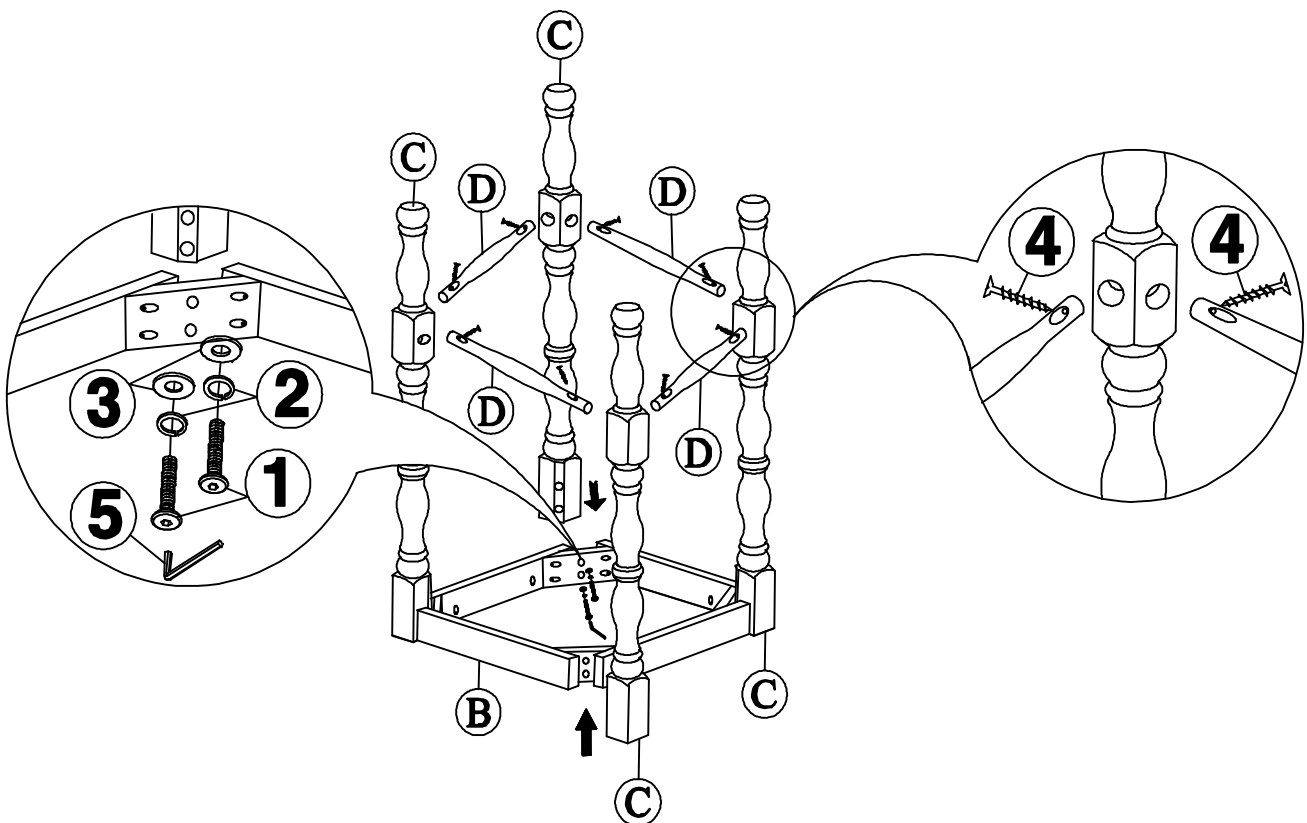

STEP 2

Attach the seat (A) to top of the seat frame (B) with screws (4) as shown below. Tighten with a screwdriver.

