

Model: CB5003, CB5004, CB5005, CB5006, CB5007, CB5008  
 CB5030, CB5033, CB5034, CB5036

### Drain Installation Guide

For ceramic Sinks without overflow above counter


#### Step 1

Position countertop opening to ensure clearance between the lavatory, faucet and backsplash.

Cut 1-3/4" hole for drain in countertop

See Figure 1.

Figure 1.

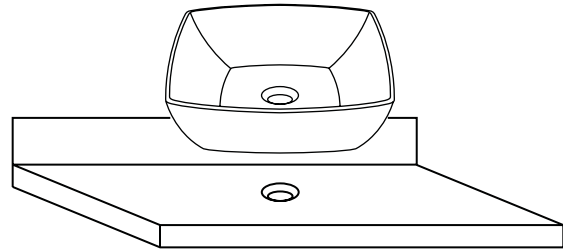


#### Step 2

Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

\*There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead.

See Figure 2.

Figure 2.


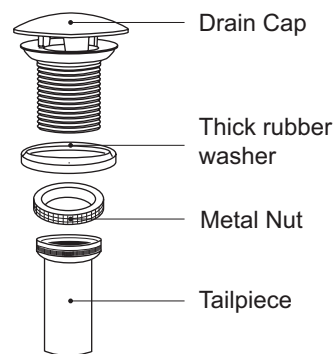


#### Step 3

From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

See Figure 3

Figure 3

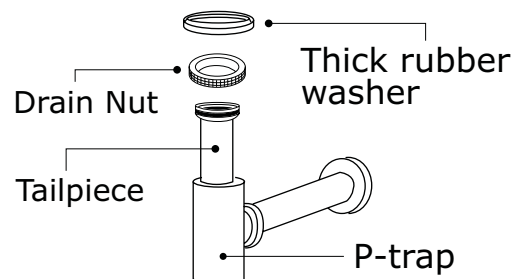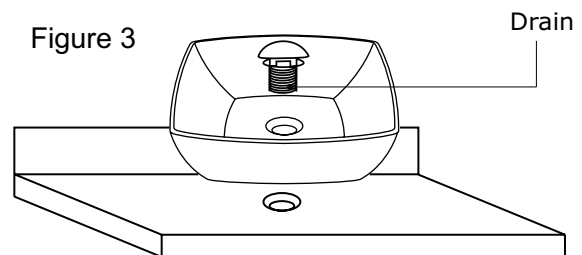

#### Step 4

Attach p-trap to tailpiece.