
VG1006, VG1007 & WC1830

Wallmount Cabinet Installation Guide

(Step 1)

Measure distance between two mounting brackets and transfer measurement to mounting location.

See Figure 1.




Backside of Cabinet

Step 2

Install mounting plates (2) to the wall with provided hardware.

Use proper hollow wall anchors if necessary. (Not provided)

See Figure 2.

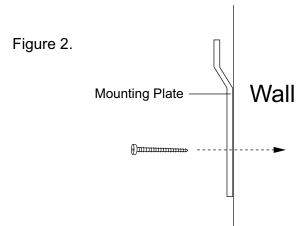


Step 3

Install cabinet to wall. Insuring mounting brackets catch mounting plates.

See Figure 3.



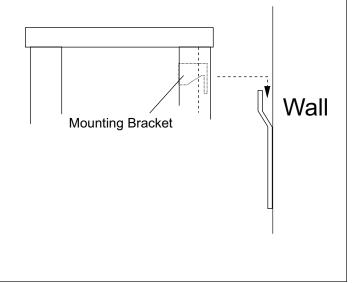

WWW.RONBOW.COM