

Drain Installation Guide


For Stone Sinks without overflow Above Counter

Step 1

Position countertop drain opening to ensure clearance between the lavatory, faucet & backsplash
 Cut 1-3/4" hole for drain in countertop
 See Figure 1.

1

Figure 1.

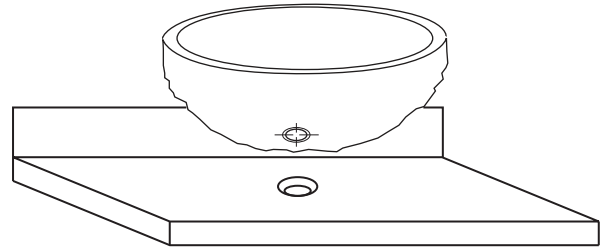


Step 2

See Figure 2.
 Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

*There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead.

2

Figure 2.

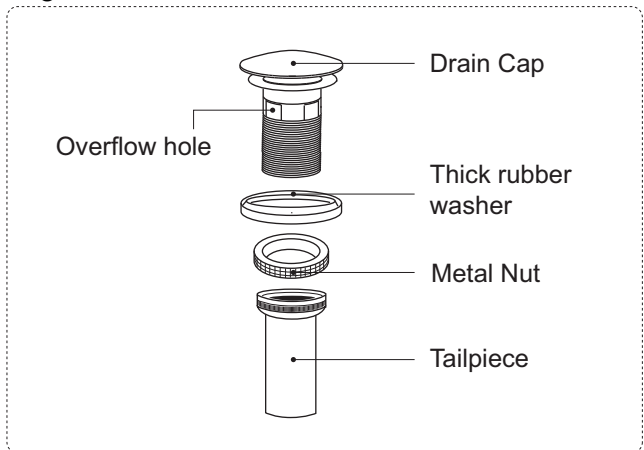


Step 3

See Figure 3
 From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

3

Figure 3.

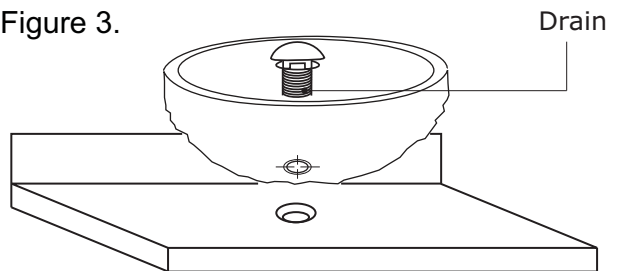

Step 4

Attach p-trap to tailpiece.

4

