

Model: CB5043


For Sinks without overflow above counter

Step 1

Position countertop opening to ensure clearance between the lavatory, faucet and backsplash.

Cut 4" hole in countertop

1

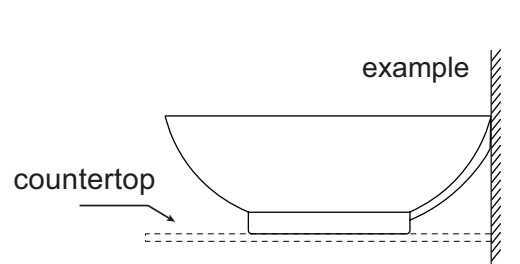


Step 2

Drain assembly picture

Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

*There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead.


2

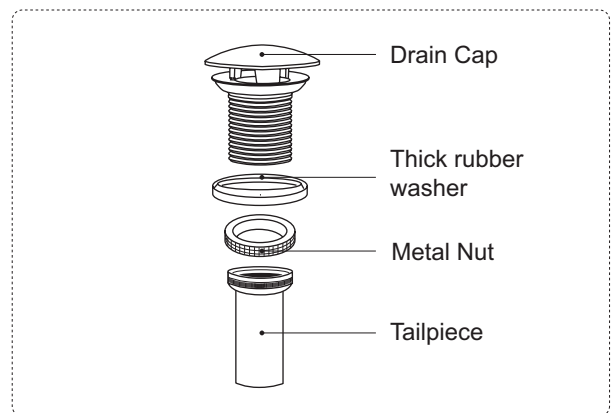

Step 3

From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

3

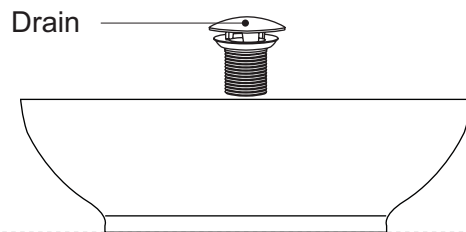

Step 4

Attach p-trap to tailpiece.

4

