
6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

INSTRUCTION SHEET IS-DH1506 STYLE NUMBER: DH1506AN, DH1506PN

ISSUED 11-2008

PACKAGE CONTENTS

Part	Description	Quantity
А	Crossbar	1pc
В	Green Ground Screw	1pc
С	Mounting Screw	2pcs
D	Lock Washer	2pcs
E	Hex Nut (for Mounting Screw)	2pcs
F	Mounting Ball	2pcs
G	Socket Collar	1pc
Н	Socket Collar Tool	1pc
I	6″ Rod	2pcs
J	12" Rod	2pcs
К	Ceiling Canopy	1pc
L	Socket Assembly	1pc
М	Shade	1pc

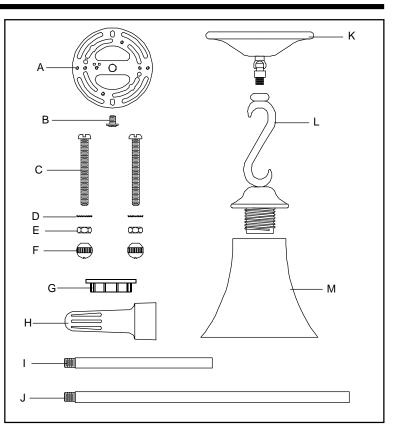

WARNINGS AND CAUTIONS

WARNING :

• Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse. CAUTION :

• These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.

• Disconnect fixture from the power source before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

PREPARATION

• Before beginning installation of product, make sure all parts are present. Compare parts with package and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.


• Estimated Assembly Time : 20 - 30 minutes

• Tools Required for Assembly (not included) : Flathead Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Wire Cutters, Safety Glasses &1,100 Watt, Type - A Medium Base Bulb.

• Helpful Tools (not included) : Wire Strippers.




- a. Determine the Rods to be assembled according to your desired hanging height.
- b. Pass the Supply Wires with Ground Wire through the chosen Rods and then thread Rods and Socket Assembly together as shown. Tighten until snug.

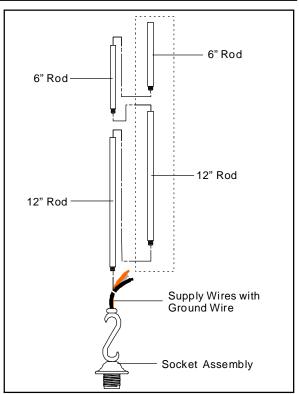




- a. Pass the Supply Wires with Ground Wire through the Swivel and Ceiling Canopy.
- b. Thread the Swivel onto the top end of the Upper Rod and hand tighten until snug.

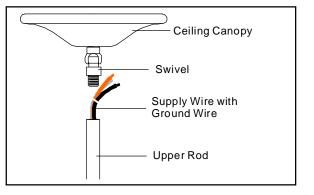


STEP 3:

- a. Screw the Mounting Screws into the Crossbar, place the Lock Washers over the Mounting Screws and thread the Hex Nuts onto the Mounting Screws as shown. Secure the position of the Mounting Screws by tightening the Hex Nuts against the Crossbar.
- b. Secure the Crossbar to the Outlet Box with Outlet Box Screws.

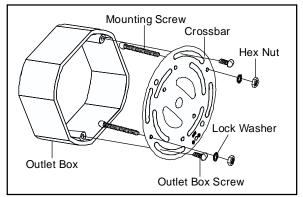


STEP 4:

- * Use Wire Connectors (not supplied) to connect the wires. a. Connect the House Ground Wire to the Fixture Ground
- Wire. b. Connect the House White Wire to the Fixture Supply Wire
- b. Connect the House White Wire to the Fixture Supply Wire (White or Ribbed Side).
- c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
- d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

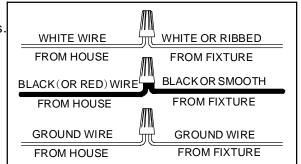

STEP 5:

a. Place the Ceiling Canopy over the Mounting Screws and thread Mounting Balls onto the Mounting Screws to secure it. Hand tighten until snug.

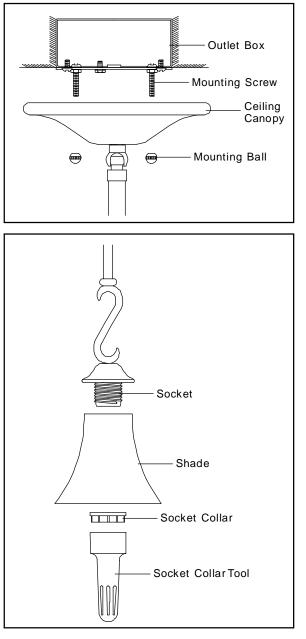

STEP 6:

a. Locate the Shade over the Socket as shown. Using Socket Collar Tool, thread the Socket Collar onto the Socket and hand tighten until snug to secure the Shade.

STEP 7:

a. Install the correct Bulb referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.