


# Anchoring Bolt Instructions

Note : Anchor should be fitted into floor BEFORE safe is bolted down.

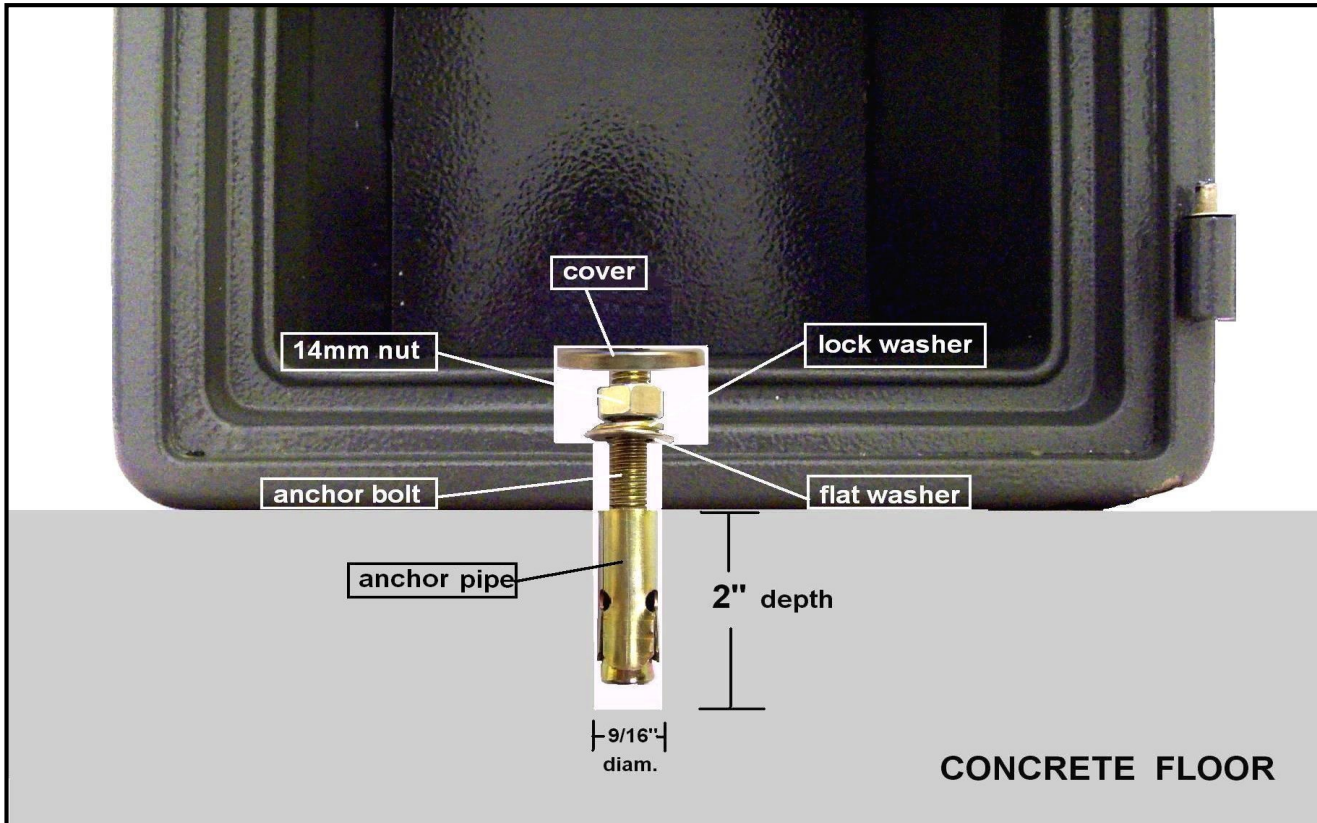

- 1.) Drill 9/16" diameter hole in concrete to a depth of 2 inches.
- 2.) Insert anchoring bolt & pipe into hole
- 3.) Place flat washer & nut on anchoring bolt and tighten (14mm wrench) to allow anchor pipe to expand and secure into floor.
- 4.) Remove nut & washer from anchoring bolt
- 5.) Place safe on top of anchoring bolt thru center hole in bottom of safe.(If your safe has rubber feet you should remove them)
- 6.) Place washer , lock washer & nut on anchoring bolt and tighten.
- 7.) Place cover over hole. (Note : Bolt may need to be cut)