
LIGHTED CORNER CURIO CM0695-GOLDEN OAK CM0696-MAHOGANY Assembly Instructions

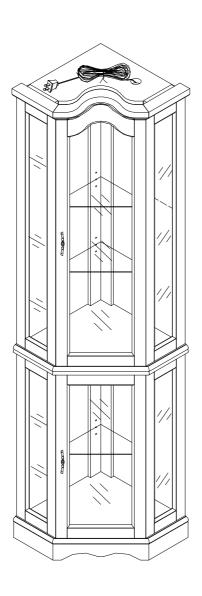

For assistance with assembly contact:
 Southern Enterprises Inc.
Customer Service 1-800-633-5096
 service@seidal.com
 www.seidal.com



PO#12000

LIGHTED CORNER CURIO Parts List


Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below . You may receive extra hardware with your unit.

(1)	Quantity	(2)	Quantity	(3)	Quantity
	Of 6		Of 5		Of 24
FLAT HEAD LONG SCREW		WOOD DOWEL		CAM BOLT	
(4)	Quantity Of 24	(5)	Quantity Of 24	(6)	Quantity Of 31
CAM LOCK		COVER		FLAT HEAD SHORT S	ਹਿੰ CREW
(7)	Quantity Of 5	(8)	Quantity Of 2	(9)	Quantity Of 2
HINGE		MAGNET PLATE		SMALL MACHINE SCREW	
(10)	Quantity Of 2	(11)	Quantity Of 2	(12)	Quantity Of 72
METAL PLATE		HANDLE		ROUND HEAD SCREW	
(13)	Quantity Of 2	(14)		(15)	Quantity Of 15
MAGNET		LARGE MACHINE SCREW		SHELF SUPPORT	
(16) METAL SHADE	Quantity Of 1	(17)	Quantity Of 1	TILTING PREVENT HA	

LIGHTED CORNER CURIO Parts List


Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage.

Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below . You may receive extra hardware with your unit.

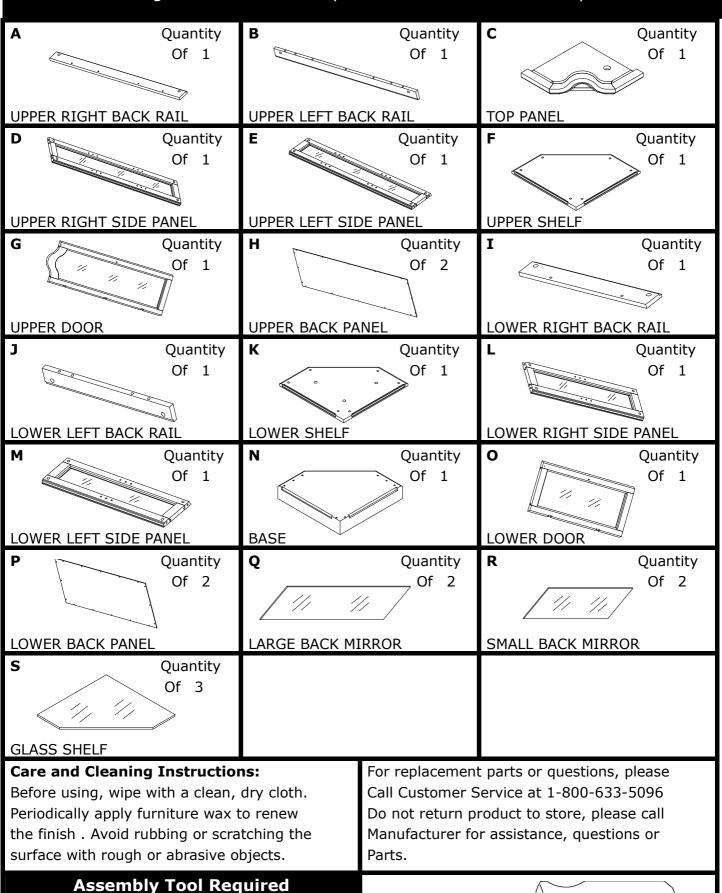


No.2 Phillips Screwdriver (Not Included)

LIGHTED CORNER CURIO Assembly Instructions

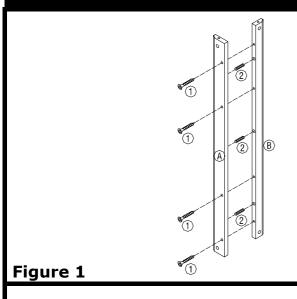


INSERT WOOD DOWELS (2) INTO PREDRILLED HOLES ON EDGE OF UPPER LEFT BACK RAIL (B) AND FIT INTO CORRESPONDING HOLES ON UPPER RIGHT BACK RAIL (A). INSERT FLAT HEAD LONG SCREWS (1) THROUGH PREDRILLED HOLES ON UPPER RIGHT BACK RAIL (A) AND TIGHTEN INTO CORRESPONDING HOLES ON UPPER LEFT BACK RAIL (B). AS SHOWN IN FIGURE 1

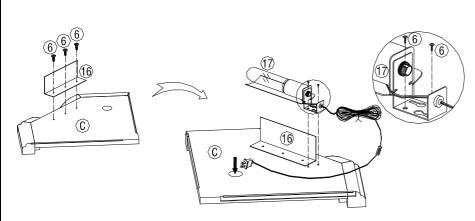


INSERT FLAT HEAD SHORT SCREWS (6)
THROUGH METAL SHADE (16) AND
TIGHTEN INTO PREDRILLED HOLES ON
UNDERSIDE OF TOP PANEL (C).
INSERT FLAT HEAD SHORT SCREWS (6)
THROUGH THE HOLDER OF LIGHT (17)
AND TIGHTEN INTO PREDRILLED
HOLES ON UNDERSIDE OF TOP PANEL
(C). LEAD THE POWER CORD ON THE
LIGHT (17) THROUGH THE HOLE ON
TOP PANEL (C) TO UPSIDE OF TOP
PANEL (C). AS SHOWN IN FIGURE 2.

Figure 2

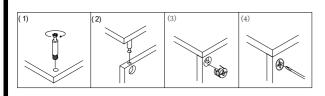


"Please do not over tighten cambolts.
Please stop when you feel tight"

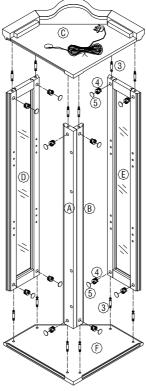

TIGHTEN CAM-BOLTS (3) INTO PREDRILLED HOLES ON UPSIDE OF UPPER SHELF (F) AND FIT INTO CORRESPONDING HOLES ON BOTTOM EDGES OF PARTS (A, B, D, E). INSERT CAM-LOCKS (4) INTO BIG HOLE ON PARTS (A, B, D, E) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (4) CLOCKWISE TO SECURE CAM-BOLTS (3). PUSH COVERS (5) INTO CAM-LOCKS (4). ASSEMBLE TOP PANEL (C) IN SAME MANNER, AS SHOWN IN FIGURE 3.

Figure 3

LIGHTED CORNER CURIO Assembly Instructions

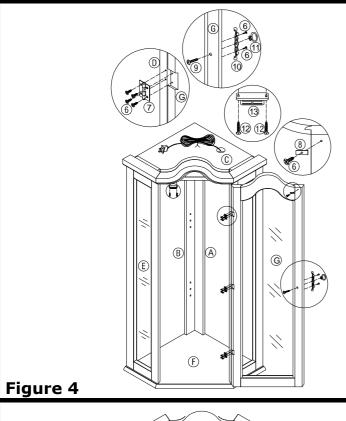

INSERT FLAT HEAD SHORT SCREW (6) THROUGH MAGNET PLATE (8) AND TIGHTEN INTO PREDRILLED HOLE ON UPPER DOOR (G). INSERT FLAT HEAD SHORT SCREWS (6) THROUGH METAL PLATE (10) AND TIGHTEN INTO PREDRILLED HOLES ON UPPER DOOR (G). INSERT SMALL MACHINE SCREW (9) THROUGH PREDRILLED HOLES ON UPPER DOOR (G), METAL PLATE (10) AND TIGHTEN INTO HANDLE (11). INSERT FLAT HEAD SHORT SCREWS (6) THROUGH THE HOLES ON HINGES (7) AND TIGHTEN INTO PREDRILLED HOLES ON EDGES OF UPPER RIGHT SIDE PANEL (D) AND UPPER DOOR (G). INSERT ROUND HEAD SCREWS (12) THROUGH END OF MAGNET (13) AND TIGHTEN INTO PREDRILLED HOLES ON UNDERSIDE OF TOP PANEL (C). AS SHOWN IN FIGURE 4.


PLEASE BE CAREFULLY ATTACH
LARGE BACK MIRRORS (Q) INTO
GROOVES OF PARTS (A, B, C, D,
E, F), AND ATTACH UPPER BACK
PANELS (H) INTO SLOTS OF REAR
EDGES OF PARTS (A, B, C, D, E,
F). INSERT ROUND HEADSCREWS
(12) THROUGH PREDRILLED
HOLES ON UPPER BACK PANELS
(H) AND TIGHTEN INTO
CORRESPONDING HOLES ON
REAR EDGES OF PARTS (A, B, C,
D, E, F). AS SHOWN IN FIGURE 5.

Figure 6

Figure 5


INSERT WOOD DOWELS(2) INTO PREDRILLED HOLES ON EDGE OF LOWER LEFT BACK RAIL(J) AND FIT INTO CORRESPONDING HOLES IN LOWER RIGHT BACK RAIL(I).INSERT FLAT HEAD LONG SCREWS(1) THROUGH PREDRILLED HOLES ON LOWER RIGHT BACK RAIL(I) AND TIGHTEN INTO CORRESPONDING HOLES ON LOWER LEFT BACK RAIL(J).AS SHOWN IN FIGURE(6).

LIGHTED CORNER CURIO **Assembly Instructions**

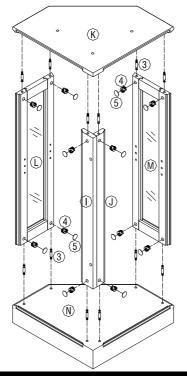

TIGHTEN CAM-BOLTS (3) INTO PREDRILLED HOLES ON UPSIDE OF BASE (N) AND FIT INTO CORRESPONDING HOLES ON **BOTTOM EDGES OF PARTS** (I,J,L,M). INSERT CAM-LOCKS(4) INTO BIG HOLE ON PARTS(I,J,L,M) WITH SLOT FOR SCREWDRIVER FACING **OUTWARD.ROTATE CAM-LOCKS** (4) CLOCKWISE TO SECURE CAM-BOLTS(3).PUSH COVERS (5) INTO CAM-LOCKS(4).ASSEMBLE LOWER SHELF(K) IN SAME MANNER.AS SHOWN IN FIGURE

Figure 7

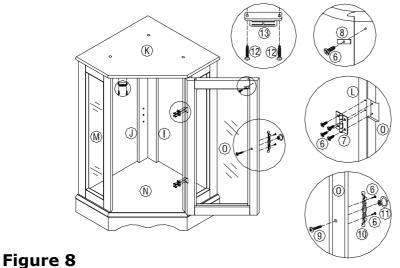

INSERT FLAT HEAD SHORT SCREW (6) THROUGH MAGNET PLATE (8) AND TIGHTEN INTO PREDRILLED HOLE ON LOWER DOOR (O). INSERT FLAT HEAD SHORT SCREWS(6) THROUGH METAL PLATE(10) AND TIGHTEN INTO PREDRILLED HOLES ON LOWER DOOR(O) .INSERT SMALL MACHINE SCREW(9) THROUGH PREDRILLED HOLES ON LOWER DOOR(O), METAL PLATE (10) AND TIGHTEN INTO HANDLE(11).

INSERT FLAT HEAD SHORT SCREWS(6) THROUGH THE HOLES ON HINGES(7) AND FIGHTEN INTO PREDRILLED HOLES ON EDGES OF LOWER RIGHT SIDE PANEL(L) AND LOWER DOOR(O).INSERT ROUND HEAD SCREWS(12) THROUGH END OF MAGNET(13) AND TIGHTEN INTO PREDRILLED HOLES ON UNDERSIDE OF LOWER SHELF(K). AS SHOWN IN FIGURE8.


(K)

(P)

PLEASE BE CAREFULLY ATTACH SMALL BACK MIRROR(R) INTO **GROOVES OF** PARTS(I,J,K,L,M,N),AND ATTACH LOWER BACK PANELS(P) INTO SLOTS OF REAR EDGES OF PARTS(I,J,K,L,M,N).INSERT ROUND HEADSCREWS(12) THROUGH PREDRILLED HOLES ON LOWER BACK PANELS(P) AND TIGHTEN INTO CORRESPONDING HOLES ON REAR EDGES OF PARTS(I,J,K,L,M,N).AS SHOWN IN FIGURE 9.


Figure 9

LIGHTED CORNER CURIO Assembly Instructions

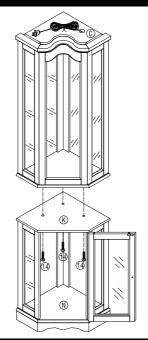


WITH AN ASSISTANT, PLACE
UPPER CABINET ONTO LOWER
CABINET, AND TIGHTEN LARGE
MACHINE SCREWS (14)
THROUGH PREDRILLED HOLES
ON LOWER SHELF (K) INTO
THREADED HOLES ON
UNDERSIDE OF UPPER SHELF (F).
AS SHOWN IN FIGURE 10.

Figure 10

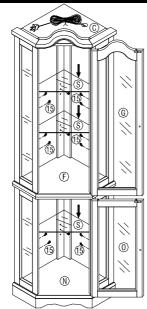


FIT SHELF SUPPORTS (15) INTO PREDRILLED HOLES ON INSIDE OF PARTS (A, B, D, E, I, J, L, M), AND PUT GLASS SHELVES (S) ON EACH SHELF SUPPORTS (15). AS SHOWN IN FIGURE 11.

Figure 11

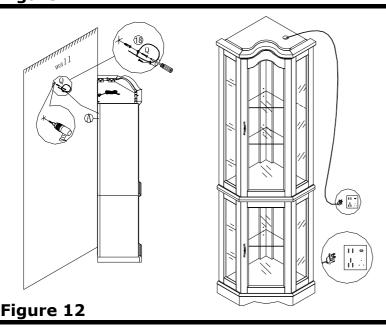

FIT THE PLUG TO THE
APPROPRIATE POWER SOURCE
AND THE LIGHT IS READY TO BE
LIT. TURN THE LIGHT **ON** AND **OFF** BY TURNING THE SWITCH
ON THE SIDE OF LIGHT FIXTURE.
AS SHOWN IN FIGURE 12.

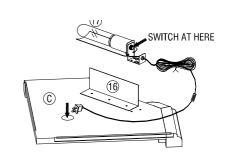

Parts Replacement Form						
Customer Information	1					
Name						
Address						
City/State/Zip Code						
Phone Number						
Please indicate where	you purchased this item: S	itore/Website/Catalog				
-						
Please indicate color/s	size/style number:					
Style No	Parts Letter	Parts Description	Quantity Needed			

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096 service@seidal.com Southern Enterprises, Inc. 600 Freeport Parkway, Suite 200 Coppell, Texas 75019

WARNING:

- USE THE PROPER BULB AND THE PROPER POWER SUPPLY LABELED ON THE LAMP HOLDER.
- THIS PRODUCT CAN ONLY BE USED INDOORS.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- DO NOT USE SEASONAL PRODUCTS OUTDOORS UNLESS MARKED SUITABLE FOR INDOOR AND OUTDOOR USE. WHEN PRODUCTS ARE USED IN OUTDOOR APPLICATIONS, CONNECT THE PRODUCT TO A GROUND FAULT CIRCUIT INTERRUPTING (GFCI) OUTLET. IF ONE IS NOT PROVIDED, CONTACT A QUALIFIED ELECTRICIAN FOR PROPER INSTALLATION.
- THIS SEASONAL USE PRODUCT IS NOT INTENDED FOR PERMANENT INSTALLATION OR USE.
- DO NOT MOUNT OR PLACE NEAR GAS OR ELECTRIC HEATERS, FIREPLACE, CANDLES OR OTHER SIMILAR SOURCES OF HEAT.
- DO NOT OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED OR WHERE OXYGEN IS BEING ADMINISTERED.
- DO NOT LET LAMPS REST ON THE SUPPLY CORE OR ON ANY WIRE.
- UNPLUG THE PRODUCT WHEN LEAVING THE HOUSE, WHEN RETIRING FOR THE NIGHT, OR IT LEFT UNATTENDED.
- CLOSE SUPERVISION IS NECESSARY WHEN THIS APPLIANCE IS USED BY, OR NEAR
- CHILDREN, INVALIDS, OR DISABLED PERSONS.
- USE THIS APPLIANCE ONLY FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.
- DO NOT HANG ORNAMENTS OR OTHER OBJECTS FORM CORD, WIRE, OR LIGHT STRING.
- NEVER OPERATE THE APPLIANCE IF IT HAS A DAMAGED CORD OR PLUG, IF IT IS NOT
- WORKING PROPERLY, IF IT HAS BEEN DROPPED OR DAMAGED. RETURN THE FURNISHING TO A SERVICE CENTER FOR REPAIR.
- TO DISCONNECT, TURN ALL CONTROLS TO THE OFF POSITION, THEN REMOVE PLUG FROM OUTLET.
- READ AND FOLLOW ALL INSTRUCTIONS THAT ARE ON THE PRODUCT OR PROVIDED WITH THE PRODUCT.
- BEFORE USING OR REUSING, INSPECT PRODUCT CAREFULLY. DISCARD ANY PRODUCTS THAT HAVE CUT, DAMAGED, OR FRAYED WIRE INSULATION OR CORDS, CRACKS IN THE LAMP HOLDERS OR ENCLOSURES, LOOSE CONNECTIONS, OR EXPOSED COPPER WIRE.
- WHEN STORING THE PRODUCT, CAREFULLY REMOVE THE PRODUCT FROM WHEREVER IT IS PLACED, INCLUDING TREES, BRANCHES, OR BUSHES, TO AVOID ANY UNDUE STRAIN OR STRESS ON THE PRODUCT CONDUCTORS, CONNECTIONS AND WIRES.
- WHEN NOT IN USE, STORE NEATLY IN A COOL, DRY LOCATION PROTECTED FROM SUNLIGHT.

SAVE THESE INSTRUCTIONS