



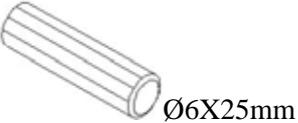







STYLE NO. MS1367


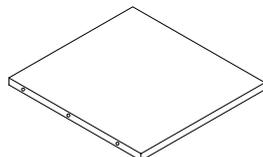
SOUTHERN ENTERPRISES INC.


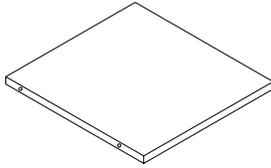

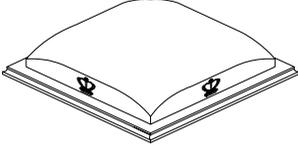

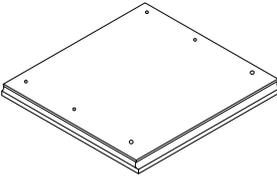
PHONE BOOTH MEDIA CABINET

RELAX...If you can follow a few easy, step-by-step directions in order .YOU CAN ASSEMBLE THIS ITEM.

PLEASE FIND HARDWARE IN RED POLYBAG BEFORE DISCARDING PACKING MATERIAL.

HARDWARE LIST			
(1) WOOD DOWEL  Ø6X25mm	20PCS	(7) MACHINE SCREW  Ø5/32"x19mm	1PC
(2) CAM-BOLT 	12PCS	(8) WOOD KNOB 	1PC
(3) CAM-LOCK 	12PCS	(9) MAGNET 	1PC
(4) COVER 	12PCS	(10) HINGE 	2PCS
(5) SHORT PAN HEAD WOOD SCREW  Ø3x10mm	18PCS	(11) FLAT HEAD WOOD SCREW  Ø3x12mm	12PCS
(6) LONG PAN HEAD WOOD SCREW  Ø3x12mm	2PCS		

PARTS LIST			
(A) LEFT SIDE PANEL 	1PC	(E) SHELF 	2PCS

(B) RIGHT SIDE PANEL 	1PC	(F) SHELF 	2PCS
(C) DOOR PANEL 	1PC	(G) TOP 	1PC
(D) BACK PANEL 	1PC	(H) BASE 	1PC

ASSEMBLY INSTRUCTION

1. SELECT A SMOOTH, SOFT SURFACE TO PREVENT SCRATCHING FINISH.
2. YOU MAY NEED A PHILLIP SCREWDRIVER.
3. INSERT WOOD DOWELS (1), CAM-BOLTS (2) INTO PREDRILLED HOLES ON INSIDE OF LEFT AND RIGHT SIDE PANELS (A, B) AND FIT INTO CORRESPONDING HOLES ON ENDS OF SHELVES (E, F). INSERT CAM-LOCKS (3) INTO BIG HOLES ON UNDERSIDE OF SHELVES (E) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (3) CLOCKWISE TO SECURE CAM-BOLTS (2). PUSH COVERS (4) INTO CAM-LOCKS (3). AS FIGURE 1 SHOWN.
4. INSERT WOOD DOWELS (1), CAM-BOLTS (2) INTO PREDRILLED HOLES ON UPSIDE OF BASE (H). WITH AN ASSISTANT, INSERT WOOD DOWELS (1) AND CAM-BOLTS (2) EXTENDING FROM BASE (H) INTO CORRESPONDING HOLES ON BOTTOM EDGES OF LEFT AND RIGHT SIDE PANELS (A, B). INSERT CAM-LOCKS (3) INTO BIG HOLES ON INSIDE OF LEFT AND RIGHT SIDE PANELS (A, B) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (3) CLOCKWISE TO SECURE CAM-BOLTS (2). PUSH COVERS (4) INTO CAM-LOCKS (3). AS FIGURE 2 SHOWN.
5. INSERT WOOD DOWELS (1), CAM-BOLTS (2) INTO PREDRILLED HOLES ON UNDERSIDE OF TOP (G) AND FIT INTO CORRESPONDING HOLES ON TOP EDGES OF LEFT AND RIGHT SIDE PANELS (A, B). INSERT CAM-LOCKS (3) INTO BIG HOLES ON INSIDE OF LEFT AND RIGHT SIDE PANELS (A, B) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (3) CLOCKWISE TO SECURE CAM-BOLTS (2). PUSH COVERS (4) INTO CAM-LOCKS (3). AS FIGURE 2 SHOWN.
6. INSERT LONG PAN HEAD WOOD SCREWS (6) THROUGH ENDS OF MAGNET (9) AND TIGHTEN INTO PREDRILLED HOLES ON UNDERSIDE OF TOP (G). AS FIGURE 2 AND INSET SHOWN.

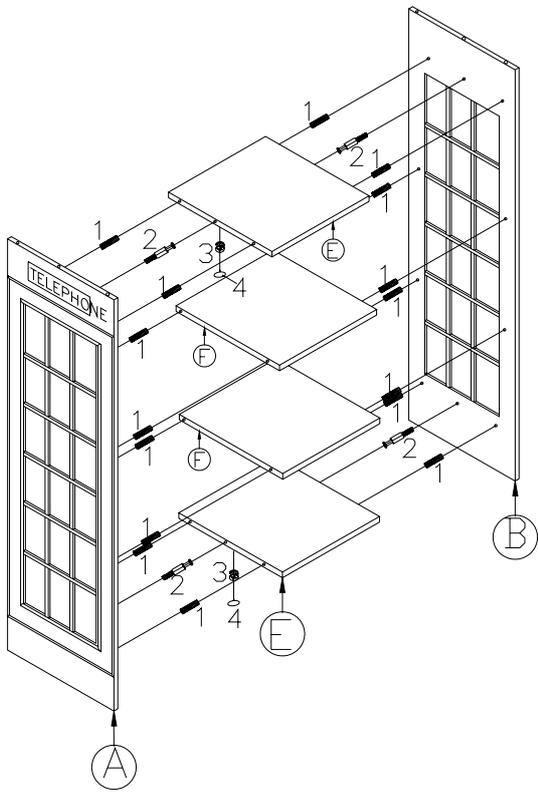


FIGURE 1

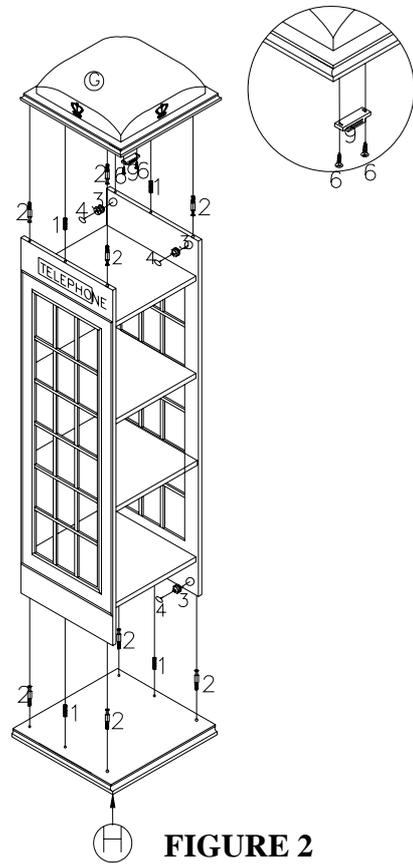


FIGURE 2

7. ATTACH BACK PANEL (D) INTO SLOTS OF PARTS (A, B, G, H). INSERT SHORT PAN HEAD WOOD SCREWS (5) THROUGH PREDRILLED HOLES ON BACK PANEL (D) AND TIGHTEN INTO CORRESPONDING HOLES ON REAR EDGES OF PARTS (A, B, E, F, G, H). AS FIGURE 3 SHOWN.
8. INSERT MACHINE SCREW (7) THROUGH PREDRILLED HOLES ON BACK OF DOOR PANEL (C) AND TIGHTEN INTO THREADED HOLE OF WOOD KNOB (8). INSERT FLAT HEAD WOOD SCREWS (11) THROUGH PREDRILLED HOLES OF HINGES (10) AND TIGHTEN INTO CORRESPONDING HOLES ON RIGHT SIDE PANEL (B) AND DOOR PANEL (C). AS FIGURE 4 SHOWN.

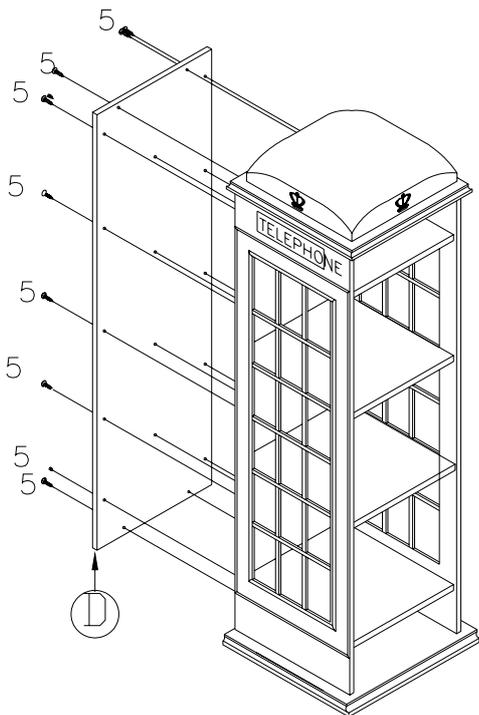


FIGURE 3

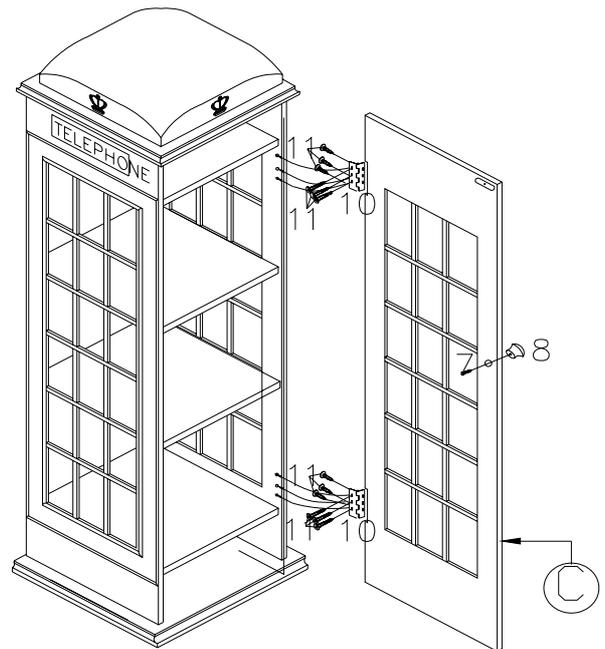


FIGURE 4

YOUR NEW PHONE BOOTH MEDIA CABINET IS FINISHED AND READY TO USE.

Please count, identify and compare parts and hardware list to be sure all parts are present. It may help to divide parts and label them to correspond with part list. Extra hardware may be included. If any items are missing, please contact our parts/service department at (800) 633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time. Missing or damaged hardware and/ or parts will be replaced free of charge. WE DO NOT SELL PARTS. WE DO NOT RECOMMEND MODIFYING PRODUCT(S) AND WE ARE NOT RESPONSIBLE FOR ANY DAMAGES DUE TO PRODUCT MODIFICATION(S). If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled.

"We will ship parts if available" "This is not a warranty"

PARTS REPLACEMENT FORM			
STYLE NO: MS1367			
Customer Name	PARTS LETTER	PART DESCRIPTION	QUANTITY NEEDED
Street, City, State, Zip			
Phone#			
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div style="border-bottom: 1px solid black; width: 80%;"></div> </div>			
Please indicate where you purchased this item.			
Store/website/catalog			
/ /			
Please indicate color/size/style number			
/ /			
SOUTHERN ENTERPRISES INC. P.O. Box 59996 Dallas, Texas 75229			