
ASSEMBLY INSTRUCTIONS FOR F2076/6

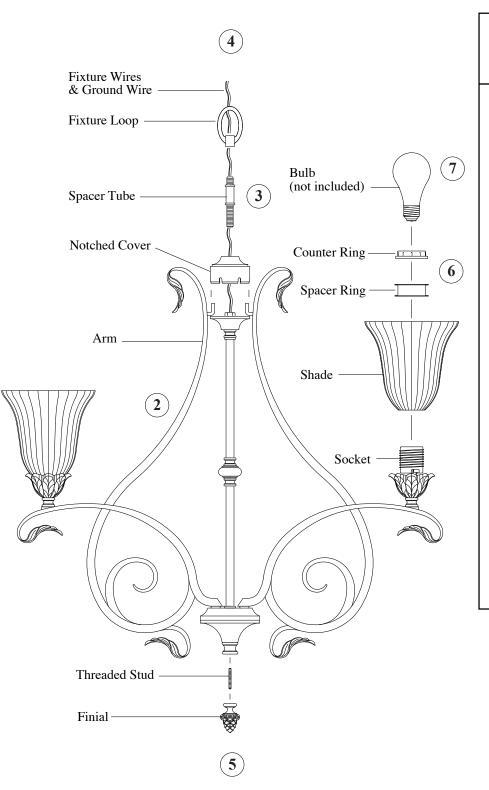

Α

R

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

- 1. Carefully remove all parts from box and remove wrappings. NOTE: DO NOT YET REMOVE WRAPPINGS SURROUNDING ARMS. Carefully lay parts on a non-abrasive surface and identify all parts before assembly. Bulb not included.
- **2.** Spread open all arms so they are equally spaced apart to each other.
- A. While one person holds top section of arms neatly bunched together, slip notched cover from above and secure all L shaped pins inside of it's notches.
 B. Remove all wrappings from arms.
 C. Screw the long threaded end of spacer tube through the notched cover. Then secure all together by fastening fixture loop from above.
- **4.** Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- **5.** Install threaded stud into finial. Then fasten finial by screwing onto bottom of fixture.
- **6.** Place shade over threaded socket then spacer ring and secure with counter ring.
- 7. Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage.

©MURRAY FEISS IMPORT LLC.

A Quality Home Brands Company®