


Assembly Instructions For

P1178

(E) 5/29/09

	1	2	3	4	5	6	7	8
				12mm	14mm	18mm	22mm	26mm
Require	x 1	x 6	x 6	/	/	/	/	/
Extra	1	1	1	6	4	4	4	2


Extra PIN Qty.	PIN PART	PIN DESCRIPTION
4		Rectangular Crystal Hook
4		S Hook
8		Small Bead Hook
4		Used on # 4
12		Used on # 5, 6, 7, 8

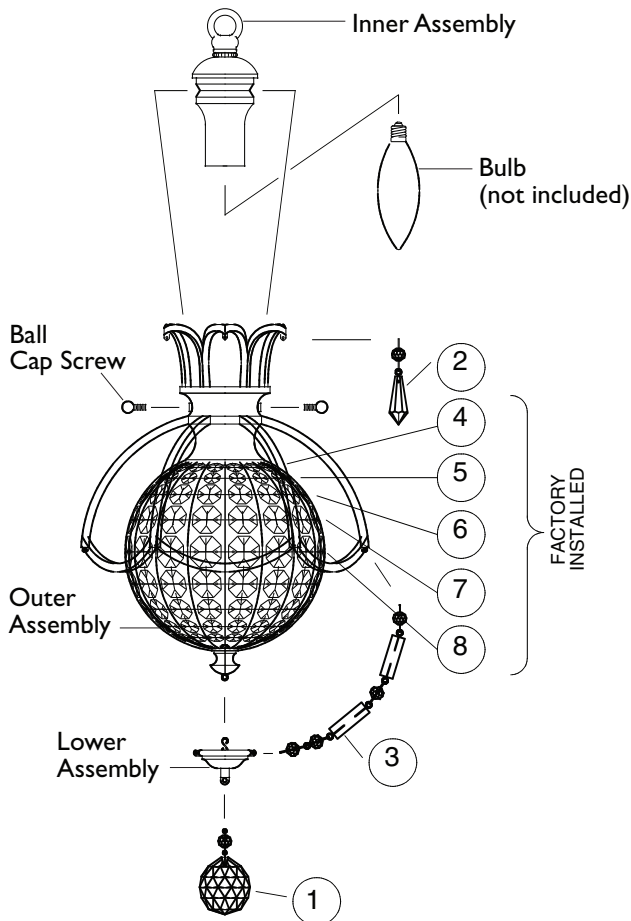

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one. **IMPORTANT: WHEN FOLLOWING SUPPLEMENT INSTRUCTIONS STEP #6, MAKE CERTAIN TO SLIDE DECORATIVE BOBECHE (IN BETWEEN COLLAR RING AND CANOPY) DOWN THE CHAIN.** See above illustration.
2. Install candelabra base, of 60 Watt maximum bulb (not included).
3. Slip outer assembly through inner assembly, and secure them at top section by fastening with ball cap screws.
4. Install lower assembly by hooking onto finial. **NOTE: Bend tight open hook in order to prevent from getting loose.**
5. Hang all crystal glass parts as shown on drawing. **NOTE:**
 - A. For easier installation of crystal chains #3, hook all chains first onto the lower assembly and then proceed to hook onto the outer assembly.
 - B. To replace broken crystal or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.



**MURRAY
FEISS**
Generation Brands™