
## WB1280, WB1281

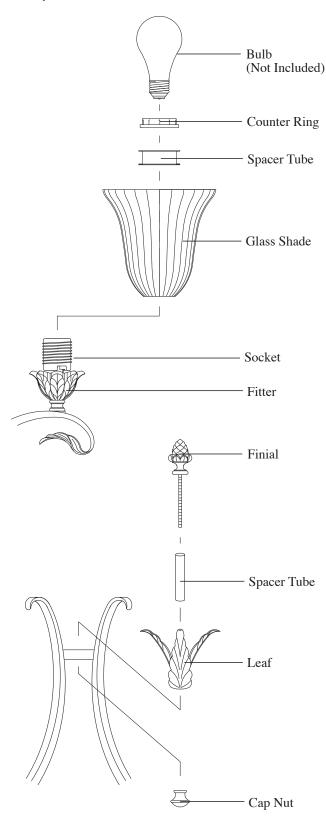

## IMPORTANT: TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

- **1.** Carefully unpack and identify all parts before assembly. Bulbs are not included.
- 2. Before proceeding below instructions follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto wall outlet box.
- **3.** Remove counter ring and spacer tube from socket. Set them aside.
- **4.** Install glass shade onto fitter and lock into position by installing the spacer tube and counter ring back onto the socket.
- **5.** Install light bulb (not installed). See relamping label at socket area for type and maximum allowed wattage.

## 6. WB1281 ONLY:

Install finial and leaf onto fixture as shown at illustration.

WB1281 ONLY

©MURRAY FEISS IMPORT LLC.

A Quality Home Brands Company®