
ASSEMBLY INSTRUCTIONS FOR WB1310

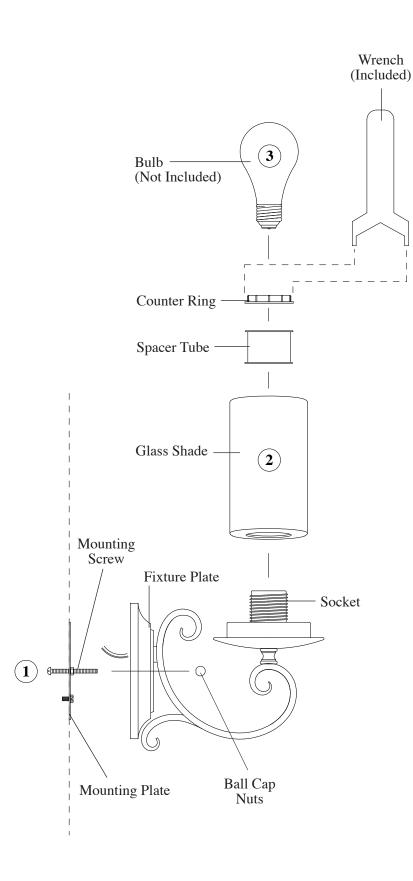

IMPORTANT: TURN OFF POWER AT MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

- Before proceeding below instructions follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto wall outlet box.
- **2.** Place shade over threaded socket and then the spacer tube and secure all with counter ring, using supplied wrench.
- **3.** Install light bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.

©MURRAY FEISS IMPORT LLC.

R R A Y

A Generation Brands Company®

F

E