


Assembly Instructions For


OL6001 (E) 10/07

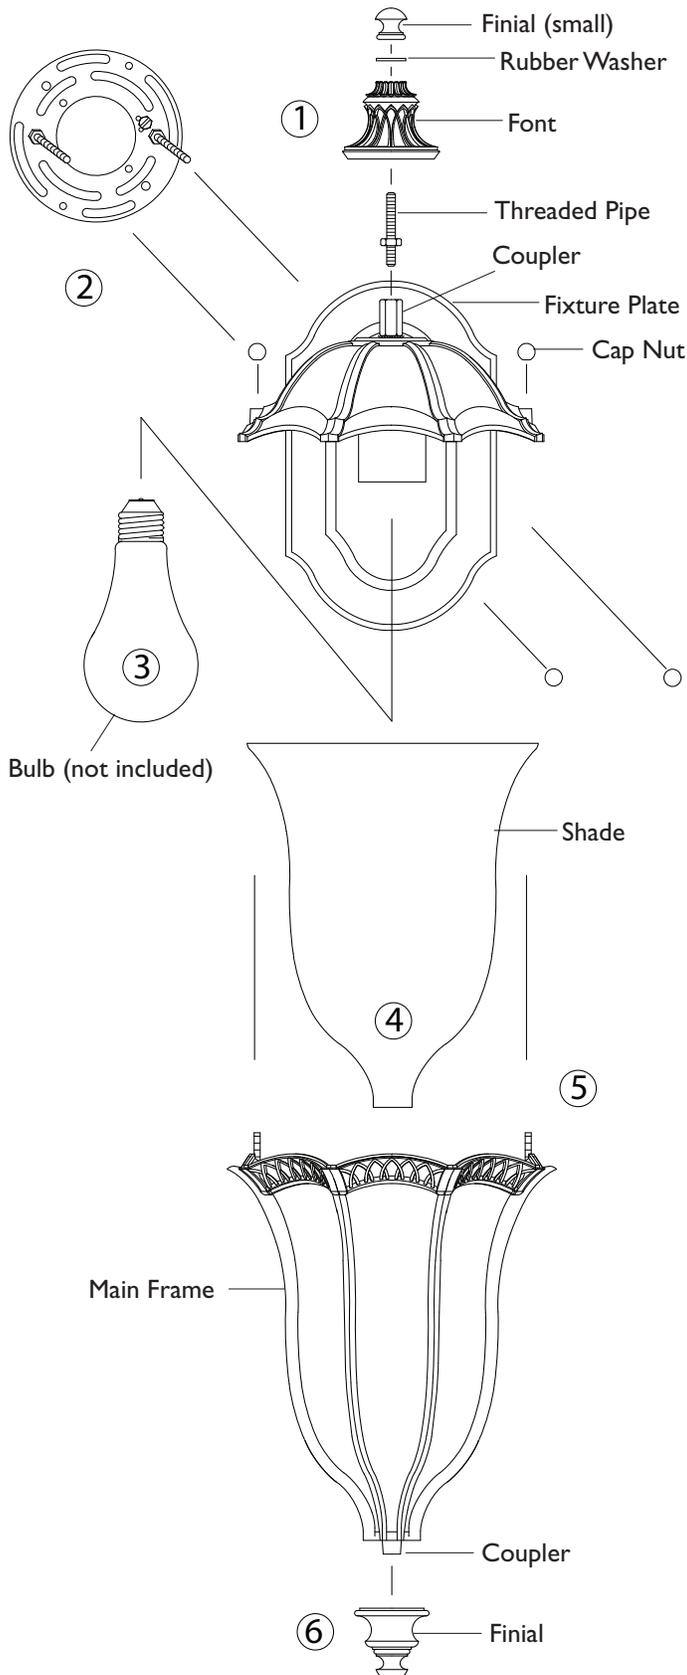

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.
 Bulbs not included.

1. A. Install a hex nut onto one end of threaded pipe leaving about 3/8" (10 mm) thread exposed.
 B. Screw same end of threaded pipe into coupler. Tighten hex nut.
 C. Slide font through threaded pipe until checks onto roof. Lock them into position by fastening with rubber washer and finial.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
3. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.
4. Gently place glass shade inside of main frame.
5. Install main frame onto roof by fastening with ball cap nuts onto the two protruding threaded studs.
6. Install finial by screwing onto coupler.

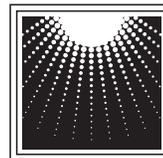

MURRAY
F E I S S

Generation Brands™