


Assembly Instructions For


SF246 (E) 10/07

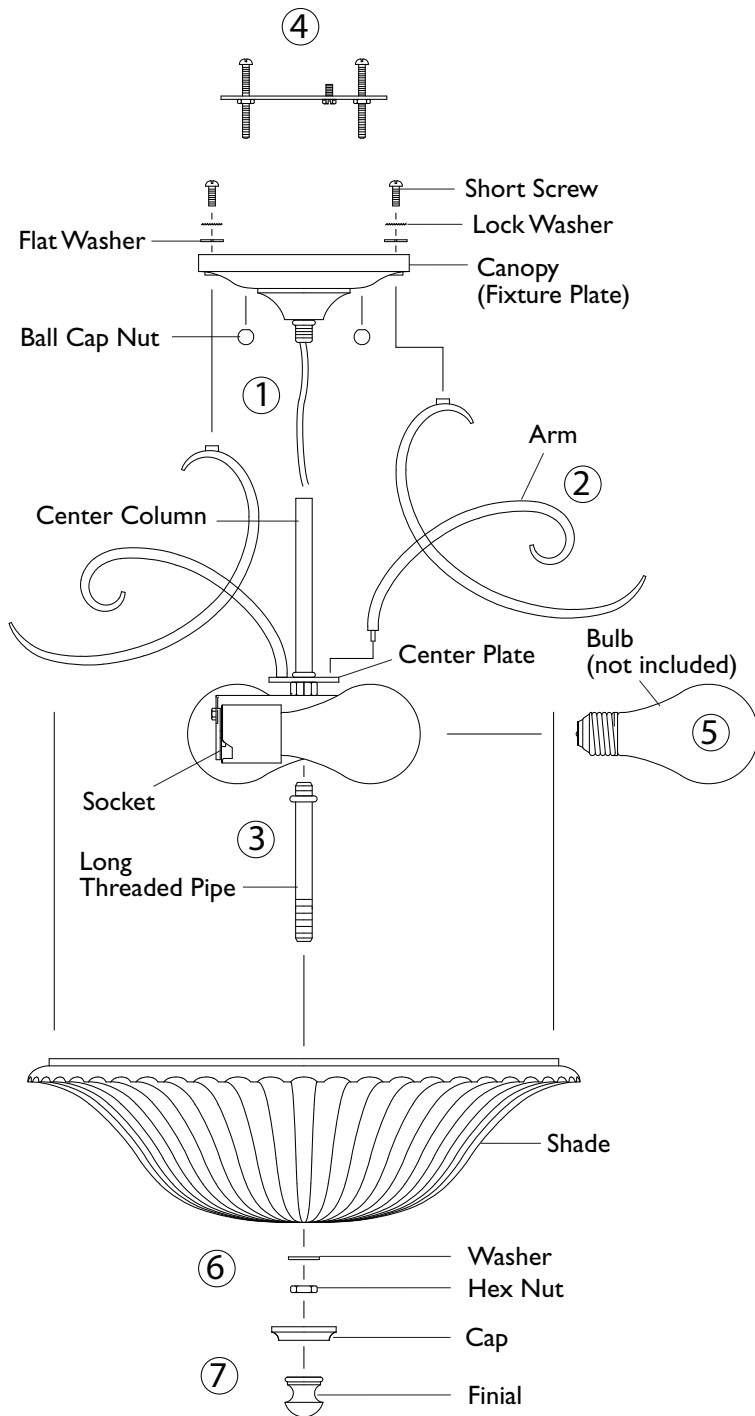

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Install Center Column by screwing securely into fixture plate.
2. A. Take one arm and insert bottom section of arm into a hole in center plate. Then fasten top section of arm onto canopy using flat washer, lock washer, and short screws.
 B. Repeat other arms.
 C. Make certain arms are aligned straight. If not, while holding onto center plate turn canopy until they are aligned.
3. Screw the long threaded pipe into coupler located at bottom of socket assembly. Note correct position of threaded pipe at illustration.
4. Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto ceiling outlet box.
5. Install bulbs (not included). See relamping label located at socket area for type and maximum allowed wattage.
6. Slide glass shade through the long threaded pipe till it rests onto bottom section of arms. Secure in position by fastening with a washer and a hex nut. Do not over tighten.
7. Slip cap and fasten finial onto threaded pipe.

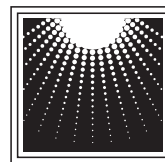

MURRAY
F E I S S

Generation Brands™